



UCAN

FASTENING PRODUCTS

BUILDING LASTING CONNECTIONS

Pages

DRILLING & CHISELING

- ULTRAPLUS® Four Cutter Bits
- SDS Plus Bits
- ULTRAMAX® SDS Max Bits
- Dustless Vacuum Bits
- Core Bits
- Straight Shank Bits
- SDS Plus / SDS Max Chisels
- Ti-Awl® Diamond Core Bits
- Drill Adapters & Accessories



1 - 6

ADHESIVE ANCHORING

- FLO-ROK® Cartridges & Accessories
- CRACKFAST Crack Repair Kit
- Rockite®
- Rod Accessories



6 - 8

STRUCTURAL ANCHORING


- Precast Anchors
- Hex Coupling Nuts
- Tie Wire Anchors
- Wedge Anchors
- TORPEDO® Bolts
- Heavy Load Anchors
- Drop-in Anchor and Accessories



9 - 13

MASONRY ANCHORING

- Lag Shields
- Single / Double Expansion Shields
- Sleeve Anchors
- Renovation Anchor
- U-Drive Anchors & Accessories
- Zamac Pinbolts
- Nylon Pin Bolts
- Drive Screw Anchors
- Insulation Fasteners
- SCRU-IT Anchor & Accessories
- Plastic Plugs
- Alex Plugs
- Lead Anchors
- MUN Nylon Plugs



13 - 19

HOLLOW WALL ANCHORING

- Metal Hollow Wall Anchors
- TWISTER® Anchors
- Toggle Bolts
- Nylon Toggle Anchors



19 - 20

DIRECT FASTENING

- Low Velocity Tools and Accessories
- Power Loads
- Pins and Studs
- PAT Insulation Fasteners




21 - 23

SCREWDRIVER ACCESSORIES

- Screwdriver Accessories

METAL SCREWS AND ACCESSORIES

- U-DRILLS Self Drilling Screws
- U-DRILLS Self Tapping Screws
- Cement Board Screws
- Eye Lag Screw
- U-DRILLS Super Paks*
- Bonded EPDM Washers

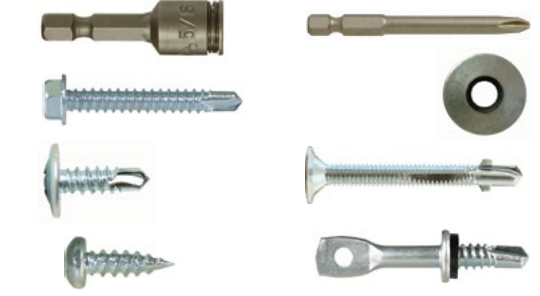

24 - 30

***SUPER PAKS**

GREAT FOR TRADESMEN Super Pak Jars have a large 3-1/4" diameter opening, with a secure screw-on lid to prevent spillage. They are made of a durable crystal clear plastic so that the contents are easy to identify. Super Pak fits most service truck racking and is not too large for many tool boxes.



MASONRY ANCHORS

- Plastic Plugs
- Zamac Pin Bolts
- Nylon Pin Bolts

HOLLOW WALL ANCHORS

- Zamac TWISTER®
- Nylon TWISTER®

METAL FASTENERS OVER 50 SIZES

- Self Drilling Screws
- Sharp Point Self Tapping Screws

31 - 32

SIZES SHOWN IN RED ARE NEW STOCK ITEMS.

mm SIZES SHOWN IN GREEN ARE TRUE METRIC DIN STANDARD. OTHER METRIC SIZES SHOWN ARE METRIC CONVERSION SIZES.



TECHNICAL DATA

33 - 34

UCAN PRODUCTS ARE SUPPLIED EXCLUSIVELY BY DISTRIBUTORS COAST TO COAST. PRICES SHOWN ARE SUBJECT TO ALL APPLICABLE SALES TAXES. ALL WEIGHTS ARE SHOWN IN POUNDS (lb).

ULTRAMAX® PREMIUM SDS MAX


- ULTRAMAX®**
- Ultra fast drilling
 - Extra long life in concrete
- PREMIUM SDS MAX**
- Drills natural stone

ULTRAMAX® Premium SDS MAX Drill Bit with four-cutter carbide tip provide superior performance in reinforced steel, rock, masonry and granite, and extra long life in concrete compared to our regular sds plus bit. Improved fluting reduces friction and accelerates dust removal. Will cut through rebar up to M10.



Part No.	Diameter		Overall	Length (in)	Usable
	(in)	(mm)			
MAX 1213	1/2 ANSI	13	13	8	8
MAX 1221	1/2 ANSI	13	21	16	16
MAX 91621	9/16 ANSI	14	21	16	16
MAX 5813	5/8 ANSI	16	13	8	8
MAX 5821	5/8 ANSI	16	21	16	16
MAX 5836	5/8 ANSI	16	36	31	31
MAX 456413	45/64 DIN	18	13	8	8
MAX 3413	3/4 ANSI	19.1	13	8	8
MAX 3421	3/4 ANSI	19.1	21	16	16
MAX 3436	3/4 ANSI	19.1	36	31	31
MAX 7813	7/8 ANSI	22	13	8	8
MAX 7821	7/8 ANSI	22	21	16	16
MAX 7836	7/8 ANSI	22	36	30	30
MAX 616413	61/64 DIN	24	13	8	8
MAX 113	1 ANSI	25.4	13	8	8
MAX 121	1 ANSI	25.4	21	16	16
MAX 136	1 ANSI	25.4	36	31	31
MAX 176414	1-9/64 DIN	28	14	10	10
MAX 11817	1-1/8 ANSI	29.8	17	12	12
MAX 11821	1-1/8 ANSI	29.8	21	16	16
MAX 11836	1-1/8 ANSI	29.8	36	31	31
MAX 11415	1-1/4 ANSI	32	15	10	10
MAX 11423	1-1/4 ANSI	32	23	18	18
MAX 11436	1-1/4 ANSI	32	36	31	31
MAX 13823	1-3/8 ANSI	35	23	18	18
MAX 13836	1-3/8 ANSI	35	36	31	31
MAX 11223	1-1/2 ANSI	38	23	18	18
MAX 13423	1-3/4 ANSI	44.5	23	18	18
MAX 223	2 ANSI	50.8	23	18	18


1/2" and 9/16" dia. are 2 cutter

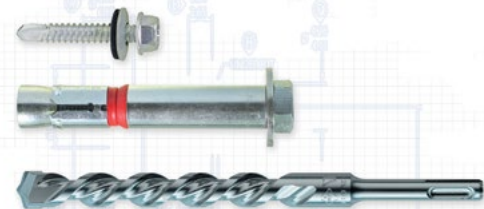

CUSTOM FASTENERS AND DRILL BITS

UCAN is especially well equipped to supply many types of custom fasteners and drill bits in both small and large quantities. Working from your specifications, we provide the exact part you need. Customer specific packaging and labelling also available.

DUSTLESS VACUUM DRILL BITS

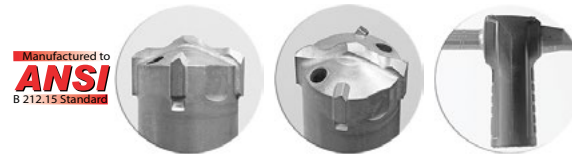

POWERFUL 4-CUTTER WITH INNOVATIVE HEAD DESIGN

- Optimal hole cleaning
- Efficient dust removal allows for continuous drilling
- Precise hole dimensions & concentricity
- Unique head design prevents stalling

TWO LARGE SUCTION HOLES

- Minimal dust buildup due to high volume suction holes
- Active head cooling results in longer drill bit life

UNIQUE SHANK & BODY GEOMETRY

- Directs the drill bit precisely within the hole
- Promotes long drill bit life

MANUFACTURED TO ANSI SPECIFICATIONS

- Ensures proper hole diameters

Supports System for OSHA regulation on Crystalline Silica Dust #29 CFR 1926.1153 when used with a HEPA filtered dust extractor

PRODUCT RANGE

Diameter 7/16" - 1-3/8"
Total length 13" - 35"

- For SDS-PLUS and SDS-MAX rotary hammers
- Bits are pre assembled with adapter



Watch video here: tinyurl.com/vacbit

SDS PLUS



- 7/16" - 5/8" single, slotted tip
- 3/4" multi-part carbide tip

Part No.	Diameter (in)	Length (in)	
		Overall	Usable
SDS 71613DL	7/16	13	7-7/8
SDS 1213DL	1/2	13	7-7/8
SDS 91614DL	9/16	14	9-1/2
SDS 5814DL	5/8	14	9-1/2
SDS 3414DL	3/4	14	9-1/2

SDS MAX



- Multi-part carbide tip

Part No.	Diameter (in)	Length (in)	
		Overall	Usable
MAX 5823DL	5/8	23-1/2	15-3/4
MAX 3423DL	3/4	23-1/2	15-3/4
MAX 7823DL	7/8	23-1/2	15-3/4
MAX 125DL	1	24-1/4	17-1/8
MAX 11835DL	1-1/8	35	27-1/2
MAX 13835DL	1-3/8	35	27-1/2

SDS MAX SINGLE PIECE CORE BITS

Each bit includes starter bit and drift key




Part No.	Diameter		Length (in)
	(in)	(mm)	
MAX CB11222	1-1/2	38	22
MAX CB13422	1-3/4	44.5	22
MAX CB222	2	50.8	22
MAX CB25822	2-5/8	66.7	22
MAX CB31822	3-1/8	79.4	22
MAX CB31222	3-1/2	89	22
MAX CB422	4	101.6	22
MAX CB522	5	127	22
MAX CB622	6	152.4	22

ACCESSORIES

Part No.	Description
A 245970	Starter bit for 1 piece core bit
A 605215	Drift key

SDS-MAX CONNECTOR

Permits the combination of all common chuck systems with SDS-MAX bits

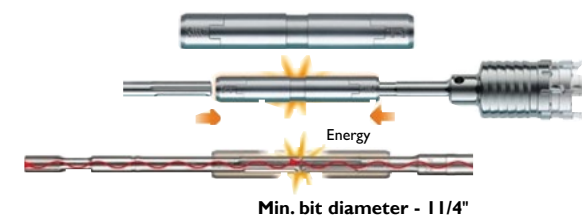

Part No.	Description
6700	Connector
6701	MAX 12" extension
6708	Spline 12" extension
6709	MAX 30" extension

ULTRAMAX® HOLE CUTTERS

Up to 80% faster drilling than core bits



The UCAN SDS MAX CORE CUTTER is specially suited for the latest generation of powerful rotary hammer tools. Its' one piece design and unique cutting head ensure efficient drilling and superior life.

Part No.	Diameter		Length (in)
	(in)	(mm)	
MAX CC134	1-3/4	44.5	22
MAX CC218	2-1/8	54	22
MAX CC212	2-1/2	63.5	22
MAX CC318	3-1/8	79.4	22

CORE BITS

For spline, SDS MAX & kango taper shanks



Part No.	Diameter		Length (in)
	(in)	(mm)	
DU6 CB2	2	52	4
DU6 CB212	2-1/2	66	4
DU6 CB258	2-5/8	68	4
DU6 CB318	3-1/8	80	4
DU6 CB312	3-1/2	90	4
DU6 CB4	4	100	4
DU6 CB5	5	125	4

CORE BIT SHANKS



Part No.	Description
MAX S18	18" (450mm) Core bit shank - SDS MAX
A 245968	8" Core bit shaft - spline
A 245969	15-3/4" Core bit shaft - spline

ACCESSORIES

A 245967	Starter bit for 2 pieces core bit
A 604214	Drift key

STRAIGHT SHANK

Rotary percussion bits for concrete and masonry



Faster drilling + long life = lowest cost per hole

High quality carbide tip brazed to tempered steel shank for faster drilling and longer life.

Part No.	Diameter		Length	Shank	Pkg.
	(in)	(mm)	(in)	Dia.	Qty.
JOD 183	1/8	3	3	1/8	10
JOD 5323	5/32	4	3-1/2	5/32	10
JOD 5326	5/32	4	6	5/32	10
JOD 11643	11/64	4.5	3-1/4	11/64	10
JOD 3163	3/16	5	3-1/2	3/16	10
JOD 3166	3/16	5	6	3/16	10
JOD 15644	15/64	6	4	15/64	10
JOD 15646	15/64	6	6	15/64	10
JOD 144	1/4	6.5	4	1/4	10
JOD 146	1/4	6.5	6	1/4	10
JOD 1412	1/4	6.5	12	1/4	10
JOD 1424	1/2	6.5	24	1/4	10
JOD 5164	5/16	8	4-3/4	5/16	10
JOD 5166	5/16	8	6	5/16	10
JOD 386	3/8	9.5	6	3/8	10
JOD 3812	3/8	9.5	12	3/8	10
JOD 3820	3/8	9.5	20	3/8	10
JOD 3824	3/8	9.5	24	3/8	10
JOD 3840	3/8	9.5	40	3/8	10
JOD 7166	7/16	11	6	3/8	10
JOD 15326	15/32	12	6	3/8	10
JOD 126	1/2	13	6	3/8	10
JOD 1212	1/2	13	12	3/8	10
JOD 1220	1/2	13	20	3/8	10
JOD 1224	1/2	13	24	3/8	10
JOD 586	5/8	16	6	3/8	5
JOD 5812	5/8	16	12	3/8	5
JOD 5824	5/8	16	24	1/2	5
JOD 346	3/4	19	6	1/2	5
JOD 3412	3/4	19	12	1/2	5
JOD 3424	3/4	19	24	1/2	5
JOD 786	7/8	22	6	1/2	5
JOD 7812	7/8	22	12	1/2	5
JOD 16	1	25.4	6	1/2	2
JOD 112	1	25.4	12	1/2	2

mm Sizes shown in **GREEN** are true metric DIN standard. Other metric sizes shown are metric conversion sizes.

SDS PLUS CHISELS



Part No.	Length	Description
CHP S11	250 mm	10" Bull point chisel
CHI S11	250 mm	10" X 3/4" Flat
CHS S11	250 mm	10" X 1-1/2" Scaling chisel
CHG S11	280 mm	11" X 1" Gouge chisel


CHISELS FOR SDS-MAX HAMMERS



Part No.	Length	Description
CHP M12	280 mm	11" Bull point
CHP M18	450 mm	18" Bull point
CHI M12	280 mm	11" X 1" Flat
CHI M18	460 mm	18" X 1" Flat
CHS M12S	300 mm	12" X 1-1/2" Scaling chisel
CHS M12	300 mm	12" X 3" Scaling chisel
CHS M16	400 mm	16" X 2" Scaling chisel
CHG M12	300 mm	12" Gouge chisel
CHA M15	380 mm	5" X 15" Asphalt cutter
CPS M16	400 mm	5-3/8" X 16" Round spade
CHW M15	380 mm	1" X 15" Winged channel

SDS-MAX FLOOR SCRAPER

With 6" blade for removing tiles and other flooring

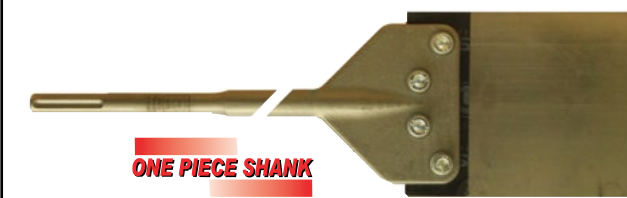

Part No.	Description
CHI MFS	6" X 25" Complete floor scraper with standard blade
MFS BLADE	Replacement blade for floor scraper
MFS KIT	Replacement blade, 2 gaskets, 8 washers, 4 nuts, 4 bolts
MFS GAS	Floor scraper gasket
MFS WASH	Floor scraper washer
MFS NUT	Floor scraper hex nut
MFS BOLT	Floor scraper bolts

Ti-Awl® TILE BIT

Ti-Awl® diamond core tile drill bits

- Fast and accurate drilling in ceramic, porcelain, marble and granite tile
- Minimizes cracking or spalling of tile when drilling
- Available in an alternate blister pack and as a complete kit.



Kit Includes:

- Aluminum case
- Six popular sizes of tile drills: 1/4", 5/16", 3/8", 1/2", 5/8", 3/4"
- A clear, shatterproof, non-slip guide. Essential for accurate drilling

Watch video here: tinyurl.com/tilebits



Part No.	Diameter	New size in red
DCC 316	3/16"	
DCC 14	1/4"	
DCC 516	5/16"	
DCC 38	3/8"	
DCC 12	1/2"	
DCC 58	5/8"	
DCC 34	3/4"	
DCC 1	1"	
DCC 114	1-1/4"	
DCC 138	1-3/8"	
DCC 112	1-1/2"	
DCC GUIDE		
DCC KIT		
DCC MP	3/16", 1/4", 5/16", 3/8" - Multipack	


The area to be drilled must always be kept wet. Lubricate the surface at least every 20 seconds while drilling. See pressure water sprayer below. Use in any rotary, non-percussion, hand drill.

JUP UNIVERSAL DRILL BIT

NEW



- Drills glazed tile, marble, wood, brick, plastic, fiberglass and more
- 1/4" Hex Quick Change Shank
- Drills hard tiles in seconds
- Non-percussion
 - Minimizes spalling in brick & mortar
 - Accurate holes
 - Low noise

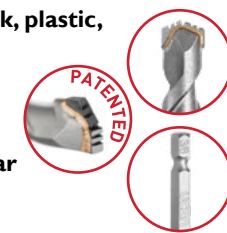

Part No.	Diameter
JUP 3164	3/16 x 4"
JUP 144	1/4 x 4"
JUP 386	3/8 x 6"

PRESSURE WATER SPRAYER

ADJUSTABLE FROM MIST TO JET



Ideal for use with Ti-Awl® diamond core tile drill bits. Emits a continuous stream of spray without effort.

Part No.	Size
PWS	1 Liter pressure water sprayer

REBAR SAFETY CAP

Provide protection from protruding rebar

- High visibility colour
- Not for impalement protection



Part No.	Rebar Dia.	Pkg. Qty.	Case Qty.	Case Wt.
RSCI025C	M10 - M25	100 / Bag	500	9

ROCKITE®

SELF LEVELING POURABLE GROUT

Rockite cement is a hydraulic type cement compound that is specially formulated to give superior strength and

unsurpassed bonding qualities. When mixed with water, Rockite pours smoothly into place. It sets within 15 minutes. Within one hour, it develops a compressive strength of 4500 psi.



Ideal for:

- Patching
- Signs
- Railing
- Machinery mounts
- Seats
- Posts

Part No.	Size	Case Qty.
ROC 10	10 lb Pail	4
ROC 50	50 lb Pail	1

FLO-ROK® 5 MAX CARTRIDGES



IAPMO - ES® Listing for cracked & uncracked concrete

- MTO / MTQ Approved
- Year round use, long shelf life
- Broad working temperature range from -10°C to +30°C
- Excellent for both solid and hollow wall applications
- Smooth flowing, non-drip, easy to control
- User friendly – low odour, styrene free & MMA free
- Moisture insensitive, non sag formula
- Suitable for damp and water filled holes
- Meets LEED guidelines; low VOC



Watch video here: tinyurl.com/florok5

Part No.	Description	Case Qty.	Case Wt.
FR5-10 MAX	10 oz Cartridge	12	14
FR5-28 MAX	28 oz Cartridge	6	32

• Cartridge price includes 1 static mixing nozzle

CRACKFAST® CRACK REPAIR KIT



Watch video here: tinyurl.com/crackfast

Complete Kit Includes:

- Seal cartridge 300ml 2 pcs
- Resin cartridge 250ml 2 pcs
- Seal mixer nozzle 2 pcs
- Seal applicator fan 2 pcs
- Cartridge outlet plug 2 pcs
- Resin mixer nozzle w/ extension 2 pcs
- Fit connector 1 pc
- Injection port 16 pcs
- Pair of gloves 2 pcs
- Wooden spatula 2 pcs
- Instruction DVD
- PA 100 Dispensing tool extra

Part No.	Description
CFK 100	CRACKFAST Crack repair kit complete
PA 100	10oz. Manual dispensing tool (high ratio)

CRACKFAST COMPONENTS

CFS	CRACKFAST Seal cartridge 300ml
CFR	CRACKFAST Resin cartridge 250ml
PAM CFR	Resin mixer nozzle with extension tube
PAM CFS	Seal mixer nozzle
PAM FAN	Applicator fan for seal mixer nozzle
CF PORT	Insert/Injection port
CFRP	1 Resin cartridge, 1 resin mixer and 1 outlet plug

FLO-ROK® 6 SD CARTRIDGE



- High performance 1:1 pure epoxy chemical anchor
- Suitable for dynamic and vibration loading
- Seismic resistance
- Smooth flowing, non-drip, easy to control, long shelf life
- Ideal for deep hole applications & close to edge fastening
- User Friendly - low odour, extended working time
- Styrene and VOC free



Watch video here: tinyurl.com/florok6

Part No.	Description	Case Qty.	Case Wt.
FR6-20 SD	20 oz Cartridge	12	29
PA 2000	20oz. Manual dispensing tool	1	3


• Cartridge price includes 1 static mixing nozzle

ACCESSORIES



Part No.	Description
PAM 6	Standard nozzle for FR6-20 SD
PAM 6HF	High flow (9") nozzle for FR6-20 SD
PAM 6EXT	9mm X 10m Extension tube for PAM 6
PAM 6EXTW	14mm X 10m Extension tube for PAM 6HF
FR6 P18	18mm Resin stopper
FR6 P22	22mm Resin stopper
FR6 P30	30mm Resin stopper

HOLE CLEANING BRUSH

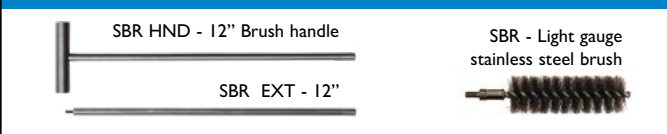

Part No.	Hole dia. (in)	rod (in)	Used For
SBR 12	1/2	3/8	-
SBR 916	9/16	1/2	M10
SBR 34	3/4	5/8	M15
SBR 78	7/8	3/4	-
SBR 1	1	7/8	M20
SBR 118	1-1/8	1	-
SBR 114	1-1/4	-	M25
SBR 138	1-3/8	1-1/4	-
SBR 112	1-1/2	-	M30
SBR 134	1-3/4	1-1/2	M35
SBR HND	12" Brush handle	-	-
SBR EXT	12" Rigid extension	-	-

FLO-ROK DISPENSING TOOLS

HEAVY DUTY CORDLESS DISPENSING TOOL

SURE SHOT TOOL



- Eliminates waste
- Dispenses exact amount each time
- Powerful worm drive
- Long battery life (Up to 25 cartridges per charge)

Part No.	Description
PA 5000K	Battery tool kit for FR5-28 MAX includes two batteries, charger and case
PA 2050K	Battery tool kit for FR6-20 SD includes two batteries, charger and case
PA BAT14V	14V Battery for PA 5000
PA BAT20V	20V Battery for PA 5000
PA CHARGER14V	Charger base for PA BAT 14V
PA CHARGER20V	Charger base for PA BAT 20V
CORD SET	Cord set for PA CHARGER


HEAVY DUTY MANUAL TOOLS



For 10 & 28 oz. Cartridges

Part No.	Description
PA100	10oz. Manual dispensing tool (high ratio)
PA3600	28oz. Manual dispensing tool

FLO-ROK STATIC MIXING NOZZLES

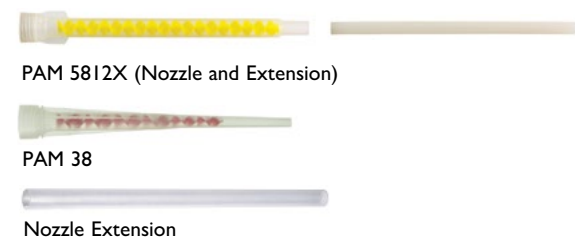

Part No.	Description
PAM 38	Mixing nozzle for 5-10 MAX
PAM 5812X	Mixing nozzle for FR5-28 MAX (O.A. length 17")
PAM EXT	Nozzle extension (Ext. O.A. length 8")

ACCESSORIES

Part No.	Description
BOP 190	Extra high volume blow out pump
FRBR1	3/8" - 1/2" Nylon brush
FRBR2	1/2" - 1" Nylon brush

ANCHOR ROD ASSEMBLIES

For adhesive anchoring

- Straight cut
- complete with nut & washer



ISO GRADE 5.8 STEEL ROD - ZINC PLATED

Part No.	Size	Pkg. Qty.	Case Qty.	Case Wt.
PRA 383	3/8 X 3	10	100	10
PRA 385	3/8 X 5	10	100	14
PRA 126	1/2 X 6-1/2	10	100	37
PRA 587	5/8 X 7-1/2	10	50	31
PRA 3410	3/4 X 10	10	-	12
PRA 112	1 X 12	6	-	15

ISO GRADE 5.8 STEEL ROD - GALVANIZED ASTM A153 CLASS C

PRA G126	1/2 X 6-1/2	10	100	37
PRA G588	5/8 X 8	10	50	31
PRA G3410	3/4 X 10	10	10	12
PRA G3412	3/4 X 12	6	6	9

B7 HIGH STRENGTH STEEL ROD ZINC PLATED WITH 2H NUT

PRA B7125	1/2 X 5	10	100	35
-----------	---------	----	-----	----

STAINLESS STEEL - TYPE 304

PRS4 385	3/8 X 5	10	100	14
PRS4 126	1/2 X 6-1/2	10	100	37
PRS4 587	5/8 X 7-1/2	10	50	31
PRS4 3410	3/4 X 10	10	10	12
PRS4 112	1 X 12	6	6	15

Also available: Type 316 stainless steel, special length and metric thread rod assemblies.

S.S. STEEL SCREENS FOR FR5 MAX

For hollow wall applications



Watch video here: tinyurl.com/ucansfr

Part No.	Max. rod dia. (inches)	Screen Size (inches)	Drill dia. (inches)
SFR 383	3/8	1/2 X 3	1/2
SFR 386	3/8	1/2 X 6	1/2
SFR 3810	3/8	1/2 X 10	1/2
SFR 123	1/2	5/8 X 3	5/8
SFR 126	1/2	5/8 X 6	5/8
SFR 1210	1/2	5/8 X 10	5/8
SFR 583	5/8	3/4 X 3	3/4
SFR 586	5/8	3/4 X 6	3/4
SFR 5810	5/8	3/4 X 10	3/4
SFR 5813	5/8	3/4 X 13	3/4
SFR 34512	3/4	7/8 X 5-1/2	7/8
SFR 348	3/4 - 7/8	1 X 8	1
SFR 3413	3/4 - 7/8	1 X 13	1

Important: Anchor rods should be installed immediately after FLO-ROK 5 MAX has been injected into the hole or screen. They should not be disturbed until fully cured.

PRECAST INSERTS



APPROVED
PR458424



ESR-5281

Part No.	Size	Colour	Pkg. Qty.	Case Qty.	Case Wt.
UPI 12	1/2 - 13	Yellow	-	100	23
UPI 38	3/8 - 16	Green	-	100	26

ZAMAC



- Made of rustproof zamac alloy to prevent surface staining.
- Install with bolts through holes in steel forms or by means of reusable Nail-on plugs on wood forms.

Part No.	Length (in)	Thread Size	Pkg. Qty.	Case Qty.	Case Wt.
PZI 10	1 1/16	10-24	100	4000	44
PZI 15	1-1/2	1/4-20	100	800	41
PZI 24	1	3/8-16	100	1000	44
PZI 25	1-3/8	3/8-16	100	700	45
PZI 35	1-1/2	1/2-13	50	300	40
PZI 36	2-7/8	1/2-13	25	150	44
PZI 45	1-11/16	5/8-11	25	200	38
PZI 46	2-7/8	5/8-11	25	100	35
PZI 55	1-11/16	3/4-10	25	150	33
PZI 56	2-7/8	3/4-10	25	100	33

OVERSIZED-TAPPED FOR GALVANIZED BOLTS (ASTM A563)

Part No.	Thread Size	Box Qty.	Case Qty.	Case Wt.	
PZI 35OT	1-1/2	1/2-13	50	300	40
PZI 45OT	1-11/16	5/8-11	25	200	38
PZI 46OT	2-7/8	5/8-11	25	100	35
PZI 55OT	1-11/16	3/4-10	25	150	33

CONCRETE INSERT PLUG - REUSABLE



- Nail-on plastic plug for wood forms
- Use with PZI and UPI

Part No.	Thread Size	Box Qty.	Case Qty.	Case Wt.
PIP 25	3/8-16	100	1,000	7
PIP 35	1/2-13	100	1,000	8
PIP 45	5/8-11	100	1,000	9

TIE WIRE ANCHORS

Zinc Plated



We invented it. Accept no substitute!

Part No.	Size	Eye Dia.	Pkg. Qty.	Case Qty.	Case Wt.
EP 932	1/4 X 2-1/4	9/32	100	1,000	38
EP932M	1/4 X 2-1/4	9/32	-	1,000	35

HOOK WEDGE

CARBON STEEL ZINC PLATED



- Fast, simple installation by hammer

Part No.	Size	Case Qty.	Case Wt.
HW38414B	3/8 X 4-1/4	250	31

ROD COUPLINGS

Zinc Plated



Part No.	Size	Length	A/F	Pkg. Qty.	Case Qty.	Case Wt.
ROD 14	1/4 - 20	7/8	3/8	100	1,000	20
ROD 516	5/16 - 18	1-1/8	1/2	100	1,000	47
ROD 38	3/8 - 16	1-1/8	1/2	100	1,000	38
ROD 38L	3/8 - 16	1-3/4	9/16	100	600	69
ROD 12	1/2 - 13	1-3/4	11/16	50	300	36
ROD 58	5/8 - 11	2-1/8	13/16	25	150	28
ROD 34	3/4 - 10	2-1/4	1	25	150	45

REDUCER COUPLINGS

ROD 3814	3/8 - 1/4 X 1	100	1,000	40
----------	---------------	-----	-------	----

BULK CARTONS

ROD 14B	1/4 - 20	7/8	3/8	2,800	53
ROD 516B	5/16 - 18	1-1/8	1/2	1,200	55
ROD 38B	3/8 - 16	1-1/8	1/2	1,300	48
ROD 38LB	3/8 - 16	1-3/4	9/16	450	51
ROD 12B	1/2 - 13	1-3/4	11/16	450	51
ROD 58B	5/8 - 11	2-1/8	13/16	250	44
ROD 34B	3/4 - 10	2-1/4	1	150	45



TORPEDO BOLT

- Available in 4 finishes : MECHANICALLY GALVANIZED, RUSPRO® COATED, 410 STAINLESS STEEL WITH RUSPRO® COATED and 316 STAINLESS STEEL
- Use with a standard UCAN ANSI - tolerance drill bit
- Faster installation and lower edge distance requirements, compared to mechanical expansion anchors
- Undercut thread design produces consistently high load values in various concrete strengths
- One piece fastener with finished hex washer head
- Unique thread pattern permits low installation torque
- Anti-rotational head facilitates a positive lock between the bolt and the working surface for enhanced vibration resistance
- Anchor size is stamped on head for easy identification and enhanced quality control after anchor installation
- Removable
- RUSPRO® coating provides excellent resistance to atmospheric corrosion and road salt. (See specification on page 34)

*UCAN recommends Wedge Anchors for safety barriers

UCAN TORPEDO® BOLT

CARBON STEEL MECHANICAL GALVANIZED

ICC-ES® Listed ESR- 4596
(for cracked and uncracked concrete)



ESR-4596

Typical applications:

- Fencing and railing.
- Glazing and windows attachment.
- Support ledges and sill plate attachments.

Not recommended for permanent exterior use or highly corrosive environments.

Part No.	Size	Pkg. Qty.	Case Qty.	Case Wt.
UTB 14178	1/4 X 1-7/8	100	800	38
UTB 14214	1/4 X 2-1/4	100	800	38
UTB 143	1/4 X 3	100	800	46
UTB 38134	3/8 x 1-3/4	50	400	37
UTB 38212	3/8 x 2-1/2	50	400	47
UTB 383	3/8 x 3	50	400	54
UTB 384	3/8 x 4	50	400	66
UTB 385	3/8 x 5	25	200	41
UTB 12212	1/2 x 2-1/2	50	150	32
UTB 123	1/2 x 3	50	150	37
UTB 124	1/2 x 4	40	120	36
UTB 125	1/2 x 5	30	90	33
UTB 126	1/2 x 6	30	90	38
UTB 583	5/8 x 3	25	75	30
UTB 584	5/8 x 4	25	75	31
UTB 585	5/8 x 5	20	60	36
UTB 586	5/8 x 6	20	60	41
UTB 344	3/4 x 4	15	45	33
UTB 345	3/4 x 5	15	45	39
UTB 346	3/4 x 6	15	45	45
UTB 347	3/4 x 7	15	45	51
UTB 34812	3/4 x 8 1/2	10	30	34
UTB 3410	3/4 x 10	10	30	40

UCAN TORPEDO® BOLT

CARBON STEEL RUSPRO COATED



RUSPRO, outstanding corrosion resistance

Suitable for outdoor applications.
Not recommended for water and sewage plants where type 316 stainless steel is normally used.

Typical applications:

- Glazing and window attachments
- Support ledges and sill plate attachments
- Fencing and railing

Part No.	Size	Pkg. Qty.	Case Qty.	Case Wt.
UTB383R	3/8X3	50	400	54
UTB384R	3/8X4	50	400	66
UTB385R	3/8X5	25	200	41
UTB123R	1/2X3	50	150	37
UTB124R	1/2X4	40	120	36
UTB125R	1/2X5	30	90	33
UTB126R	1/2X6	30	90	38

U-DRIVE® U-DRIVE® MASONRY ANCHOR SYSTEM

- Permanent and cost effective anchoring
- Quick, easy installation without special tools
- Requires only 1" (25mm) embedment

- Hot dip galvanized for maximum corrosion protection
- High pull out and shear strength

U-DRIVE® ANCHORS

One drill bit included with each package of 100 anchors



Part No.	Anchor Length	Fastens up to	Pkg. Qty.	Case Qty.	Case Wt.
INS 118	1-1/8	1/8	100	1,000	14
INS 112	1-1/2	1/2	100	1,000	20
INS 2	2	1	100	1,000	24
INS 212	2-1/2	1-1/2	100	1,000	29
INS 3	3	2	100	1,000	33
INS 312	3-1/2	2-1/2	100	1,000	40
INS 4	4	3	100	1,000	44
INS 412	4-1/2	3-1/2	100	600	30
INS 5	5	4	100	600	32

MAGNUM PACKS

Drill Bits not included

Part No.	Anchor Length	Fastens up to	Case Qty.	Case Wt.
INS 118M	1-1/8	1/8	1,000	14
INS 112M	1-1/2	1/2	1,000	17
INS 2M	2	1	1,000	22
INS 212M	2-1/2	1-1/2	1,000	27
INS 3M	3	2	1,000	32
INS 312M	3-1/2	2-1/2	1,000	39
INS 4M	4	3	500	22
INS 412M	4-1/2	3-1/2	500	24
INS 5M	5	4	500	26

For best results use with IND/IDS bits

U-DRIVE DRILL BITS

Straight shank



Part No.	Size	Maximum Fastener Length
IND 312	.202 X 3-1/2	2
IND 412	.202 X 4-1/2	3
IND 512	.202 X 5-1/2	4
IND 712	.202 X 7-1/2	6
IND 812	.202 X 8-1/2	7

SDS BITS "ANSI"



Part No.	Size	Maximum Fastener Length
IDS 4	.202 X 4	1-1/2
IDS 6	.202 X 6	3-1/2
IDS 9	.202 X 8-3/8	7

U-DRIVE STRESS PLATE

Required when fastening insulation

- Super low profile
- Can also be used with SCRUI-IT



Part No.	Diameter	Type	Case Qty.	Pkg. Wt.
SP 1M	3"	Plastic	500	24

E.I.F.S. DISCS

- Made from high grade polymer for long service life
- Accepts screws and nails

TYPE PM

Universal disc for Polymer Modified (PM) and Modified PB EIFS to fasten rigid insulation to wood, steel, concrete, and masonry.

- Low surface profile



Part No.	Diameter	Case Qty.
EID 134M	1-3/4" (45MM)	1,000

TYPE PB

For installing Expanded Polystyrene (EPS) insulation board for Polymer Based (PB) EIFS to wood, steel, concrete and masonry.

- Stem sets into insulation



Part No.	Diameter	Case Qty.
EIDS 2ML	2" (50MM) - For 1/4" dia. screws	1,000
EIDS 2M	2" (50MM) - For 3/16" dia. screws	1,000

ZAMAC PIN BOLTS

WITH ZINC PLATED STEEL NAIL



Part No.	Size	Pkg. Qty.	Case Qty.	Case Wt.
ZAM 31678 *	3/16 X 7/8	100	1,000	15
ZAM 141 *	1/4 X 1	100	1,000	19
ZAM 14114 *	1/4 X 1-1/4	100	1,000	23
ZAM 14112	1/4 X 1-1/2	100	1,000	26
ZAM 142	1/4 X 2	100	1,000	32
ZAM 143	1/4 X 3	100	600	28

* Available in Super Pak Jar (See Page 32)

WITH STAINLESS STEEL NAIL

Part No.	Size	Pkg. Qty.	Case Qty.	Case Wt.
ZAM 141SS	1/4 X 1	100	1,000	19
ZAM 14114SS	1/4 X 1-1/4	100	1,000	23
ZAM 14112SS	1/4 X 1-1/2	100	1,000	26
ZAM 142SS	1/4 X 2	100	1,000	32

BULK PACK WITH ZINC PLATED STEEL NAIL

Part No.	Size	Case Qty.	Case Wt.
ZAM 31678B	3/16 X 7/8	5,000	46
ZAM 141B	1/4 X 1	2,500	48
ZAM 14114B	1/4 X 1-1/4	2,000	45
ZAM 14112B	1/4 X 1-1/2	1,800	46
ZAM 142B	1/4 X 2	1,250	40
ZAM 143B	1/4 X 3	700	31

NYLON PIN BOLTS

WITH ZINC PLATED STEEL NAIL



Part No.	Size	Head Style	Pkg. Qty.	Case Qty.	Case Wt.
NYL 3161	3/16 X 1	M	100	1,000	5
NYL 3161R	3/16 X 1	R	100	1,000	5
NYL 316112R	3/16 X 1-1/2	R	100	1,000	7
NYL 1434 *	1/4 X 3/4	M	100	1,000	5
NYL 141 *	1/4 X 1	M	100	1,000	6
NYL 14112 *	1/4 X 1-1/2	M	100	1,000	9
NYL 142	1/4 X 2	M	100	1,000	11
NYL 143	1/4 X 3	M	100	600	12

Also available in bulk cartons

WITH NYLON NAIL

NNY 14112	1/4 X 1-1/2	M	100	1,000	9
-----------	-------------	---	-----	-------	---

INSULATION FASTENERS

2-3/8" HEAD DIAMETER

- All Plastic
- Not for structural support
- Plastic body eliminates thermal transfer



Part No.	Drill Size	Overall Length	Grip Range	Pkg. Qty.	Pkg. Wt.
MJL 234	5/16	2-3/4	1-1-1/2	250	3
MJL 334	5/16	3-3/4	2-2-1/2	250	4
MJL 412	5/16	4-1/2	2-1-2-3	250	5

NYLON DRIVE SCREW ANCHORS

- Install with a hammer - remove with a screwdriver
- Nylon 6 body resists high and low temperatures
- Collapsible body ensures positive clamping
- Lock-in feature avoids pre-expansion

ROUND HEAD - PHILLIPS DRIVE SCREW



Part No.	Drill dia. (mm)	Length (mm)	Fastens up to (mm)	Pkg. Qty.	Case Qty.	Case Wt.
MNA 530	5	30	5	100	2,400	18
MNA 550	5	50	25	100	2,400	24
MNA 635	6	35	10	100	2,400	26
MNA 650	6	50	25	100	1,800	20
MNA 670	6	70	45	100	1,200	22

COUNTERSINK HEAD - PHILLIPS DRIVE SCREW



MNA 850	8	50	15	100	900	18
MNA 860	8	60	25	100	900	21
MNA 880	8	80	45	100	600	18
MNA 8100	8	100	60	100	600	21

ROUND HEAD - SQUARE SOCKET DRIVE SCREW



MNA 635R	6	40	15	100	2400	26
----------	---	----	----	-----	------	----

ROUND / COUNTERSINK HEAD 304 STAINLESS STEEL PHILLIPS DRIVE SCREW



MNA 635SS	6	35	10	100	2,400	26
MNA 650SS	6	50	25	100	1,800	20
MNA 880SS	8	80	45	100	600	18

Note: Always drill holes 6mm deeper than embedment

INSULATION FASTENERS

- All Plastic
- Plastic body eliminates thermal transfer
- Not for structural support



1-1/2" HEAD DIAMETER - EXTENDED GRIP RANGE

Part No.	Drill Size	Overall Length	Grip Range	Pkg. Qty.	Pkg. Wt.
MJX 314	5/16	3-1/4	1 - 2	400	5
MJX 412	5/16	4-1/2	2 - 3-1/4	250	4

1-1/2" HEAD DIAMETER

MJP 234	5/16	2-3/4	1 - 1-1/2	250	3
MJP 512	5/16	5-1/2	3-1/2 - 4	250	5
MJP 614	5/16	6-1/4	4-1/2 - 5	250	5

UCAN LV 362 LOW-VELOCITY TOOL



SEMI-AUTOMATIC
For .300 Flat-Head pins
& UD pins

- Uses .27 Cal. Strip Loads - Max power level: Red
- Fasteners up to 2-1/2"

Complete Kit Includes Goggles, Ear Plugs, Cleaning Brushes, Wiper, Lubricant, Spare Parts, Training Manual and Heavy-Duty Carrying Case.

Part No.	Description
LV 362K	Deluxe tool kit complete

FIELD REPLACEMENT PARTS FOR LV 362

36214	Piston assembly for flathead fasteners
301030	Piston for UN-UD fasteners
36215	Piston ring
36217	Base plate
36216	Guide
36238	Shear clip
36212	Stop
36237	Steel ball
36236	Annular spring

UCAN LV 367 LOW-VELOCITY TOOL



SEMI-AUTOMATIC
For .300 Flat-Head pins
& UD pins

- Adjustable Power Dial
- Uses .27 Cal. Strip Loads - Max power level: Red
- Fasteners up to 2-1/2"

Complete Kit Includes Goggles, Ear Plugs, Cleaning Brushes, Wiper, Lubricant, Spare Parts, Training Manual and Heavy-Duty Carrying Case.

Part No.	Description
LV 367K	Deluxe tool kit complete

FIELD REPLACEMENT PARTS FOR LV 367

36714	Piston assembly
36715	Piston ring
36717	Base plate
36716	Guide
36738	Shear clip
36712	Stop
36737	Steel ball
36736	Annular spring

UCAN LV 363i LOW-VELOCITY TOOL



SEMI-AUTOMATIC TOOL
For Insulation Fasteners

- Adjustable Power Dial
- Uses .27 Cal. Strip Loads - Max power level: Red

Complete Kit Includes Goggles, Ear Plugs, Cleaning Brushes, Wiper, Lubricant, Spare Parts, Training Manual and Heavy-Duty Carrying Case.

*363 Kit sold separately for 6" Fasteners

Part No.	Description
LV 363iK	Deluxe tool kit complete

FIELD REPLACEMENT PARTS FOR LV 363i

36314	Piston assembly
36315	Piston ring
36352	Stop ring
36353	Retaining ring
36354	Plastic ring
36355	Rubber ring (24mm)
36312	Stop

UCAN LV 470 LOW-VELOCITY TOOL



SEMI-AUTOMATIC
with Adjustable Power Dial

- Safe
- Low Recoil
- Low Noise Level
- Adjustable Power Dial
- Uses .27 Cal. Strip Loads
- Durable & Reliable
- Weighs only 7 lbs.

For PC pins and UTS studs up to 2-1/2"

- Max recommended power level: Red

Complete Kit Includes Plastic Case, Goggles, Lubricant, 1-1/4" Steel Brush, Wood Brush, 5 Stop Rings, 3 Retaining Rings, Rod, Cleaning Cloth, Training Manual.

Part No.	Description
LV 470K	Deluxe tool kit complete

FIELD REPLACEMENT PARTS FOR LV 470

C-05	Stop ring
C-06	Retaining ring, fastener guide
C-07	Piston for pins
C-07A	Piston for threaded studs
C-08	Piston ring
C-09	Piston guide
C-11	Retaining ring, piston guide

POWER LOADS

.22 CAL. TYPE A FOR LV 151

For low-velocity tools



Part No.	Power Level	Pkg. Qty.	Case Qty.	Case Wt.
CA2 BRO	Brown 2 Med.-Light	100	10,000	20
CA3 GRE	Green 3 Med.-Strong	100	10,000	20
CA4 YEL	Yellow 4 - Strong	100	10,000	20

.25 CAL. IN PLASTIC STRIPS

For low-velocity tools



Part No.	Power Level	Pkg. Qty.	Case Qty.	Case Wt.
CTS YEL	Yellow - Medium	100	10,000	29
CTS RED	Red - Strong	100	10,000	29

.27 CAL. IN PLASTIC STRIPS

For UCAN LV362/367. Also for DX351 and DX36.

CHS G	Green - Light	100	10,000	32
CHS Y	Yellow - Medium	100	10,000	32
CHS R	Red - Strong	100	10,000	32

FOR UCAN LV470 AND FOR DX450

CHS R	Red - Strong	100	10,000	32
CHS P	Purple - Extra strong	100	10,000	32

ACCESSORIES FOR LV TOOLS



New sizes in red

Part No.	Description
LVCK	Cleaning kit, (brushes, wiper, lub. spray)
LVBR1	1-3/8 Round brush
LVBR2	3/4 Round brush
LVBR3	Flat brush
LVBR4	7/16 Cleaning brush
LVSPR	PAT Tool spray lube 3FL.oz (85gms)
LVSAFE	Safety goggles
LVCASE-360	Carrying case only - for LV 362 & LV 367
LVCASE-470	Carrying case only

.300 FLAT-HEADED FASTENERS

Super point



Fluted guide washers for steel and concrete

Part No.	Shank Length	Pkg. Qty.	Case Qty.	Case Wt.
AFH 13K	1/2 Knurled	100	1,000	5
AFH 16K	5/8 Knurled	100	1,000	6
AFH 19	3/4	100	1,000	6
AFH 25	1	100	1,000	7
AFH 32	1-1/4	100	1,000	8
AFH 37	1-1/2	100	1,000	9
AFH 47	1-7/8	100	1,000	12
AFH 57	2-1/4	100	1,000	14
AFH 62	2-1/2	100	1,000	15
AFH 72	2-7/8	100	1,000	17

25MM STEEL WASHER FASTENERS

Super point



Part No.	Shank Length	Pkg. Qty.	Case Qty.	Case Wt.
AWI 25	1"	100	1,000	20
AWI 32	1-1/4"	100	1,000	21
AWI 37	1-1/2"	100	1,000	25
AWI 50	2"	100	1,000	35
AWI 62	2-1/2"	100	600	16
AWI 75	3"	100	600	19

BULK PACKS

Part No.	Shank Length	Case Qty.	Case Wt.
AWI 37M	1-1/2"	1000	25

INSULATION PIN

Assembled with 36mm washer



Part No.	Shank Length	Pkg. Qty.	Case Qty.	Case Wt.
AWP 37	1-1/4"	100	600	13
AWP 47	1-7/8"	100	600	9
AWP 62	2-1/2"	100	600	10

FASTENER SELECTION GUIDELINES

UCAN Fastening Products' anchoring line ranges from light duty plastic anchors to the most technically advanced types of heavy load anchors. This wide variety of high quality fasteners provides the user with the flexibility to select the anchor best suited for the application. For this reason, prior to selecting the type, size and quantity of fasteners required, the following factors should be considered:

- Type and the condition of the base material
- Installation procedure
- Corrosion considerations
- The desired load transfer by the fastener to the base material
- Dimensions of the base material
- Anchor spacing and edge distance
- Safety factor required
- Type of load(s) acting on the fastener (eg: static, dynamic, seismic)

In all applications, the design engineer or architect responsible for the project should verify the load bearing capacity and other performance criteria.

UCAN fasteners are designed to minimize the influence of the installation technique on the anchor's holding power. However, basic installation procedures listed for each anchor in our technical and sales literature should be followed, to ensure the integrity of the anchoring assembly.

- Correct hole geometry is important to guarantee published load performance. The UCAN carbide drill bit,

manufactured to ISO (mm) and ANSI (in) standards, will produce holes which are optimal for metric or fractional anchors. Incorrect hole geometry can cause reduced holding power, and installation difficulties.

- Hole cleaning is an important and easy step to ensure maximum anchor performance. For most expansion and adhesive anchors, cleaning the hole with a nylon or wire brush and blow out pump is all that is required. These steps will remove concrete dust and debris from the hole which could reduce the effectiveness of the anchor.
- After placement of the anchor, turning the nut or hex bolt tightens down the assembly. For engineered or critical applications, specific torque should be applied using a calibrated torque wrench.

A safety factor must be used to compensate for variations in loading, material strength and installation conditions and to ensure minimum anchor displacement. It is the designer's responsibility to analyze all conditions and select the appropriate safety factor.

For predominantly static loading in allowable stress design, UCAN recommends the following safety factors:

- For mechanical and adhesive anchors 4:1
- For plastic anchors 5:1
- For PA system in concrete 8:1
- For PA system in steel 5:1

WEDGE ANCHOR LENGTH IDENTIFICATION SYSTEM

HEAD STAMP	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T
Anchor Length (inches)	From 1-1/2	2	2-1/2	3	3-1/2	4	4-1/2	5	5-1/2	6	6-1/2	7	7-1/2	8	8-1/2	9	9-1/2	10	11	12
Up to but not including	2	2-1/2	3	3-1/2	4	4-1/2	5	5-1/2	6	6-1/2	7	7-1/2	8	8-1/2	9	9-1/2	10	11	12	13

DRIVER SIZES FOR UCAN SCREWS

U-DRILLS®	Magnetic Nut Setter	Square Recess Bit	Phillips Bit
# 6	1/4	1	2
# 8	1/4	2	2
# 10	5/16	2	2
# 12	5/16	3	3
# 14	3/8	3	3
SUPER SCRU-IT®			
3/16	1/4	2	2
1/4	5/16	3	3

Note: For SHW 1478B use 5/16 Magnetic Nut Setter


U-DRILLS® PERFORMANCE DATA

STRENGTH CHARACTERISTICS				
Fastener Size	Minimum Breaking Torque (in/lbs)	Tensile Strength (lbs)	Shear Strength (lbs)	Recommended Drilling Speed (rpm)
#6	30	1,102	652	1,800 - 2,500
#8	42	1,529	967	
#10	65	2,181	1,439	1,000 - 1,800
#12	96	3,305	2,068	
1/4-14	150	4,275	2,540	

For more information on anchor selection and design criteria, as well as the latest performance data, please contact UCAN or visit our website at www.ucanfast.com


Kesternich (DIN 50018 - 2.0L SO₂) Test (Acidic Industrial Atmosphere)

Electroplated Zinc
Cadmium plated (0.003")
Mechanically plated zinc
Hot dip galvanized
RUSPRO®

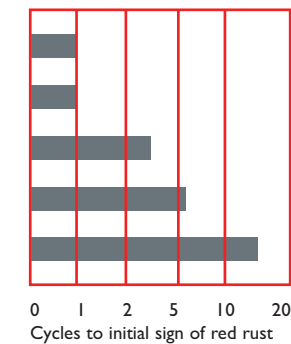


Salt Spray Test ASTM B117

Electroplated Zinc
Mechanically plated zinc
Hot dip galvanized
Cadmium plated (0.003")
RUSPRO®

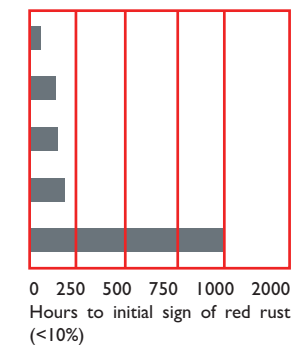

DRILL POINT CAPACITY

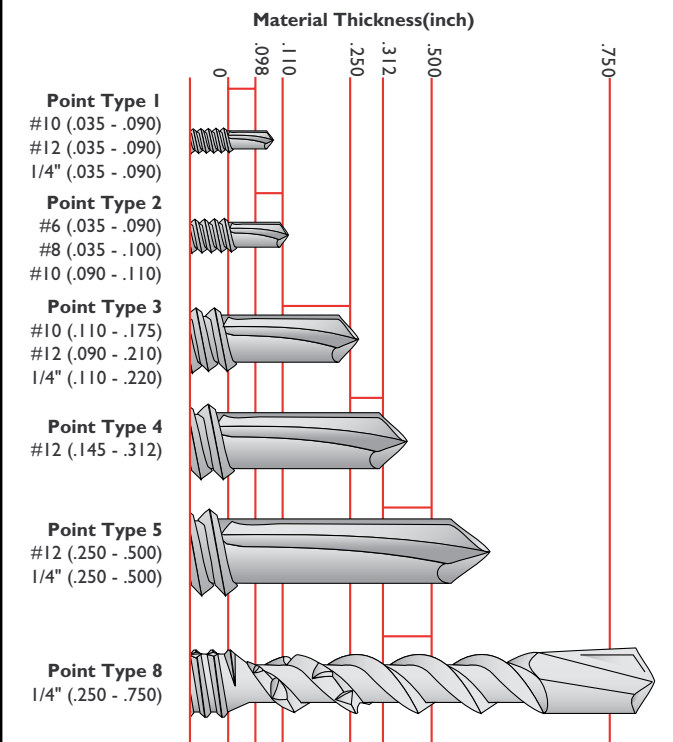

Corrosion data shown on this page are based on independent laboratory testing on the fasteners only. It is the user's responsibility to verify the fastener's suitability to any particular corrosive application condition.

CORROSION RESISTANCE DATA

ZINC PLATING

- ASTM F 1941-00
- plating thickness: 0.0002" - 0.0003"

RUSPRO®

The RUSPRO® multi layer coating provides outstanding resistance against road salt, humidity, solvents and other corrosive elements.

- Exceptional corrosion resistance
- Excellent acid (SO₂) resistance
- Bonded multi layer coating to resist abrasion

Typical RUSPRO® coating composition:
4.0 microns (0.00016") zinc plating
1.0 microns (0.00004") phosphate
5.0 microns (0.0002") ceramic top coat

Colour: silver / blue / white

Salt Spray Resistance (ASTM B117 - 03)
1,000 hours (5-10% red rust)

Kesternich Test DIN 50028 - (2.0 liter SO₂)
15-20 cycles (<10% red rust)

PLEASE NOTE:

Items may not be exactly as depicted in this price list.

The technical data shown in this price list are correct at the time of publishing.

For the most up to date information and SDS please visit our website at www.ucanfast.com.

UCAN FASTENING PRODUCTS

Established in 1967 by Harry Weitz, UCAN FASTENING PRODUCTS has been supplying high quality masonry and metal fasteners to the construction industry for over 50 years. With his extensive technical background in construction and architecture, Harry has always possessed a keen interest in fastener design, function and application.

Starting out as a wholesale distributor of innovative fastening products, made in the USA and Europe, UCAN was instrumental in bringing wedge anchors, concrete screws and galvanized spiral nail anchors to the Canadian market in the 1950s and 60s. Harry personally developed the EP932 tie wire anchor, which reduced installation time by 50%, as well as UCAN SCRU-IT®'s unique and efficient scalloped cutting thread. These fasteners gained immediate success in the marketplace.


From its' humble beginnings in part of a cramped warehouse, UCAN currently operates from an efficient 35,000 sq ft facility in Toronto.

UCAN's tight knit team of experienced, caring and knowledgeable outside and inside employees, provide an unrivalled level of customer service. Most orders are shipped the day they are received and order fill rates generally exceed 97%. Also key to UCAN's success is the company's philosophy of constant product improvement through R&D and strict quality control at all stages of production.



UCAN remains a family owned business. While still involved at UCAN, Harry has passed the reins of the daily operation to his son, Jeremy who has been working at UCAN for over 30 years.

Jeremy and Harry Weitz

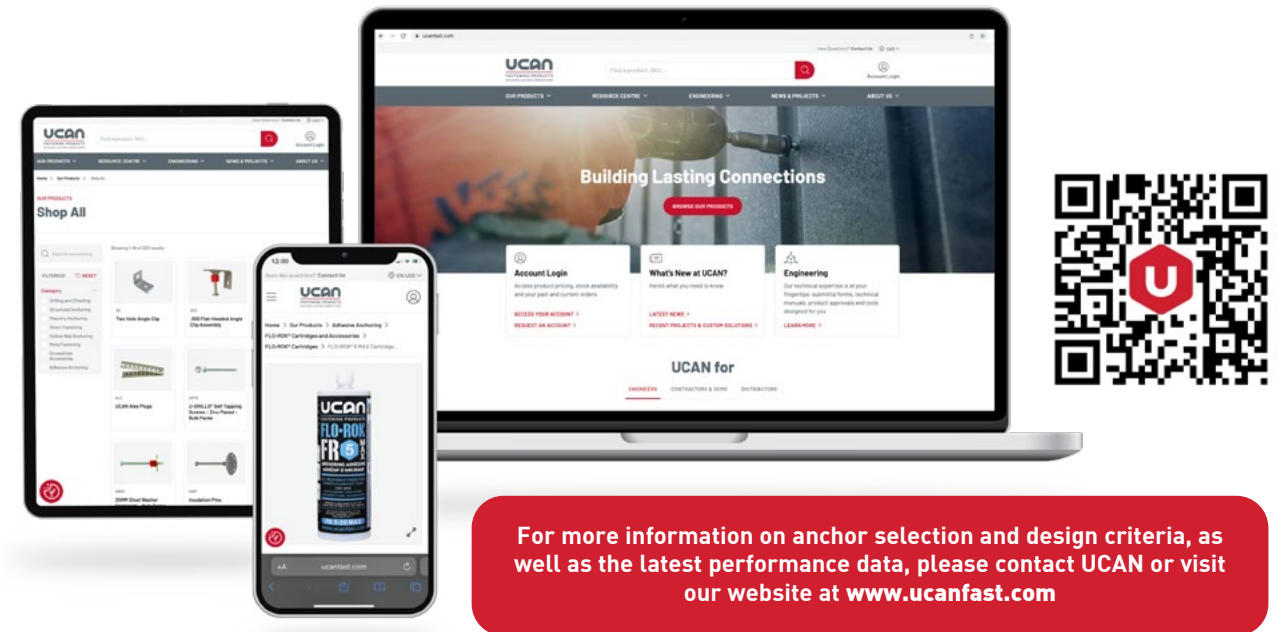

For more information on anchor selection and design criteria, as well as the latest performance data, please contact UCAN or visit our website at www.ucanfast.com

DISCLAIMER OF WARRANTIES AND LIABILITY

UCAN Fastening Products (UCAN) accepts no responsibility in case of any damage, loss, or injury, direct, indirect, incidental or consequential that results from the use of, or the inability to use, the text and technical data contained in the current or any subsequent editions and/or versions of the price list, technical manual or any other UCAN publications. All recommendations or suggestions for use of UCAN products are made without guarantee. Furthermore, UCAN accepts no responsibility for the performance of its products since the conditions of use are not under its control. Goods proved to be defective will be replaced, but UCAN accepts no responsibility beyond the cost of the goods supplied. Furthermore, UCAN accepts no responsibility in case of damage that results from non-compliance with the manufacturer's installation instructions, improper sizing of anchor fastening by customer, inadequate load bearing properties of anchoring base material, improper applications, or any other factor not brought to the prior attention of UCAN.

Except as provided in this clause, UCAN accepts no liability with respect to delay in delivery or any injury, damage or loss resulting from the use of its products.

Limitation of damages – UCAN will not be liable to DISTRIBUTOR for loss of future sales, loss of profits or goodwill, loss of use or incidental, indirect, consequential or special damages. UCAN's liability under this agreement, including its indemnification obligations, will not individually or in the aggregate exceed the amounts paid to UCAN by DISTRIBUTOR for the products giving rise to such liability.

EXCEPT FOR THE APPLICABLE LIMITED WARRANTY, UCAN MAKES NO REPRESENTATION OR WARRANTY, EXPRESS OR IMPLIED (INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT) CONCERNING ANY PRODUCT, AND ALL OTHER GUARANTEES, WARRANTIES, CONDITIONS AND REPRESENTATIONS, EITHER EXPRESS OR IMPLIED, ARE EXCLUDED



BUILDING LASTING CONNECTIONS



155 Champagne Drive, Unit 10
Toronto, Ontario, M3J 2C6
Tel.: 416.631.9400
Fax: 416.631.9426
Email: sales@ucanfast.com

www.ucanfast.com

©2021 UCAN FASTENING PRODUCTS

