

metabo *HPT*



2022 Commercial Concrete & Masonry Catalog

- Rotary & Demolition Hammers
- Cordless Nailers
- Cutting, Sawing & Grinding
- Cordless Drilling & Fastening

SAME TOOLS NEW NAME

*Metabo HPT is the new brand name for Koki Holdings America
formerly part of the Hitachi Group*



Metabo HPT is the new brand name for Koki Holdings America, formerly part of the Hitachi group.

Over the last 70 years, we have become a trusted partner for our customers who rely on our tools every day for their toughest jobs. Metabo HPT continues this legacy. Products retain the same brand identity: same color, same model numbers, same warranties and the same battery interchangeability.

We are committed to continuous innovation and improvement through learning from experience. We support construction industry professionals in doing what they do best—building things that last.

We put experience at the core of our brand philosophy because experience is the best teacher.

Meet Metabo HPT.



metabo **HPT**

INNOVATIVE SOLUTIONS

***DESIGNED TO MEET THE DEMANDING JOBSITE
REQUIREMENTS OF COMMERCIAL CONCRETE
CONTRACTORS***



WHY CHOOSE METABO HPT ROTARY & DEMOLITION HAMMERS?

KEY AC BRUSHLESS BENEFITS*:



**INDUSTRY FIRST POWER TOOL
WITH AC BRUSHLESS MOTOR**

- No brushes to replace or repair for less downtime and lower maintenance
- Cool running motors provide longer durability
- Smaller & lighter motor with better tool balance
- Stable power supply with IC chip control allows longer extension cords & use of generators

VARIABLE SPEED SELECTOR & DIAGNOSTIC BENEFITS:

- Speed selector and Overload diagnostic indicator provides the optimum impact and rotation while protecting the tool from overloads

**Applies to models: DH40MEY, DH45MEY, DH52MEY, DH45ME, H45MEY, H60MEY*

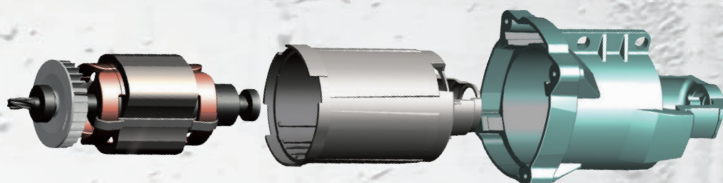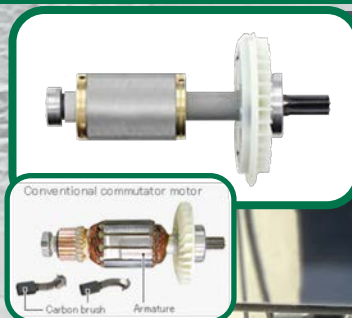

MOTOR

PLASTIC STATOR HOLDER

ALUMINUM DIE-CAST BODY

ALUMINUM HOUSING BODY* BENEFITS:

**HIGH STRENGTH ALUMINUM DIE CAST WITH
GLASS REINFORCED RESIN EXTENDS TOOL LIFE**

- Quickly dissipates tool generated heat
- Provides less vibration to the motor
- Provides extra protection against impacts & tool drops



**Applies to models: DH40MEY, DH45MEY, DH45ME, DH52MEY, H45MEY, H60MEY, H65SD3, H90SG*

USER VIBRATION PROTECTION:


Counterweight with dual springs allows:*

- Longer operator runtime without fatigue
- Reduced risk of vibration related injuries and nerve damage




**Applies to models: DH40MEY, DH45MEY, DH52MEY, DH28PFY, H45MEY, H60MEY, H90SG, H65SD3*

35%
VIBRATION REDUCTION*

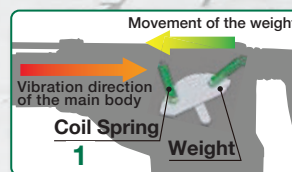

UVP combines internal vibration absorbers and shock absorbing handles for reduced vibration and improved operating efficiency.

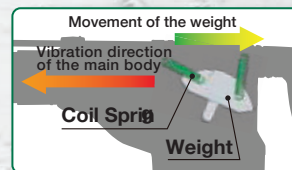

Dynamic vibration absorber reduces the vibration from demolition by moving a weight and spring in the opposite direction to the movement of the hammer

**Comparison between DH45ME and DH45MEY*

IMPACT ENERGY ACCURATELY MEASURED IN FT-LBS USING MODERN EPTA PROCEDURES

SDS MAX ROTARY HAMMERS



DH36DMAQ2

Go Multivolt: Combine performance, reliability, and comfort
1-9/16" MultiVolt™ Cordless SDS Max Rotary Hammer (Bare Tool)

36V

MULTI VOLT



BRUSHLESS

RFC
REACTIVE FORCE CONTROL

LVH



- MultiVolt: It's Cordless. It's Coded. It's Both!
- Powered by MultiVolt™ 36V battery or optional AC adapter (ET36A). See page 32 for details
- 360° side handle provides additional comfort and control
- Quick release bit system for fast and simple bit replacements for different applications
- Low Vibration Handle (LVH) for reduced user fatigue



RFC

Reactive Force Control senses tool overload and stops the tool from rotation in instances where there may be a bit snag or an overload application



MODE SELECTOR

2-Modes: Hammer and Hammer Drill for flexibility within a range of applications

Specifications

| | |
|--------------------|-----------------|
| Volts | 36 |
| Bit Shank | SDS Max |
| Capacity | 1-9/16" |
| No-Load Speed | 260-590 RPM |
| Impact Rate | 1,420-2,860 BPM |
| Impact Energy | 5.2 ft-lbs |
| Length | 19-17/32" |
| Weight (w/Battery) | 17.4 lbs |

Includes

| | |
|-------------|--------|
| Hard Case | 373391 |
| Grease | 981840 |
| Depth Gauge | 971786 |
| Side Handle | 330209 |



DH40MC

The "All-Arounder": Your everyday SDS Max tool for most concrete applications
1-9/16" SDS Max Rotary Hammer



115452M

115453M

For up to 3-3/8" drill bits

For up to 6" core bits

- Powerful 10 amp motor for tough jobsite applications
- 5.2 ft-lbs. Impact Energy for busting through hard material
- 2,800 Full Load Max impact rate to quickly remove stubborn materials
- 620 No-Load RPM
- Needle Pin Slip clutch
- 360° side handle
- Soft over-molded handle

Capacities

| | |
|-----------|---------|
| Core Bit | 4-1/8" |
| Drill Bit | 1-9/16" |

Specifications

| | |
|---------------------|-----------------------|
| Amps | 10 |
| Shank | SDS Max |
| Impact Energy | 5.2 ft-lbs |
| No-Load Speed | 250-620 RPM |
| Impact Rate | 1,430-2,800 BPM |
| Full-Load | 16.5 m/s ² |
| Tri-Axial Vibration | |
| Length | 17-3/5" |
| Weight | 15.6 lbs |

Includes

| | |
|-------------------|--------|
| Depth Stopper Rod | 971786 |
| Side Handle | 330209 |
| Hammer Grease | 981840 |
| Carrying Case | 371122 |



DH40MEY

The "Pro" 1-9/16" Tool: Combine performance, durability, and comfort
1-9/16" SDS Max Rotary Hammer with AHB and UVP

AC BRUSHLESS

AHB
ALUMINUM HOUSING BODY

UVP
USER VIBRATION PROTECTION



115452M

115453M

For up to 3-3/8" drill bits

For up to 6" core bits

- Ultra efficient low-maintenance AC Brushless motor that permits the use of extra-long extension cords with reduced power loss
- Superior performance when using a generator due to an internal inverter circuit that regulates uneven power supply
- UVP (User Vibration Protection) technology greatly reduces vibration for comfortable extended use and fewer vibration related injuries
- AHB (Aluminum Housing Body) construction significantly enhances the internal and external durability of the tool

Capacities

| | |
|-----------|---------|
| Core Bit | 4-1/8" |
| Drill Bit | 1-9/16" |

Specifications

| | |
|---------------------|----------------------|
| Amps | 11.3 |
| Shank | SDS Max |
| Impact Energy | 6.4 ft-lbs |
| No-Load Speed | 620 RPM |
| Impact Rate | 2,800 BPM |
| Full-Load | 8.0 m/s ² |
| Tri-Axial Vibration | |
| Length | 18-25/32" |
| Weight | 16.5 lbs |

Includes

| | |
|-------------------|--------|
| Depth Stopper Rod | 971786 |
| Side Handle | 330209 |
| Hammer Grease | 981840 |
| Carrying Case | 337594 |



DH45ME

Affordable performance & durability for large diameter applications
1-3/4" SDS Max Rotary Hammer with AHB, Non-UVP

AC BRUSHLESS

AHB
ALUMINUM HOUSING BODY



115452M

115453M

For up to 3-3/8" drill bits

For up to 6" core bits

- Ultra efficient low-maintenance AC Brushless motor that permits the use of extra-long extension cords with reduced power loss
- Superior performance when using a generator due to an internal inverter circuit that regulates uneven power supply
- AHB (Aluminum Housing Body) construction significantly enhances the internal and external durability of the tool

Capacities

| | |
|-----------|----------|
| Core Bit | 4-29/32" |
| Drill Bit | 1-3/4" |

Specifications

| | |
|---------------------|-----------------------|
| Power Input | 1,500 W |
| Shank | SDS Max |
| Impact Energy | 9.0 ft-lbs |
| No-Load Speed | 120-270 RPM |
| Impact Rate | 1,200-2,500 BPM |
| Full-Load | 13.5 m/s ² |
| Tri-Axial Vibration | |
| Length | 21-1/16" |
| Weight | 19.8 lbs |

Includes

| | |
|-------------------|--------|
| Depth Stopper Rod | 971786 |
| Side Handle | 330209 |
| Hammer Grease | 981840 |
| Carrying Case | 339060 |



DH45MEY

The "Pro" 1 3/4" Tool: Combines performance, durability, and comfort

1-3/4" SDS Max Rotary Hammer with AHB and UVP

AC BRUSHLESS



Low Vibration!

- Ultra efficient low-maintenance AC Brushless motor that permits the use of extra-long extension cords with reduced power loss
- Superior performance when using a generator due to an internal inverter circuit that regulates uneven power supply
- UVP (User Vibration Protection) technology greatly reduces vibration for comfortable extended use and fewer vibration related injuries
- AHB (Aluminum Housing Body) construction significantly enhances the internal and external durability of the tool

| Specifications | |
|-------------------------------|----------------------|
| Power Input | 1,500 W |
| Shank | SDS Max |
| Impact Energy | 9.0 ft-lbs |
| No-Load Speed | 120-270 RPM |
| Impact Rate | 1,200-2,500 BPM |
| Full-Load Tri-Axial Vibration | 8.8 m/s ² |
| Length | 21-1/16" |
| Weight | 20.9 lbs |

| Includes | |
|-------------------|--------|
| Depth Stopper Rod | 971786 |
| Side Handle | 330209 |
| Hammer Grease | 981840 |
| Carrying Case | 339060 |



Dust Collection Attachments page 10

| Capacities | |
|------------|----------|
| Core Bit | 4-29/32" |
| Drill Bit | 1-3/4" |



DH52MEY

The "Pro Monster": Go after your ultimate applications!

2-1/16" SDS Max Rotary Hammer with AHB and UVP

AC BRUSHLESS



Low Vibration!

- Highest impact energy and largest core bit capacity for the most demanding rotary hammer applications
- Ultra efficient low-maintenance AC Brushless motor that permits the use of extra-long extension cords with reduced power loss
- Superior performance when using a generator due to an internal inverter circuit that regulates uneven power supply
- UVP (User Vibration Protection) technology greatly reduces vibration for comfortable extended use and fewer vibration related injuries
- AHB (Aluminum Housing Body) construction significantly enhances the internal and external durability of the tool

| Specifications | |
|-------------------------------|----------------------|
| Power Input | 1,500 W |
| Shank | SDS Max |
| Impact Energy | 13.9 ft-lbs |
| No-Load Speed | 110-260 RPM |
| Impact Rate | 1,000-2,200 BPM |
| Full-Load Tri-Axial Vibration | 9.8 m/s ² |
| Length | 23-1/32" |
| Weight | 25.3 lbs |

| Includes | |
|-------------------|--------|
| Depth Stopper Rod | 971786 |
| Side Handle | 330209 |
| Hammer Grease | 981840 |
| Carrying Case | 339066 |



Dust Collection Attachments page 10

| Capacities | |
|------------|---------|
| Core Bit | 6-1/4" |
| Drill Bit | 2-1/16" |



DH38YE2

Go spline with a field proven tool!

1-1/2" Spline Shank Rotary Hammer, 2 Mode



- Delivers high-speed drilling and forcible chipping in a more ergonomic, lightweight tool body that produces less noise and vibration
- Mode selector for hammer-only or hammer/drill modes
- Sealed grease system ensures minimal maintenance
- Dust-resistant cover protects tool for extended maintenance free operation
- Safety clutch improves user protection in the event of a bound bit

| Specifications | |
|----------------|------------|
| Amps | 8.4 |
| Shank | Spline |
| Impact Energy | 4.0 ft-lbs |
| No-Load Speed | 620 RPM |
| Impact Rate | 2,800 BPM |
| Length | 16-11/32" |
| Weight | 14.1 lbs |

| Includes | |
|---------------|--------|
| Side Handle | 330209 |
| Depth Stopper | 971786 |
| Dust Cover | 993245 |
| Case | 331965 |



Dust Collection Attachments page 10

| Capacities | |
|------------|----------|
| Core Bit | 4-13/64" |
| Drill Bit | 1-1/2" |



DH52MEY
2-1/16" SDS Max
Rotary Hammer w AHB and UVP

SDS PLUS ROTARY HAMMERS



DH18DBLQ4

Lightweight for overhead applications - Optional HEPA dust collection attachments
18V Cordless SDS Plus Rotary Hammer (Tool Body Only)

BRUSHLESS



- Compatible with all Metabo HPT 18V and MultiVolt™ Lithium Ion slide type batteries for fade free power (batteries and charger sold separately)
- Features Brushless Motor Technology for more run time, increased power and extended durability with essentially no maintenance
- Reactive Force Control to ensure user safety
- On-Tool LED to illuminate dimly lit work areas



Dust Collection Attachments page 10

Capacities

| | |
|----------|---------|
| Steel | 1/2" |
| Wood | 1-1/16" |
| Concrete | 1" |
| Core Bit | 2" |

Specifications

| | |
|--------------------------|-------------------|
| Volts | 18 |
| Shank / Modes | SDS Plus / 3 |
| Impact Energy | 1.6 ft-lbs |
| No-Load Speed | 0-1,050 RPM |
| Impact Rate | 0-3,950 BPM |
| Battery Type | Lithium Ion Slide |
| Length | 13-13/16" |
| Weight (without battery) | 6.8 lbs |

Includes

| | |
|-------------|--------|
| Side Handle | 335273 |
| Depth Gauge | 303709 |

Optional

| | |
|--|----------|
| 18V Li-Ion Slide Battery (BSL1830) | 339882M |
| 18V Li-Ion Slide Battery (BSL1815X) | 333353M |
| 14.4V-18V Li-Ion Universal Rapid Charger | UC18YFSL |
| Backwards Compatible w/ 372121M | |



DH36DPA

Go Multivolt: Super fast drilling for Pro use with 36V power
36V MultiVolt SDS Plus 1-1/8" Rotary Hammer

36V



BRUSHLESS



- GO ALL DAY: Can be powered by a 36V MultiVolt battery OR MultiVolt AC Adapter with cord (ET36A, see page 32 for details)
- Reactive Force Control senses tool overload and stops the tool from rotation in instances where there may be a snag or an overload application
- Superior Performance - Drills like corded
- Approximately 120 holes per charge with 1-1/8" bit
- Ergonomically designed handle and drill bit head alignment making applying force easier
- Mode Selector - 3 Modes: Hammer Drilling, Chipping, and Drilling



Dust Collection Attachments page 10

Specifications

| | |
|----------------------------|--------------|
| Volts | 36 |
| Shank / Modes | SDS Plus / 3 |
| Capacity | 1-1/8" |
| No-Load Speed | 0-1,100 RPM |
| Impact Rate | 0-4,300 BPM |
| Impact Energy | 2.2 ft-lbs |
| Length | 14.5" |
| Weight w/ 4.0Ah MV Battery | 12.0 lbs |

Includes

| | |
|---|----------|
| 18V/36V MultiVolt 4.0Ah/8.0Ah Lithium-Ion Battery | 372121M |
| Rapid Charger w/ USB Port | UC18YSL3 |
| Case | 337134 |
| Depth Gauge | 303709 |
| Battery Cover | 329897 |



DH26PF

Good all-around performance and value
1" SDS Plus Rotary Hammer, 3 Mode, VSR



- Fast drilling speed
- Air channel, ball bearing construction and internal pressure control mechanism adapted from larger hammers to improve durability and performance in demo and chipping mode
- New larger side mounted change lever makes mode changes easy and quick, even with gloves
- One push bit mounting makes changing bits and applications quick and easy



Dust Collection Attachments page 10

Capacities

| | |
|--------------------|----|
| Concrete/Solid Bit | 1" |
| Concrete/Core Bit | 2" |

Specifications

| | |
|---------------|-------------|
| Amps | 7.5 |
| Shank | SDS Plus |
| Impact Energy | 2.0 ft-lbs |
| No-Load Speed | 0-1,100 RPM |
| Impact Rate | 0-4,300 BPM |
| Weight | 6.7 lbs |

Includes

| | |
|--------------|--------|
| Side Handle | 335273 |
| Depth Gauge | 310331 |
| Plastic Case | 370155 |



DH28PFY

Super-fast drilling with vibration protection for all day pro use
1-1/8" SDS Plus Rotary Hammer with UVP, 3 Mode, VSR

UVP
USER VIBRATION PROTECTION



- UVP (User Vibration Protection) technology greatly reduces vibration for comfortable extended use and fewer vibration related injuries
- Fastest drilling speed on the market
- Air channel, ball bearing construction and internal pressure control mechanism adapted from larger hammers to improve durability and performance in demo and chipping mode
- New larger side mounted change lever makes mode changes easy and quick, even with gloves



Dust Collection Attachments page 10

Specifications

| | |
|---------------|-------------|
| Amps | 8.0 |
| Shank | SDS Plus |
| Impact Energy | 2.2 ft-lbs |
| No-Load Speed | 0-1,100 RPM |
| Impact Rate | 0-4,300 BPM |
| Weight | 6.9 lbs |

Includes

| | |
|--------------|--------|
| Side Handle | 335273 |
| Depth Gauge | 310331 |
| Plastic Case | 370155 |

Capacities

| | |
|--------------------|--------|
| Concrete/Solid Bit | 1-1/8" |
| Concrete/Core Bit | 2" |



H41MB2
SDS Max Demolition Hammer

Lightweight and maneuverable. Great for light chipping & tile removal

H41MB2

11lb SDS Max Chipping Hammer



115463M

Dust Collection Attachment
page 10

- Variable lock mechanism for quick and easy chisel adjustment
- Compact and light weight for extended use with less fatigue
- Reduced motor vibration through increased rigidity in the motor housing
- Efficient cooling of the cylinder case for longer tool life
- LVH (Low Vibration Handle) for reduced worker fatigue

Specifications

| | |
|---------------|------------|
| Amps | 8.4 |
| Shank | SDS Max |
| Impact Energy | 5.2 ft-lbs |
| Impact Rate | 3,000 BPM |
| Length | 16-13/16" |
| Weight | 11.2 lbs |

Includes

| | |
|-------------|---------|
| Side Handle | 317103 |
| Bull Point | 724963M |
| Case | 326511 |



H45MEY

AC Brushless and User Vibration Protection for extended use by the Pros 16lb SDS Max Demolition Hammer with AHB and UVP



115463M

Dust Collection Attachment
page 10

- Ultra efficient low-maintenance AC Brushless motor that permits the use of extra-long extension cords with reduced power loss
- Superior performance when using a generator due to an internal inverter circuit that regulates uneven power supply
- UVP (User Vibration Protection) technology greatly reduces vibration for comfortable extended use and fewer vibration related injuries
- AHB (Aluminum Housing Body) construction significantly enhances the internal and external durability of the tool
- 4 stage electronic speed control matches chipping speed with application
- Protection against electronic overload, overheating, and irregular voltage with onboard indicator lights that prevent tool damage

Specifications

| | |
|---------------------|----------------------|
| Amps | 11.3 |
| Shank | SDS Max |
| Impact Energy | 7.4 ft-lbs |
| Impact Rate | 1,430-2,850 BPM |
| Full-Load | 8.0 m/s ² |
| Tri-Axial Vibration | |
| Weight | 16.1 lbs |

Includes

| | |
|-------------|---------|
| Side Handle | 317103 |
| Bull Point | 724963M |
| Case | 326511 |



H60MEY

For heavy demolition, outstanding impact energy, performance, and comfort 27lb SDS Max Demolition Hammer with AHB and UVP



115463M

Dust Collection Attachment
page 10

- Ultra efficient low-maintenance AC Brushless motor that permits the use of extra-long extension cords with reduced power loss
- Superior performance when using a generator due to an internal inverter circuit that regulates uneven power supply
- UVP (User Vibration Protection) technology greatly reduces vibration for comfortable extended use and fewer vibration related injuries
- AHB (Aluminum Housing Body) construction significantly enhances the internal and external durability of the tool
- 4 stage electronic speed control matches chipping speed with application
- Protection against electronic overload, overheating, and irregular voltage with onboard indicator lights that prevent tool damage

Specifications

| | |
|---------------------|-----------------------|
| Amps | 14.0 |
| Shank | SDS Max |
| Impact Energy | 13.3 ft-lbs |
| Impact Rate | 1,500-2,100 BPM |
| Full-Load | 11.0 m/s ² |
| Tri-Axial Vibration | |
| Weight | 26.9 lbs |

Includes

| | |
|-------------|---------|
| Side Handle | 317103 |
| Bull Point | 724963M |
| Case | 326511 |



H65SD3

Highest impact energy in its class with impressive vibration reduction
44lb 1-1/8" Hex Demolition Hammer with AHB and UVP



- Powerful 1,240 watt input motor produces a full load impact rate of 1,400 BPM
- UVP (User Vibration Protection) technology greatly reduces vibration for comfortable extended use and fewer vibration related injuries
- AHB (Aluminum Housing Body) construction significantly enhances the internal and external durability of the tool
- Large switch with lock-on feature for easy operation and less fatigue
- 360° cushioned auxiliary handle located between tool body and bit cylinder to provide optimal grip, control, and comfort

| Specifications | |
|----------------|-------------|
| Amps | 10.8 |
| Shank | 1-1/8" Hex |
| Impact Energy | 25.0 ft-lbs |
| Impact Rate | 1,400 BPM |
| Length | 33-3/8" |
| Weight | 44.3 lbs |

| Includes | |
|----------------------|--------|
| Plastic Rolling Case | 339664 |



H90SG


Powerful breaking performance while gentle on the user
70lb 1-1/8" Hex Breaker with UVP and AHB



- 42.6 ft-lbs (70J) of impact energy
- UVP (User Vibration Protection) technology greatly reduces vibration for comfortable extended use and fewer vibration related injuries
- Vibration absorbing main handle produces low full-load vibration, resulting in less user fatigue and greater productivity
- AHB (Aluminum Housing Body) construction significantly enhances the internal and external durability of the tool
- Improved hammering mechanism more efficiently transfers energy to the bit for increased demolition performance
- Features a sealed grease system and auto-stop brushes for minimal maintenance and durability

| Specifications | |
|----------------|---------------------|
| Amps | 15 |
| Shank | 1-1/8" Hex |
| Bit Types | Collared or Slotted |
| Impact Energy | 42.6 ft-lbs |
| Impact Rate | 1,000 BPM |
| Weight | 70.5 lbs |

| Includes | |
|--------------------|---------|
| 6mm Hex Bar Wrench | 872422 |
| Hammer Truck | 207011M |

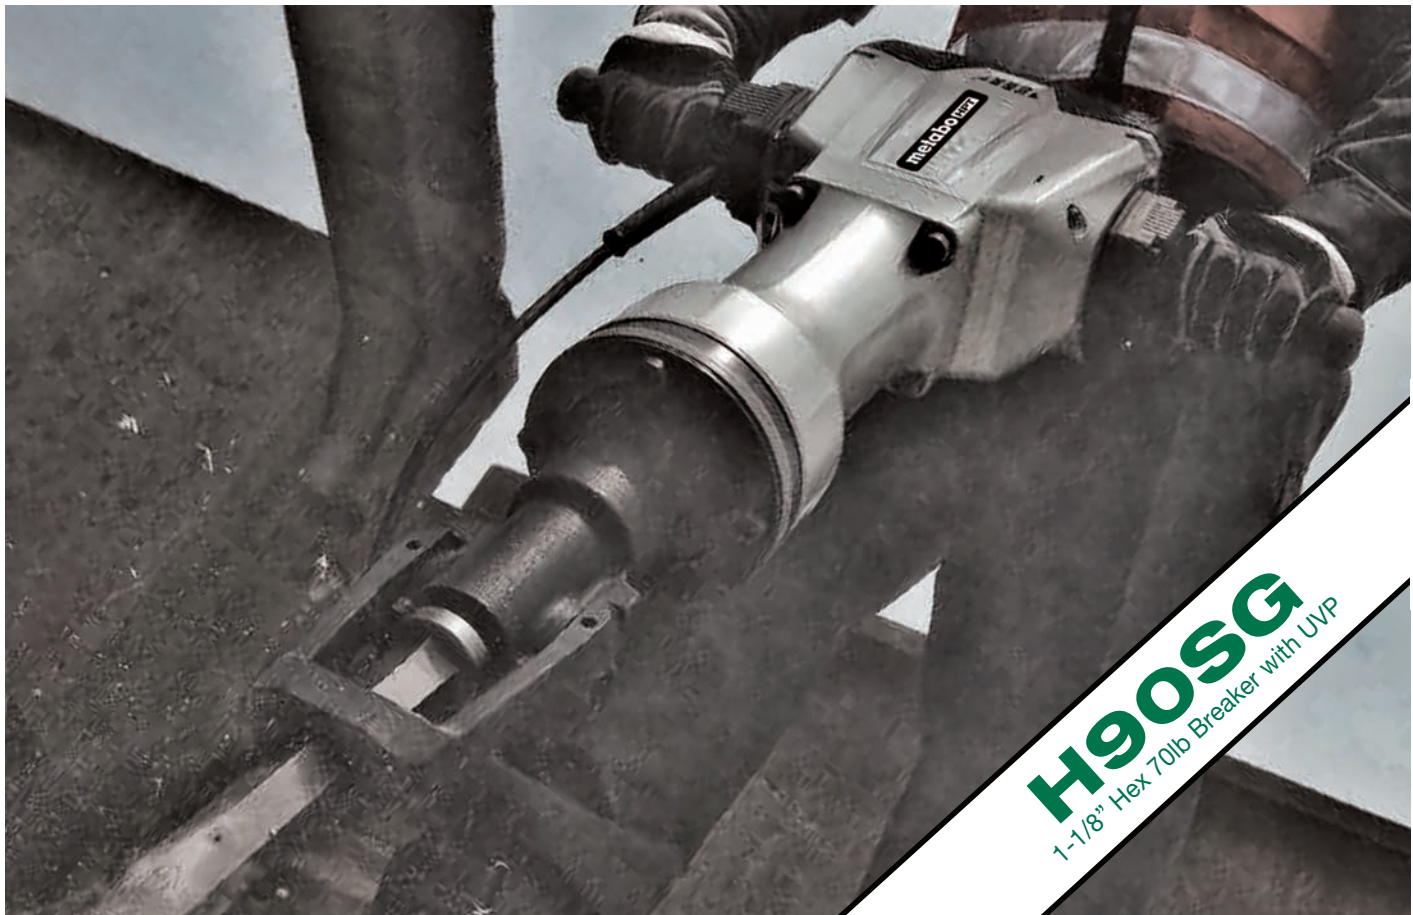

H90SG
 1-1/8" Hex 70lb Breaker with UVP



RP350YDH

Superior dust containment with OSHA compliant advanced filter cleaning

9.2 Gallon Wet/Dry Commercial HEPA Vacuum



- 9.2 Gallon durable polyethylene tank
- Powerful 130 CFM of suction power for material collection
- Electromagnetic dual filter cleaning
- Current control knob maximizes suction
- 2 HEPA Filters that comply w/ OSHA regulation
- Large rear wheels & lockable front casters
- Water level detection with auto shut-off to prevent overflow
- Power tool actuated outlet controls the on/off operation of the vacuum with the power tool switch
- Electronic after-run feature clears the hose of debris when the vacuum is shut down
- Sequential Dual Filter cleaning: Maintains dust containment by alternating filters during cleaning

| Specifications | |
|------------------------------|----------|
| Amps | 11 |
| Tank Material Capacity (Wet) | 5.8 gal |
| (Dry) | 6.6 gal |
| Suction | 130 CFM |
| Tool Actuated Outlet | Yes |
| Automatic Filter Cleaning | Yes |
| Weight | 37.5 lbs |

| Includes | |
|-------------------------------------|--------|
| (2) HEPA Filters | 338634 |
| Poly Bag with closures | 750463 |
| Sealing Plug for Tank | 338651 |
| Step Down Reducer | 337527 |
| 10' Hose | 373220 |
| Onboard Accessory Caddy (installed) | 338653 |

338651



Replacement HEPA Filters

115453M



5pc Pack Replacement Poly Bags

338633



Polyester Filter Cartridge

370132



Fleece Filter Bags (5pcs)

VACUUM ACCESSORIES



Compatible With RP350YDH vacuum

338651
Replacement HEPA Filter Cartridge (2 Pack)

- OSHA reg. HEPA filter
- Removes harmful air particles



Compatible With RP350YDH vacuum

338633
Polyester Filter Cartridges

- Dust Class M
- Also suitable for absorbing graphite/toner and liquids



Compatible With RP350YDH vacuum

750463
Replacement Poly Bag

- Powered by Li-Ion Battery
- HEPA filter
- 12.36 CFM airflow rate



Compatible With RP350YDH vacuum

370132
Fleece Filter Bags (5 pcs)

- Non-woven filter bags
- Contains harmful particles



Compatible w/ Metabo HPT Spline + SDS Max Rotary Hammers

115453M
Core Bit Dust Collection Attachment

- Attaches to surfaces with suction provided by vacuum
- Accepts core bits between 2-3/4" and 6-7/8"



Compatible w/ Metabo HPT Spline and SDS Max Rotary Hammers

115452M
Dust Collection Attachment

- Attaches to surfaces with suction provided by vacuum
- Does not accept bits over 3-3/8"



Compatible With RP350YDH vacuum

337527
Reducer Sleeve

- Adapt between multiple attachments
- Prevent loss of power



Compatible w/ any Metabo HPT SDS Plus Rotary Hammer

115451
Dust Collection Attachment

- Attaches to surfaces with suction provided by vacuum
- Does not accept bits over 9/16"



Compatible w/ Metabo HPT Hammer Drills & SDS Plus Rotary Hammers

308776
Dust Collection Attachment

- Built-in depth of drill adjustment
- Vacuum connection



Compatible w/ Metabo HPT SDS Max Demolition Hammers

115463M
SDS Max Demolition Hammer Dust Collection Attachment

- Attaches to the tool and vacuum
- Includes vacuum connection



Compatible With RP350YDH vacuum

338634
Replacement stopper

- Prevent accidental suction
- Prevent leakage and spills



Compatible With RP350YDH vacuum


373220
Replacement 1.35"x10.5' Vacuum Hose

- Compatible with attachments
- Maintains solid seal

REBAR CUTTER / BENDERS



36V MultiVolt™ Rebar Bender/Cutter
NEW DUAL POWER: CORDLESS/CORDED




- Powered by MultiVolt™ 36V battery or optional AC adapter (ET36A)
- Manual mode allows for minor adjustments

| | | |
|-----------|-------------|------------------------------|
| Cuts | 2.6 Seconds | 270 Cuts Per Charge* |
| 90° Bends | 1.9 Seconds | 520 Bends at 90° Per Charge* |

(*36V, 4.0Ah MultiVolt™ Battery)

VB3616DA




2 YEAR LEAD BATTERY WARRANTY
1 YEAR CHARGER WARRANTY

36V



BRUSHLESS

VB3616DA

The world's only cordless tool that makes bending/cutting rebar easy, portable, & fast
36V MultiVolt™ Cordless Rebar Bender/Cutter



- MultiVolt™ It's Cordless, It's Coded, It's BOTH!
- Powered by MultiVolt™ 36V battery or optional AC adapter (ET36A). See page 32 for details
- Uniformly bends up to No.5 (3/8", 1/2", 5/8") Grade 60 rebar at a maximum angle of 180 degrees
- Approximately 270 cuts per charge (36V 4.0Ah)
- Approximately 520 bends at 90° per charge (36V 4.0Ah)
- Manual mode allows for minor adjustments
- Available accessory rollers for different radius bends:
-D62: 319714
-D50: 321446
-D38: 321445

Capacities

Rebar Up to 5/8" (#5) Grade 60

Specifications

| | |
|-------------------------|----------------------|
| Cut Time | 2.6 Sec |
| Bend Time | 3.8 Sec |
| Switch | Variable Speed |
| Number of Bends at Once | #3-3 #4-2 #5-1 |
| Weight (w/ Battery) | 42.3 lbs |

Includes

| | |
|------------------------------------|--------------------|
| (2) 36V 4.0Ah MultiVolt™ Batteries | 372121M (BSL36B18) |
| Deflection Guard | 320914 |
| 1 Pair Cutter Set (on tool) | 319706 |
| 4mm Wrench (on tool) | 319699 |
| Carrying Case | |
| Rapid Charger | UC18YSL3 |

Optional

MultiVolt™ AC Adapter ET36A



VB16Y

World's most cost effective & productive tool for bending/cutting up to #5 Rebar
Rebar Bender/Cutter



- Uniformly bends up to No.5 (3/8", 1/2", 5/8") Grade 60 rebar at a maximum angle of 180 degrees
- Variable speed trigger with safety lock provides manual-like precision and control over the bending speed
- Extremely low profile design (18.4"L x 8.5"H x 9.1"W), yet extremely stable
- Portable design facilitates maneuverability and ease of use
- Available accessory rollers for different radius bends:
-D62: 2.5" Center Roller Radius - 319714
-D50: 2.0" Center Roller Radius - 321446
-D38: 1.5" Center Roller Radius - 321445

Specifications

| | |
|-------------------------|----------------------|
| Amps | 8.0 |
| Cut Time | 3.1 sec |
| Bend Time | 5.1 sec |
| Number of Bends at Once | #3-2 #4-1 #5-1 |
| Capacity | 5/8" Grade 60 |
| Switch | Variable Speed |
| Weight | 39.7 lbs |

Includes


| | |
|-----------------------------|--------|
| Deflection Guard | 320914 |
| 1 Pair Cutter Set (on tool) | 319706 |
| 4mm Wrench (on tool) | 319699 |

Capacities

Rebar Up to 5/8" (#5) Grade 60

WHY METABO HPT CORDLESS NAILERS?

Featuring Metabo HPT's Air Spring Drive System

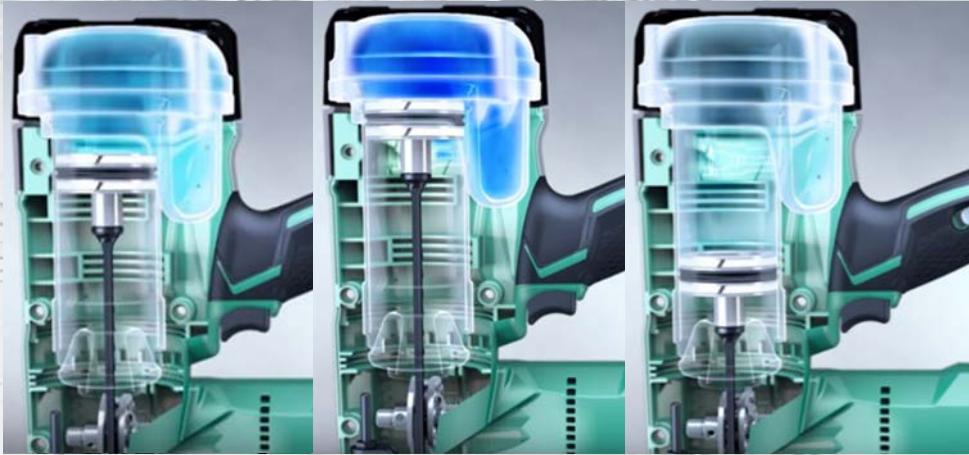

1) At Rest

2) Start of Drive Cycle

3) Driving

FEELS LIKE PNEUMATIC

Uses Compressed Air to Drive Each Nail

- Zero ramp up time
- 2-3 nails per second
- Recoil that feels like a pneumatic nailer
- No refilling of air tank required*

* Air tank does not require refill unless there is a malfunction of material components that require service center attention

KEY AIR SPRING DRIVE BENEFITS

- Cylinder structure and spring compression system reproduces just like Pneumatic nailer use feeling
- Zero ramp up time & quicker response time between drives (2-4 nails per second)
- Fast speed technology allows for a massive productivity boost vs. hand driving Duplex nails
- Stable nailing power delivers consistent nail embedment with professional finish look

MULTIVOLT BENEFITS

- High power battery (36V) which optimizes the tool performance up to equivalent AC tool performance
- 36V MultiVolt batteries are backward compatible with Metabo-HPT 18V slide type cordless tools (4.0Ah runtime in 36V provides 8.0Ah runtime in a 18V tool)
- Multivolt batteries are operated at a temperature as low as 0°C / 32°F, providing you with peace of mind when you work in cold weather



ALL PART OF THE

MULTIVOLT SYSTEM

COMPATIBLE BATTERIES:

**Compatible with 18V nailers only

1.5AH**



COMPACT
3.0AH**



18V/5.0AH
36V/2.5AH



18V/8.0AH
36V/4.0AH



CORDLESS NAILERS

LITHIUM ION
LIFETIME
TOOL WARRANTY
2 YEAR LITHIUM BATTERY WARRANTY
1 YEAR CHARGER WARRANTY

36V
MULTI VOLT

21°
DUPLIX NAIL

PTIA 2020
TOOL INNOVATION AWARDS WINNER

BRUSHLESS


16D 8D 6D

NR3675DD

World First! Ideal for building reusable structures like concrete forms & scaffolding
36V MultiVolt™ 3-1/2" Cordless 21° Plastic Strip Duplex Nailer



- MultiVolt™: It's Cordless, It's Coded, It's BOTH!
- Powered by MultiVolt™ 36V battery or optional AC adapter (ET36A). See page 32 for details
- Air Spring Drive System delivers similar performance to a pneumatic tool
- Fires 2 nails per second
- Brushless motor for longer run time per charge, less maintenance and increased durability
- 900 Nails Per Charge
- Tool-less depth of drive
- Dry-fire lockout
- Selective actuation: Contact and sequential modes

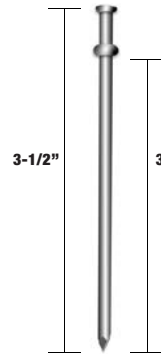

| Specifications | |
|---|-------------------|
| Volts | 36 |
| Nail Capacity | 35 |
| Magazine Angle | 21° |
| Nails Per Charge | 900 |
| Battery Type | Lithium Ion Slide |
| Weight (with BSL36A18 battery) | 10.8 lbs |
| Includes | |
| (1) 36V Compact 2.5Ah Li-Ion Battery (BSL36A18) | 371751M |
| Charger | UC18YSL3 |
| Safety Glasses | 875769 |
| Carrying Bag | 372294M |
| 3mm Hex Wrench | 943277 |
| 4mm Hex Wrench | 944458 |



- DUPLIX FASTENERS (16D, 8D, 6D)**
Provides excellent grip force with easy & quick removal for temporary wood structures
- SIMPLIFIED CONTROL PANEL**
Easy to read and select single fire or bump fire modes
- DRY FIRE LOCKOUT SYSTEM**
Prevents nailer from driving when fasteners are low
- TOOL-LESS DEPTH OF DRIVE**
Precise fastener setting

AVAILABLE DUPLIX FASTENERS:

| Item Code | Description |
|-----------|----------------------|
| 50214-6D | 2-1/4" x .131" SM BS |
| 50234-8D | 2-3/4" x .131" SM BS |
| 50312-16D | 3-1/2" x .131" SM BS |

LITHIUM ION
LIFETIME
TOOL WARRANTY
2 YEAR LITHIUM BATTERY WARRANTY
1 YEAR CHARGER WARRANTY

36V
MULTI VOLT

MC
METAL CONNECTOR NAIL


BRUSHLESS

NR3665DA

Go Cordless with easy & accurate metal connector nailing: 2 nails/second, 900/charge
36V MultiVolt™ 2-1/2" Cordless Metal Connector Nailer Kit



- MultiVolt™: It's Cordless, It's Coded, It's BOTH!
- Powered by MultiVolt™ 36V battery or optional AC adapter (ET36A). See page 32 for details
- Air Spring Drive System delivers similar feel as a pneumatic tool
- Brushless Motor Technology allows for more runtime, increased power, and extended durability with essentially no maintenance
- Zero ramp up time
- Side lock prevents accidental firing
- Pivoting hook keeps the tool within arm's reach

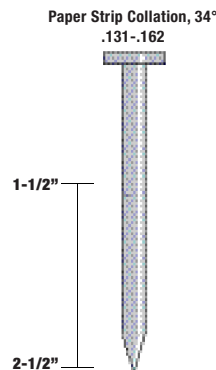

| Specifications | |
|---|-------------------|
| Volts | 36 |
| Nail Capacity | 31 |
| Magazine Angle | 34° |
| Nails Per Charge | 900 |
| Battery Type | Lithium Ion Slide |
| Weight (with BSL36A18 battery) | 10.8 lbs |
| Includes | |
| (1) 36V Compact 2.5Ah Li-Ion Battery (BSL36A18) | 371751M |
| Charger | UC18YSL3 |
| Safety Glasses | 875769 |
| Carrying Bag | 372294M |
| 3mm Hex Wrench | 943277 |
| 4mm Hex Wrench | 944458 |



NR3665DA
2-1/2" 36V Cordless
Metal Connector Nailer

LITHIUM ION
LIFETIME
TOOL WARRANTY
2 YEAR LITHIUM BATTERY WARRANTY
1 YEAR CHARGER WARRANTY

36V

MULTI VOLT

21°

BRUSHLESS



Also available
NR3690DRQ4
(Bare tool only)


Go Cordless with pneumatic performance for plastic collated round head nails

NR3690DR

3-1/2" 36V MultiVolt™ Cordless 21° Framing Nailer Kit

- MultiVolt™: It's Cordless, It's Corded, It's BOTH!
- Powered by MultiVolt™ 36V battery or optional AC adapter (ET36A). See page 32 for details
- Air Spring Drive System delivers similar feel as a pneumatic tool
- Dry fire lock out
- Fires 3 nails per second
- 900 nails per charge with included battery
- Brushless Motor Technology allows for more runtime, increased power, and extended durability with essentially no maintenance
- Zero ramp up time
- Side lock prevents accidental firing
- Pivoting hook keeps the tool within arm's reach

Plastic Strip Collation, 21°
.113-.131

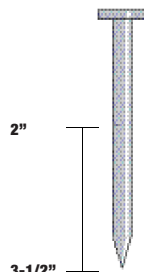

Specifications

| | |
|--------------------------------|-------------------|
| Volts | 36 |
| Nail Capacity | 37 |
| Magazine Angle | 21° |
| Nails Per Charge | 900 |
| Battery Type | Lithium Ion Slide |
| Weight (with BSL36A18 battery) | 10.8 lbs |

Includes

| | |
|---|----------|
| (1) 36V Compact 2.5Ah Li-Ion Battery (BSL36A18) | 371751M |
| Rapid Charger w/ USB Port | UC18YSL3 |
| 3mm Hex Wrench | 943277 |
| 4mm Hex Wrench | 944458 |
| Carrying Bag | 372294M |
| Safety Glasses | 875769 |

LITHIUM ION
LIFETIME
TOOL WARRANTY
2 YEAR LITHIUM BATTERY WARRANTY
1 YEAR CHARGER WARRANTY

36V

MULTI VOLT

30°

BRUSHLESS



Also available
NR3690DCQ4
(Bare tool only)


Go Cordless with pneumatic performance for paper collated clipped head nails

NR3690DC

3-1/2" 36V MultiVolt™ Cordless 30° Framing Nailer Kit

- MultiVolt™: It's Cordless, It's Corded, It's BOTH!
- Powered by MultiVolt™ 36V battery or optional AC adapter (ET36A). See page 32 for details
- Air Spring Drive System delivers similar feel as a pneumatic tool
- Dry fire lock out
- Fires 3 nails per second
- 900 nails per charge with included battery
- Brushless Motor Technology allows for more runtime, increased power, and extended durability with essentially no maintenance
- Zero ramp up time
- Side lock prevents accidental firing
- Pivoting hook keeps the tool within arm's reach

Paper Strip Collation, 21°
Clipped or Offset Head
.113-.131

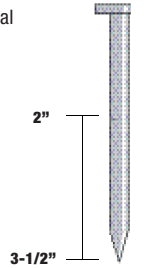

Specifications

| | |
|--------------------------------|-------------------|
| Volts | 36 |
| Nail Capacity | 47 |
| Magazine Angle | 30° |
| Nails Per Charge | 900 |
| Battery Type | Lithium Ion Slide |
| Weight (with BSL36A18 battery) | 10.6 lbs |

Includes

| | |
|---|----------|
| (1) 36V Compact 2.5Ah Li-Ion Battery (BSL36A18) | 371751M |
| Rapid Charger w/ USB Port | UC18YSL3 |
| 3mm Hex Wrench | 943277 |
| 4mm Hex Wrench | 944458 |
| Carrying Bag | 372294M |
| Safety Glasses | 875769 |

LITHIUM ION
LIFETIME
TOOL WARRANTY
2 YEAR LITHIUM BATTERY WARRANTY
1 YEAR CHARGER WARRANTY

18V

MULTI VOLT

18 GA

BRUSHLESS



Also available
NT1850DFQ4
(Bare tool only)


Go Cordless with pneumatic performance! Lightweight with 3 nails/sec, 1650/charge

NT1850DF

2" 18V MultiVolt Compact Cordless 18-Gauge Brad Nailer

- Air Spring Drive System offers similar performance to a pneumatic nailer
- Powered by Metabo HPT's Compact 3.0Ah Lithium Ion slide-type battery for fade free power
- 1,650 nails per charge with compact 3.0Ah battery
- 30% smaller and 31% lighter than previous model
- Tool-less depth of drive adjustment for flush drives into various materials
- Built-in LED light

18-Gauge



Specifications

| | |
|---------------------|-------------------|
| Volts | 18 |
| Nail Capacity | 100 |
| Magazine Angle | Straight |
| Nails Per Charge | 1,650 |
| Battery Type | Lithium Ion Slide |
| Weight (w/ battery) | 5.3 lbs |

Includes

| | |
|-------------------------------|----------|
| (1) 18V Compact 3.0Ah Battery | 339782M |
| BSL1830C | |
| Rapid Charger | UC18YFSL |
| No Mar Nose Cap | 886846 |
| Safety Glasses | 875769 |
| Carrying Bag | 371108 |



NT1850DF
2" 18V Compact Cordless
18Ga Brad Nailer

**Framing,
Roofing,
Siding**



**Finish
Stapling &
Specialty**



LITHIUM ION
LIFETIME
TOOL WARRANTY
2 YEAR LIMITED WARRANTY
1 YEAR CHARGER WARRANTY

18V
MULTI VOLT

15 GA
ANGLED NAIL

BRUSHLESS



Also available
NT1865DMASQ7
(Bare tool only)

NT1865DMAS

Go Cordless with pneumatic performance! Lightweight with 3 nails/sec, 1,100/charge

2-1/2" 18V MultiVolt Cordless 15-Gauge Angled Finish Nailer

- Air Spring Drive System delivers similar performance to a pneumatic tool
- Powered by Metabo's HPT's Compact 3.0Ah Lithium Ion slide-type battery for fade free power
- 1,100 Nails per charge using compact 3.0Ah battery
- Selective actuation switch lets the user easily select contact or sequential nailing
- Tool-less depth of drive adjustment
- Integrated belt hook so the tool is always close at hand
- Built-in LED light
- Dry-fire Lockout

15-Gauge, 34°



Specifications

| | |
|--------------------------------|-------------------|
| Volts | 18 |
| Nail Capacity | 100 |
| Magazine Angle | 34° |
| Nails Per Charge | 1,100 Nails |
| Battery Type | Lithium Ion Slide |
| Weight (with BSL1830C battery) | 7.5 lbs |

Includes

| | |
|-------------------------------|----------|
| (1) 18V Compact 3.0Ah Battery | 339782M |
| BSL1830C | |
| Rapid Charger | UC18YFSL |
| No Mar Nose Cap | 371094 |
| Safety Glasses | 875769 |
| Carrying Bag | 371108M |

LITHIUM ION
LIFETIME
TOOL WARRANTY
2 YEAR LIMITED WARRANTY
1 YEAR CHARGER WARRANTY

18V
MULTI VOLT

16 GA
STRAIGHT NAIL

BRUSHLESS



Also available
NT1865DMSQ7
(Bare tool only)


NT1865DMS

Go Cordless with pneumatic performance! Lightweight with 3 nails/sec, 1,500/charge

2-1/2" 18V MultiVolt Cordless 16-Gauge Straight Finish Nailer

- Air Spring Drive System delivers similar performance to a pneumatic tool
- Powered by Metabo's HPT's Compact 3.0Ah Lithium Ion slide-type battery for fade free power
- Selective actuation switch lets the user easily select contact or sequential nailing
- Tool-less depth of drive adjustment
- Integrated belt hook so the tool is always close at hand
- Built-in LED light
- Dry-fire Lockout

16-Gauge



Specifications

| | |
|--------------------------------|-------------------|
| Volts | 18 |
| Nail Capacity | 100 |
| Magazine Angle | Straight |
| Nails Per Charge | 1,500 Nails |
| Battery Type | Lithium Ion Slide |
| Weight (with BSL1830C battery) | 7.3 lbs |

Includes

| | |
|-------------------------------|----------|
| (1) 18V Compact 3.0Ah Battery | 339782M |
| BSL1830C | |
| Rapid Charger | UC18YFSL |
| Safety Glasses | 875769 |
| Carrying Bag | 371108M |

WHY CHOOSE METABO HPT FOR CORDLESS DRILLING & FASTENING?


KEY TRIPLE HAMMER* BENEFITS

*Triple Hammer Technology applied models: WH36DB, WH18DBDL2

The hammer has three strikers (instead of the conventional dual striker) and therefore provides:

- Faster impact & tightening speed
- More fastening torque with less slippage from the screw head
- Greater comfort with less vibrations

Mechanism of the Triple Hammer

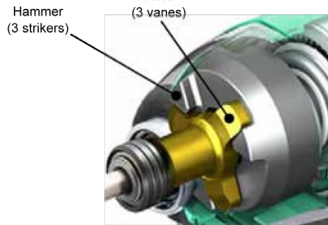

Conventional model

WH36DB, WH18DBDL2 (Triple Hammer)



KEY IP56 BENEFITS

IP56 applied models: WH36DB, WH18DBDL2, WR36DA, WR36DB, WR18DBDL2, WR36DE


- Metabo-HPT is one of the very few tool manufacturers designing tools with IP56 rating to withstand harsh jobsite conditions
- Meets IP56 Protection Standard from IEC - which prevents damage to the tool exposed to dust and unexpected rain



REACTIVE FORCE CONTROL* BENEFITS

RFC Technology applied models: DS36DA, DV36DA, DS18DBL2, DV18DBL2

Reactive Force Control (RFC) stops the motor when the tool bit gets caught therefore preventing harmful twisting of the tool.

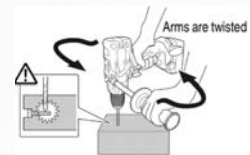

WH18DBDL2C

The 18V Pro Tool with advanced features for added durability, performance, & comfort

18V Cordless Triple Hammer Impact Driver

LITHIUM ION
LIFETIME
TOOL WARRANTY
2 YEAR LITHIUM BATTERY WARRANTY
1 YEAR CHARGER WARRANTY

18V

TRIPLE HAMMER

BRUSHLESS

IP56



Also available WH18DBDL2Q4 (bare tool only)

- 4-Mode Selector: ranging from 0-900/2,900 RPM to conveniently tackle a wide variety of applications
- Responsive Variable Speed Trigger: provides complete control during the application
- Powered by Metabo HPT's Compact 3.0Ah Lithium-Ion slide-type battery: for less weight in a more compact size, while also providing fade free power and protection from over-charge, over-discharge and over-load
- On-Tool Battery Indicator: to monitor battery status for less down time
- On-Tool LED Light: effectively illuminate dark work spaces
- Lightweight at 2.9 lbs: reduce fatigue during extended or elevated use

Specifications

| | |
|-----------------------------|-------------------|
| Volts | 18 |
| Drive | 1/4" Hex |
| No-Load Speed | 0-2,900 RPM |
| Impact Rate | 0-4,000 IPM |
| Max Torque | 1,832 in-lbs |
| Battery Type | Lithium Ion Slide |
| Weight (w/BSL1830C battery) | 2.9 lbs |

Includes

| | |
|--|----------|
| (2) 18V Compact 3.0Ah Batteries BSL1830C | 333353M |
| Rapid Charger | UC18YSL3 |
| Belt Hook | |
| Bag | 375801 |

WH36DBG

The 36V Pro Tool with advanced features for added durability, performance, & comfort

36V MultiVolt™ Cordless Triple Hammer Impact Driver Kit

LITHIUM ION
LIFETIME
TOOL WARRANTY
2 YEAR LITHIUM BATTERY WARRANTY
1 YEAR CHARGER WARRANTY

36V

MULTI VOLT

TRIPLE HAMMER

BRUSHLESS

IP56



Also available WH36DBQ4 (bare tool only)

- **MultiVolt™**: It's Cordless, It's Corded, It's BOTH!
- Screws Per Charge: 990 (3" drywall screws into wood)
- Triple Hammer Technology (via incorporating a third impacting anvil) increases driving speed, beats per minute, torque and decreases vibration
- 1/4" keyless hex drive saves time as bits can be changed quickly and easily
- Responsive variable speed trigger provides complete control during the application
- IP56 provides a degree of dust and water resistance



4-STAGE SPEED SELECTION CONTROL BOARD

Allows up to 1,859 in-lbs of torque, 0-2,900 RPM, & 0-4,100 IPM for precision and control during a variety of applications, and the self-drilling screw mode adjusts the starting speed when catching the screw to avoid stripping

Specifications

| | |
|--------------------|--------------|
| Volts | 36 |
| Torque | 1,859 in-lbs |
| No-Load Speed | 0-2,900 RPM |
| Impact Rate | 0-4,100 IPM |
| Variable Speed | Trigger |
| Belt Hook | Equipped |
| LED Light | Equipped |
| Weight (w/Battery) | 3.5 lbs |

Includes

| | |
|--------------------------------|----------|
| (2) MultiVolt 2.5 Ah Batteries | 371751M |
| Rapid Charge w/USB Port | UC18YSL3 |
| Belt Hook | |
| Carrying Case | 339778 |

IMPACT WRENCHES

WR18DBDL2

All-weather jobsite field proven tool in a compact form for precise fastening

1/2" Square Drive 18V Cordless Impact Wrench

LITHIUM ION
LIFETIME
TOOL WARRANTY
2 YEAR LITHIUM BATTERY WARRANTY
1 YEAR CHARGER WARRANTY

18V

BRUSHLESS

IP56



- Compatible with all Metabo HPT 18V & 36V MultiVolt™ batteries
- Produces 225 ft.-lbs of turning torque, 0-3,600 BPM and up to 2,700 RPM to power through the toughest jobs
- 4-Stage electronic speed switch for precision and control during a variety of applications
- IP56 rating provides dust and water resistance

Also available
WR18DBDL2Q4
(Bare tool only)

| Specifications | |
|----------------|-------------|
| Volts | 18 |
| Drive | 1/2" Square |
| No-Load Speed | 0-2,700 RPM |
| Impact Rate | 0-3,600 IPM |
| Max Torque | 225 ft.-lbs |
| Weight | 3.3 lbs |

| Includes | |
|---------------|----------|
| Case | 337852 |
| Rapid Charger | UC18YFSL |
| Belt Hook | |

WR36DE

All-weather compact tool with Auto-Stop Function

36V MultiVolt™ Cordless 1/2" Mid-Torque Impact Wrench Kit

LITHIUM ION
LIFETIME
TOOL WARRANTY

36V

MP
MULTI VOLT

BRUSHLESS

IP56



Also available
WR36DEQ4
(bare tool only)

- GO ALL DAY: Can be powered by a 36V MultiVolt battery OR MultiVolt AC Adapter (ET36A). See page 32 for details
- Responsive variable speed trigger for complete control during the application
- Auto-stop system prevents breaking bolts from over-tightening
- Battering damping system improves life of battery terminal
- 4-Stage electronic speed switch for precision and control during a variety of applications
- IP56 rating provides dust and water resistance



1/2" SQUARE DRIVE

With friction ring to provide a strong grip on sockets and accessories when attached

| Specifications | |
|--------------------|-------------|
| Volts | 36 |
| Drive | 1/2" Square |
| Tightening Torque | 568 ft.-lbs |
| Breakaway Torque | 774 ft.-lbs |
| No-Load Speed | 0-2,400 RPM |
| Impact Rate | 0-3,400 IPM |
| Weight (w/Battery) | 5.7 lbs |

| Included | |
|----------------------------|----------|
| (2) 18V/36V MultiVolt | 371751M |
| 2.5Ah/5.0Ah Li-Ion Battery | |
| Rapid Charger w/ USB Port | UC18YSL3 |
| Belt Hook | |
| Case | 377282 |

4-STAGE SPEED SELECTION CONTROL BOARD

Provides up to 568 ft.-lbs of tightening torque (774 ft.-lbs of nut-busting), 0-2,400 RPM, and 0-3,400 IPM for precision and control during a variety of applications

WR36DBQ4

Powerful all-weather jobsite field proven tool for the demanding professional

36V MultiVolt™ Cordless 1/2" High-Torque Impact Wrench (Bare Tool)

LITHIUM ION
LIFETIME
TOOL WARRANTY

36V

MP
MULTI VOLT

BRUSHLESS

IP56



- MultiVolt: It's Cordless. It's Corded. It's Both!
- Powered by MultiVolt™ 36V battery or optional AC adapter (ET36A). See page 32 for details
- Responsive variable speed trigger provides complete control during the application
- 4-Stage electronic speed switch for precision and control during a variety of applications
- IP56 rating provides dust and water resistance



1/2" SQUARE DRIVE

With friction ring to provide a strong grip on sockets and accessories when attached

| Specifications | |
|--------------------|---------------|
| Volts | 36 |
| Drive | 1/2" Square |
| Tightening Torque | 775 ft.-lbs |
| Breakaway Torque | 1,218 ft.-lbs |
| No-Load Speed | 0-1,500 RPM |
| Impact Rate | 0-2,800 IPM |
| Weight (w/Battery) | 8.8 lbs |

| Includes | |
|-----------|--|
| Belt Hook | |

| Optional Accessories | |
|----------------------|--------------------|
| Starter Kit | UC18YSL3B1 |
| Adapter | ET36A |
| MultiVolt™ Batteries | 372121M or 371751M |
| Charger | UC18YSL3 |



WR36DE
36V MultiVolt 1/2" Mid-Torque Impact Wrench

Powerful all-weather jobsite field proven tool for extreme applications

WR36DAQ4

36V MultiVolt™ Cordless 3/4" High-Torque Impact Wrench (Bare Tool)

LITHIUM ION
LIFETIME
TOOL WARRANTY

36V

MULTI VOLT

BRUSHLESS

IP56



- MultiVolt: It's Cordless. It's Coded. It's Both!
- Powered by MultiVolt™ 36V battery or optional AC adapter (ET36A). See page 32 for details
- Responsive variable speed trigger provides complete control during the application
- Built-in LED light effectively illuminates dark work spaces
- Heat-resistant rubber bumper protects the tool, workpiece and the user when in use
- IP56 rating provides dust and water resistance



3/4" SQUARE DRIVE

With friction ring and pin detent to provide a strong grip on sockets and accessories when attached

Specifications

| | |
|--------------------|--------------|
| Volts | 36 |
| Drive | 3/4" Square |
| Tightening Torque | 812 ft-lbs |
| Breakaway Torque | 1,328 ft-lbs |
| No-Load Speed | 0-1,500 RPM |
| Impact Rate | 0-2,900 IPM |
| Weight (w/Battery) | 8.8 lbs |

Includes

Belt Hook

Optional Accessories

| | |
|----------------------|--------------------|
| Starter Kit | UC18YSL3B1 |
| Adapter | ET36A |
| MultiVolt™ Batteries | 372121M or 371751M |
| Charger | UC18YSL3 |



WR22SE

The best & only 3/4" corded brushless impact wrench

3/4" Square Drive Impact Wrench

AC **BRUSHLESS**

AHB
ALUMINUM HOUSING BODY



- Ultra efficient low-maintenance AC Brushless motor that permits the use of extra-long extension cords with reduced power loss
- Superior performance when using a generator due to an internal inverter circuit that regulates uneven power supply
- AHB (Aluminum Housing Body) construction significantly enhances the internal and external durability of the tool
- Toggle switch for easy transition from forward to reverse
- Soft start and brake function
- A/C or D/C, can be used with a D/C power source
- Only 10.1 lbs, lightweight design facilitates maneuverability

Specifications

| | |
|---------------|-------------|
| Amps | 8.3 |
| Drive | 3/4" Square |
| No-Load Speed | 1,400 RPM |
| Impact Rate | 2,000 IPM |
| Max Torque | 460 ft-lbs |
| Weight | 10.1 lbs |

Includes

Case

Side Handle

Capacities

| | |
|-------------------|----------------------------|
| Bolt | M14 - M24 (9/16" - 15/16") |
| High Tension Bolt | M16 - M22 (5/8" - 7/8") |



WR25SE

The industry best 1" corded brushless impact wrench

1" Square Drive Impact Wrench

AC **BRUSHLESS**

AHB
ALUMINUM HOUSING BODY



- Ultra efficient low-maintenance AC Brushless motor that permits the use of extra-long extension cords with reduced power loss
- Superior performance when using a generator due to an internal inverter circuit that regulates uneven power supply
- AHB (Aluminum Housing Body) construction significantly enhances the internal and external durability of the tool
- Toggle switch for easy transition from forward to reverse
- Soft start and brake function
- A/C or D/C, can be used with a D/C power source
- Only 17 lbs, lightweight design facilitates maneuverability

Specifications

| | |
|---------------|------------|
| Amps | 9.4 |
| Drive | 1" Square |
| No-Load Speed | 1,100 RPM |
| Impact Rate | 1,500 IPM |
| Max Torque | 740 ft-lbs |
| Weight | 17 lbs |

Includes

Case

Side Handle

Capacities

| | |
|-------------------|----------------------------|
| Bolt | M22 - M30 (7/8" - 1-3/16") |
| High Tension Bolt | M22 - M24 (7/8" - 15/16") |



WR36DAQ4
36V MultiVolt™ 3/4" High Torque
Impact Wrench (Bare Tool)

DRILL DRIVERS & HAMMER DRILLS



DS18DBFL2E
18V Cordless Driver Drill

LITHIUM ION
LIFETIME
TOOL WARRANTY
2 YEAR HIGH CAPACITY BATTERY WARRANTY
1 YEAR CHARGER WARRANTY

18V
BRUSHLESS
RFC
REACTIVE FORCE CONTROL

DV18DBL2Q4

Extreme power with the added safety of Reactive Force

18V Cordless High-End Hammer Drill



- Reactive Force Control (RFC) senses tool overload and stops the tool from rotating in instances where there may be a bit snag or an overload application
- Ratcheting 1/2" Keyless All-Metal Chuck with carbide inserts for quick and simple bit replacements and secure holding power
- Optical Trigger Switch for a more responsive variable speed actuation and wear resistant trigger assembly
- Compatible with all Metabo HPT 18V/36V Lithium-Ion Slide Type Batteries for fade free power (batteries and charger sold separately)
- Brushless Motor Technology for more runtime, increased power and durability with essentially no maintenance

Specifications

| | |
|------------------------|-------------------------|
| Volts | 18 |
| No-Load Speed | 0-2,100 RPM |
| Impact Rate | 0-31,500 BPM |
| Torque | 1,205 in-lbs |
| Capabilities | |
| Wood | 3" |
| Steel | 1/2" |
| Brick | 5/8" |
| Chuck | 1/2" Keyless Ratcheting |
| Weight (w/out battery) | 3.5 lbs |

Includes

| | |
|-------------|--------|
| Side Handle | 339770 |
| Belt Hook | |

LITHIUM ION
LIFETIME
TOOL WARRANTY
2 YEAR HIGH CAPACITY BATTERY WARRANTY
1 YEAR CHARGER WARRANTY

36V
MULTI VOLT
BRUSHLESS
RFC
REACTIVE FORCE CONTROL

DV36DAQ

Extreme 36V power with the added safety of Reactive Force Control

36V MultiVolt™ Cordless 1/2" Hammer Drill (2.5Ah x 2)



Also available
DV36DAQ4
(bare tool only)

- **MultiVolt™**: It's Cordless, It's Coded, It's BOTH!
- Holes Per Charge: 195 (1-1/2" diameter auger bit, 3" deep through wood)
- Professional grade power with 1,220 in-lbs of torque and up to 2,100 RPM with 0-31,500 BPM
- Long side handle provides additional comfort and control
- Built-in LED light effectively illuminates dark work spaces
- Reactive Force Control (RFC) senses tool overload and stops rotation to ensure user safety



1/2" KEYLESS ALL METAL CHUCK

With carbide inserts for quick and simple bit replacements and secure holding power



22-STAGE + 2 CLUTCH SETTINGS

22 torque settings, a drill mode and a hammer drill mode to properly match the torque to the application

Specifications

| | |
|--------------------|--------------|
| Volts | 36 |
| Torque | 1,220 in-lbs |
| No Load Speed | 0-2,100 RPM |
| Impact Rate | 0-31,500 BPM |
| Capabilities | |
| Wood | 4" |
| Brick | 3/4" |
| Steel | 5/8" |
| Weight (w/Battery) | 6.0 lbs |

Includes

| | |
|--------------------------------|----------|
| (2) MultiVolt™ 2.5Ah Batteries | 371751M |
| Rapid Charger w/USB Port | UC18YSL3 |
| Side Handle | 339770 |
| Doubled #2 Phillips Bit | 983006 |
| Belt Hook | |
| Hard Carrying Case | 339778 |

Optional

| | |
|--------------------------|-------|
| 36V MultiVolt AC Adapter | ET36A |
|--------------------------|-------|

LITHIUM ION
LIFETIME
TOOL WARRANTY

18V
BRUSHLESS

DS18DBFL2E

Good power in a compact body to get between studs

18V Cordless Driver Drill



Also available
DS18DBFL2Q4
(bare tool only)

- Keyless Metal Chuck to ensure strong grip on the bit and easy bit replacements
- Compatible with all Metabo HPT 18V/36V Lithium-Ion Slide Type Batteries for fade free power
- On-Tool Battery Indicator: to gauge the status of the battery and reduce down time
- LED Light: to illuminate the workspace when use in darker areas
- Belt Hook: to keep tool close at hand

Specifications

| | |
|-----------------------------|-------------------|
| Volts | 18 |
| Chuck | 1/2" Keyless |
| Clutch Settings | 22 + 1 |
| No-Load Speed | 0-1,800 RPM |
| Torque | 620 in-lbs |
| Battery Type | Lithium Ion Slide |
| Weight (w/BSL1830C battery) | 3.5 lbs |

Includes

| | |
|----------------------------|----------|
| (2) 1.5Ah Li-Ion Batteries | 333353M |
| 18v Charger | UC18YFSL |
| #2 Phillips Bit | 983006 |
| Belt Hook | |
| Bag | 375801 |

LITHIUM ION
LIFETIME
TOOL WARRANTY
2 YEAR LITHIUM BATTERY WARRANTY
1 YEAR CHARGER WARRANTY
18V
BRUSHLESS

KC18DDX

Lightweight tool combo kit for everyday drilling and fastening duties

18V DDX Series Sub-Compact Driver Drill/Impact Driver Kit

SUB COMPACT
HIGH TORQUE



- Powered by Lithium-Ion battery technology for fade-free power and less weight
- Both tools feature brushless motors, which reduce weight, allow for more efficient runtime, and eliminate time-consuming repairs
- Sub-Compact design allows for use in narrow spaces

Includes

| | |
|--------------------------------|----------|
| 1/2" Sub-Compact Driver Drill | DS18DDX |
| 1/4" Sub-Compact Impact Driver | WH18DDX |
| (2) 18V 1.5Ah Batteries | 333353M |
| #2 Phillips Bit | 983006 |
| Carrying Bag | 375801M |
| Charger | UC18YKSL |

LITHIUM ION
LIFETIME
TOOL WARRANTY
2 YEAR LITHIUM BATTERY WARRANTY
1 YEAR CHARGER WARRANTY
18V
BRUSHLESS

KC18DBFL2C

Professional tool combo kit featuring the best impact driver on the market

18V Cordless Hammer Drill & Impact Driver Combo Kit



- Includes 2 MultiVolt™ 18V Compact 3.0Ah Battery
- Powerful Brushless Motor: for longer runtime, increased power & performance, and extended motor durability
- Includes DV18DBFL2 Hammer Drill & WH18DBDL2 Impact Driver: to suit nearly all drilling and driving tasks
- Responsive Variable Speed Trigger: provides complete control during operation
- On-Tool Battery Indicator: to gauge the status of the battery and reduce down time
- LED Light: to illuminate the workspace when use in darker areas
- Belt Hook: to keep tool close at hand

Includes

| | |
|-------------------------------|-----------|
| 1/2" Hammer Drill | DV18DBFL2 |
| 1/4" Hex Impact Driver | WH18DBDL2 |
| (2) 18V 3.0Ah Compact Battery | 339782M |
| Charger | UC18YFSL |
| Carrying Case | 372210 |
| Belt Hook x2 | |
| Double Sided #2 Phillips Bit | 983006 |



KC18DDX4
18V DDX Series Sub-Compact 4pc Combo Kit

WHY CHOOSE METABO HPT CUTTING & SAWING?



THE KEY TO MULTIVOLT:

MultiVolt technology applies to models: CR36DAQ4M, C361ODRJQ4, CR36DAQ4, CR18DBLQ4, CB36DA, C361ODRA, C361ODRAQA, CV18DBLQ5, CE18DSLQ4, CN18DSLQ4, VB3616DA

- Use 18V batteries (1.5, 2, 3Ah) for the best power-to-weight ratio, and keeping tools lighter for less fatigue while working
- 36V batteries (2.5, 5.0Ah) have the highest power on the go, for long work days without drops in power or stopping to recharge. Use them in 18V tools to double the runtime!
- The AC Adapter ensures that any 36V tool can be used all day long without slowing down, supplying a steady source of power.

AC/DC ADAPTER

AC/DC Adapter applies to models: CR36DAQ4, C361ODRJQ4, CR18DBLQ4, CB36DA, C361ODRA, C361ODRAQA, CV18DBLQ5, CE18DSLQ4, CN18DSLQ4, VB3616DA

- World's first AC/DC compatible power supply! Your choice of cordless or corded in one tool! The best of both worlds
- Use the AC adapter to finish the job when the battery is depleted or when corded power is available to save on battery run-time.
- Built-in inverter provides additional benefit of using extra long extension cords with the adapter.
- Compatible with use of generators with Built-in overload/overheat protection
- Pivoting cord (from 90 to 180 degrees) provides user freedom and comfort during use



TWIN COUNTERWEIGHT TECHNOLOGY

Twin Counterweight Technology applies to model CR36DAQ4

Best orbital action with smooth cutting experience

- Faster cutting for demolition
- Low vibration
- Smoother cut when cutting pipes

LITHIUM ION
LIFETIME
TOOL WARRANTY

36V

MULTI VOLT

BRUSHLESS

DUST BLOWER
FUNCTION

QUICK
BRAKING



Also available
Optional Dust
Collector Adapter
SKU# 372757

C3607DAQ4

Heavy duty performance, fast cuts through wet wood, fiber cement board
36V MultiVolt™ Cordless 7-1/4" Circular Saw (Bare Tool)

- MultiVolt™: It's Cordless, It's Corded, It's BOTH!
- Cuts Per Charge: 220 cross cuts (2" x 8" wood)
- Soft Start & Electric Brake for increased safety & productivity
- Heavy Duty Aluminum Base with easy to read scale
- Auto Mode option to reduce RPM & decibel rating while sparing motor & battery life
- Right Slide Blade



BEVEL ADJUSTMENT

Easy to read bevel scale. 55° capacity with stops at 0°, 45° and 55°



CONTROL BOARD

Auto Mode reduces RPM and decibel rating while sparing motor and battery life

Specifications

| | |
|---------------------|-----------|
| Volts | 36 |
| Blade Diameter | 7-1/4" |
| No Load Speed | 4,300 RPM |
| Arbor Size | 5/8" |
| Capacities | |
| 90° Cut Depth | 2-7/16" |
| 45° Cut Depth | 1-7/8" |
| Weight (w/ Battery) | 9.7 lbs |

Includes

| | |
|--------------------------|---------|
| 7-1/4" 24T Framing Blade | 115429M |
| 5mm Blade Wrench | 944459 |

Optional

| | |
|-------------------------------------|------------|
| 36V Li-Ion Slide Battery (BSL36B18) | 372121M |
| 36V Li-Ion Slide Battery (BSL36A18) | 371751M |
| MultiVolt AC Adapter | ET36A |
| MultiVolt Starter Kit | UC18YSL3B1 |

LITHIUM ION
LIFETIME
TOOL WARRANTY

2 YEAR LIMITED WARRANTY
1 YEAR CHARGER WARRANTY

36V

MULTI VOLT

BRUSHLESS

QUICK BRAKING

C3607DWA



Also available
C3607DWAQ4 (Bare Tool)

Cordless Rear Handle left blade preferred by Masonry and Concrete Contractors

36V MultiVolt™ 7-1/4" Rear Handle Circular Saw

- **GO ALL DAY:** Can be powered by a 36V MultiVolt battery OR MultiVolt AC Adapter with cord (ET36A). See page 32 for details
- Superior Performance - Cuts like corded
- Cuts per Charge - 500 cross cuts (2x4)
- Light weight
- Balanced ergonomic design
- Rafter hook

Optional

Guide Set

Specifications

| | |
|---------------------|-----------|
| Volts | 36 |
| Blade Diameter | 7-1/4" |
| No Load Speed | 5,100 RPM |
| Capacities | |
| 90 Degree Cut Depth | 2-7/16" |
| 45 Degree Cut Depth | 1-3/4" |
| Weight w/ Battery | 10.4 lbs |

Includes

| | |
|-------------------------------|---------|
| 7-1/4" Saw Blade | 115750M |
| Dust Collector Set (A) | 324887 |
| 4.0Ah/8.0Ah MultiVolt Battery | 372121M |
| Bag | 371108M |
| Wrench | 957683 |

PROFESSIONAL
5 YEAR WARRANTY

C7WDM



Worm drive style preferred by masons and forming contractors

7-1/4" Worm Drive Circular Saw

- Durable worm drive gears for longer life and professional results
- Rafter hook for safe rafter placement and easy storage
- Blade wrench conveniently stores in the foot of the tool
- Soft, non-slip grip for increased comfort and control
- Carbon brush access allows the users to easily inspect and replace brushes as needed which greatly prolongs the life of the tool
- Magnesium base

Capacities

| | |
|-----------------|--------|
| Cut Depth @ 45° | 1-3/4" |
| Cut Depth @ 90° | 2-3/8" |

Specifications

| | |
|----------------|-----------|
| Amps | 15 |
| No-Load Speed | 5,000 RPM |
| Arbor Size | 5/8" |
| Bevel Capacity | 53° |
| Weight | 14.7 lbs |

Includes

| | |
|--|---------|
| (2) 7-1/4" 24T Premium Framing VPR Blade | 115429M |
| Blade Wrench | 372021 |

Optional

| | |
|----------------|--------|
| Rip Guide Assy | 372098 |
| Knob | 372100 |

LITHIUM ION
LIFETIME
TOOL WARRANTY

2 YEAR LIMITED WARRANTY
1 YEAR CHARGER WARRANTY

18V

BRUSHLESS

LVH

INCLUDES INCLUDES
RAFTER HOOK

CR18DBLQ4



Lightweight saw for everyday applications

18V Cordless Recip Saw (Bare Tool)

- **LVH (Low Vibration Handle):** with soft grip ensures a high vibration absorbing effect for added user comfort
- **3-Mode Selector w/ Auto Mode:** operates up to 2,500 SPM for convenience in performing with various applications
- **Brushless Motor Technology:** for higher efficiency, increased runtime and longer lifetime of the tool
- **Large Rafter Hook:** convenient for temporarily hanging tool on wood beam or pipe when not in use
- **On-Tool LED:** to illuminate dimly lit work areas
- **On-Tool Battery Indicator:** to monitor the status of the battery and reduce downtime

Specifications

| | |
|--------------------------|-------------------|
| Volts | 18 |
| Stroke Length | 1-1/4" |
| No-Load Speed | 0-2,500 SPM |
| Blade Change | Tool-less |
| Battery Type | Lithium Ion Slide |
| Weight (w/6.0Ah battery) | 7.5 lbs |

Includes

| | |
|-------------------|--------|
| Curved Wood Blade | 371902 |
|-------------------|--------|

Optional

| | |
|---|----------|
| 18V Li-Ion Slide Battery (BSL1860) | 338890M |
| 18V Li-Ion Universal Rapid Charger UC18YSL3 | UC18YSL3 |
| Plastic Carrying Case | 371355 |

LITHIUM ION
LIFETIME
TOOL WARRANTY

36V

MULTI VOLT

BRUSHLESS

UVP

ORBITAL

CR36DAQ4



Super-fast cuts with dual counterweight technology for comfortable all-day use

36V MultiVolt™ Cordless Reciprocating Saw (Bare Tool)

- **MultiVolt™:** It's Cordless, It's Corded, It's BOTH!
- **Cuts Per Charge:** 100 cross cuts (2" x 12" wood)
- **Delivers a 1-1/4" stroke length** for convenience and speed when performing various applications
- **Large rafter hook** convenient for temporarily hanging tool on work material when not in use
- **Slim body** makes the tool easier to grip for enhanced operating efficiency



ORBITAL ACTION

Beneficial for faster cutting through wood for demolition or other such applications



CONTROL BOARD

4-Stage speed selector ranging from 1,700 SPM to 3,000 SPM to satisfy cutting needs for various applications

Specifications

| | |
|---------------------|-------------|
| Volts | 36 |
| Stroke Speed | |
| Low | 0-1,700 SPM |
| Medium | 0-2,000 SPM |
| High | 0-2,500 SPM |
| Max | 0-3,000 SPM |
| Stroke Length | 1-1/4" |
| Blade Change | Tool-less |
| Weight (w/ Battery) | 10.6 lbs |

Includes

Curved Wood Blade

Optional

| | |
|-------------------------------------|------------|
| 36V Li-Ion Slide Battery (BSL36B18) | 372121M |
| 36V Li-Ion Slide Battery (BSL36A18) | 371751M |
| MultiVolt AC Adapter | ET36A |
| MultiVolt Starter Kit | UC18YSL3B1 |



C3610DRA

All-rounder, AC/DC versatility with jobsite portability

36V MultiVolt™ Cordless 10" Slide Miter Saw (w/ Adapter)

36V
MULTI VOLT
BRUSHLESS

LASER MARKER



ET36A Adapter included

Also available
C3610DRAQ4 (Bare Tool)
C3610DRAQA (w/ Starter Kit)

- MultiVolt™: It's Cordless, It's Coded, It's BOTH!
- Cuts Per Charge: 350 cross cuts (2" x 4" wood)
- Includes AC Adapter
- Compact slide system allows for cuts with zero clearance
- Up front miter and bevel locks for easy cut adjustments
- Adjustable laser and LED light for accurate cutting and cutting in dimly lit areas



ZERO CLEARANCE SLIDE RAIL

Allows for efficient cutting in tight spaces or when tool is placed against a wall



ADJUSTABLE LASER

Allows easy adjustment for more accurate cutting



MITER SCALE

Large, easy to read miter scale with detents at 0°, 15°, 22.5°, 31.6°, and 45° for increased accuracy for various cuts

Specifications

| | |
|----------------------|-------------|
| Volts | 36 |
| Blade Diameter | 10" |
| Arbor | 5/8" |
| Miter Angle | L 55° R 60° |
| Bevel Angle | L 48° R 48° |
| No Load Speed | 4,000 RPM |
| Weight (w/o Battery) | 45.5 lbs |

Includes

| | |
|-----------------------|--------|
| 10" 24T TCT Saw Blade | 372632 |
| Dust Bag | 372578 |
| Vise Assembly | 372531 |
| 5mm Screw | 372464 |
| MultiVolt™ AC Adapter | ET36A |
| 13mm Blade Wrench | 372446 |
| Support Rod Ass'y x2 | 372571 |

Optional

| | |
|-------------------------------------|------------|
| 36V Li-Ion Slide Battery (BSL36B18) | 372121M |
| 36V Li-Ion Slide Battery (BSL36A18) | 371751M |
| Li-Ion Universal Rapid Charger | UC18YSL3 |
| MultiVolt Starter Kit | UC18YSL3B1 |



C10RJS

10" table saw with outstanding performance

10" Corded Table Saw with Fold and Roll Stand



- Powerful 15 Amp motor with 4,500 RPM for tackling the toughest applications
- Capable of a 3-1/8" cut at 90 and 2-1/4" cut at 45
- 0 to 45 Bevel for cuts ranging in 3-1/8" to 2-1/4"
- 28-3/4" x 22" working table size for easy and stable material support

Specifications

| | |
|---------------------|-----------|
| Amps | 15 |
| Blade Diameter | 10" |
| No Load Speed | 4,500 RPM |
| Capacities | |
| 90 Degree Cut Depth | 3-1/8" |
| 45 Degree Cut Depth | 2-1/4" |
| Weight w/ Battery | 100 lbs |

Includes

| | | | |
|------------------------------|--------|--------------------------|--------|
| 10" 40T Carbide Tipped Blade | 371495 | Outfeed Support Assembly | 371650 |
| Blade Guard Assy | 371647 | (2) Blade Wrenches | 371633 |
| Anti-Kickback Pawl | 371648 | 4mm Hex Bar Wrench | 371645 |
| Miter Gauge Assy | 371651 | 2.5mm Hex Bar Wrench | 371646 |
| Push Stick | 371532 | 5mm Hex Bar Wrench | 371644 |
| Rip Fence Assy | 371649 | | |



CM4SB2

A good value compact tile saw

4" Dry-Cut Masonry Saw



- Sealed armature coil is protected from dust and debris- ideal for dry cutting applications
- Sealed armature coil additionally helps to minimize vibration
- Short base edge-to-blade distance for easy cuts in tight spaces
- One touch lever adjusts the depth of cut quickly and easily
- Compact and lightweight for less fatigue and easy maneuverability

Specifications

| | |
|----------------|------------|
| Amps | 11.6 |
| Wheel Diameter | 4-3/8" |
| Spindle Thread | 5/8" x 11 |
| No-Load Speed | 11,500 RPM |
| Weight | 6.17 lbs |

Includes

| | |
|---------------------------------------|-----------|
| Wheel Guard | 311745 |
| Side Handle | 956633 |
| Spanner Wrench | 938332Z |
| Abrasive Depressed Center Wheel (1pc) | 727535B10 |



CM5SB

Effective Tuck pointer packaged with diamond blade and case

5" Concrete / Masonry Cutter



- Powerful motor for fast material removal and high overload durability during tough cutting applications
- Efficient dust collection removes 95% of dust with vacuum attachment for cleaner, safer, and more comfortable operation
- Tool-less depth adjustment for quickly increasing depths on multiple passes
- Trigger lock-on for easy continuous operation
- Spindle lock for quick and easy accessory changes

Specifications

| | |
|--------------------|------------|
| Amps | 8 |
| Max Wheel Diameter | 5" |
| No-Load Speed | 10,000 RPM |
| Spindle | 5/8" x 11 |
| Max Cutting Depth | 1-3/16" |
| Length | 12-3/8" |
| Weight | 6.4 lbs |

Includes

| | |
|-------------------------|--------|
| Wheel Guard Assembly | 328740 |
| Vacuum Adapter | 320994 |
| Side Handle | 994322 |
| Segmented Diamond Blade | 728713 |
| Case | 328845 |

Jobsite tested bulletproof saw - All-purpose metal and concrete cutting



CC12Y

12" Portable Cut Off Saw, AC/DC



- Replaceable cutting wheel without need to remove base for quick changes
- Quick and easy wheel changes that don't require base removal
- Auto stop carbon brushes protect armature and extend tool life

Capacities

| | |
|-----------------------|----|
| Depth of Cut per Pass | 2" |
| Max Depth of Cut | 4" |

Specifications

| | |
|----------------|-----------|
| Amps | 15 |
| Wheel Diameter | 12" |
| No-Load Speed | 5,000 RPM |
| Weight | 24.0 lbs |

Includes

| | |
|-----------------------------|--------|
| Metal Cutting Wheel (12") | |
| Masonry Cutting Wheel (12") | |
| Spanner Wrench | 985607 |
| 6mm Hex Bar Wrench | 872422 |

All metal base & guard construction for heavy duty use on jobsites



CC14SFS

14" Portable Chop Saw



- Portable, rugged, and lightest in class to withstand daily transport between trucks and jobsites
- Adjustable fence is easy to use and miters 45 degrees to the right or left for versatility
- Quick-lock/release vise provides fast feeding and changing of materials of different sizes

Capacities

| | |
|------------------|---------------------|
| Rectangular Pipe | 5-1/2" x 4-1/2" |
| | 7-43/64" x 3-15/16" |
| | 9-1/4" x 2-49/64" |
| Round Pipe | 5" |
| Shaped Steel | 5-1/8" x 5-1/8" |

Specifications

| | |
|----------------|-----------|
| Amps | 15 |
| Wheel Diameter | 14" |
| No-Load Speed | 4,000 RPM |
| Weight | 37.0 lbs |

Includes

| | |
|---------------------|--------|
| Cut-Off Wheel (14") | |
| 8mm Hex Bar Wrench | 955857 |

Lightweight tool, heavy duty cutting power



CB18DBLQ4

18V Cordless 3-1/4" Band Saw (Bare Tool)

2 YEAR LITHIUM BATTERY WARRANTY
1 YEAR CHARGER WARRANTY

36V

MULTI VOLT

BRUSHLESS



- Variable speed dial that operates from 260 to 640 SFPM and allows for setting the blade speed to suit the work material
- Compatible with all Metabo HPT 18V/36V Lithium-Ion Slide Type Batteries for fade free power (batteries and charger sold separately)
- Features Brushless Motor Technology for more run time, increased power and extended durability with essentially no maintenance
- 3-1/4" cut capacity cuts materials like conduit pipes, steel pipes, power cables, aluminum window frames and various plastics in electric, plumbing and mechanical work applications

Specifications

| | |
|--------------------------|-------------------|
| Volts | 18 |
| Max Cut Speed | 640 SFPM |
| Variable Speed | 260-640 SFPM |
| Auto Mode | 395-640 SFPM |
| Battery Type | Lithium Ion Slide |
| Weight (without battery) | 6.45 lbs |

Includes

| | |
|--------------------|--------|
| Side Handle | 981828 |
| Band Saw Blade | 338431 |
| 4mm Hex Bar Wrench | 944458 |

Optional

| | |
|------------------------------------|----------|
| 18V Li-Ion Slide Battery (BSL1860) | 338891 |
| 18V Li-Ion Universal Rapid Charger | UC18YSL3 |

Heavy duty performance, fastest cuts in industry



CB3612DA

36V MultiVolt™ Cordless 4-3/4" 120mm Band Saw

2 YEAR LITHIUM BATTERY WARRANTY
1 YEAR CHARGER WARRANTY

36V

MULTI VOLT

BRUSHLESS



- **MultiVolt™:** It's Cordless, It's Coded, It's BOTH!
- Variable speed dial that operates from 200 to 640 SFPM and allows for setting the blade speed to suit the work material
- Compatible with all Metabo HPT 36V Lithium-Ion Slide Type Batteries and corded AC Adapter (AC adapter sold separately)
- Features Brushless Motor Technology for more run time, increased power and extended durability with essentially no maintenance
- 4-3/4" cut capacity cuts materials like conduit pipes, steel pipes, power cables, aluminum window frames and various plastics in electric, plumbing and mechanical work applications

Specifications

| | |
|--------------------------|-------------------|
| Volts | 36 |
| Max Cut Speed | 640 SFPM |
| Variable Speed | 200-640 SFPM |
| Auto Mode | 395 SFPM |
| Battery Type | Lithium Ion Slide |
| Weight (without battery) | 16.5 lbs |

Includes

| | |
|---------------------------------|----------|
| Rapid Li-Ion Slide Type Charger | UC18YSL3 |
| 44-7/8" Bi-Metal Blade | 376364M |
| 4.0Ah 36V MultiVolt Battery | 372121M |
| Plastic Blow Case | 376268 |

Optional


| | |
|-----------------------|------------|
| MultiVolt AC Adapter | ET36A |
| MultiVolt Starter Kit | UC18YSL3B1 |

WHY CHOOSE METABO HPT GRINDERS?

KEY MULTIVOLT* BENEFITS

MultiVolt technology apply to models: G3612DAQ6, G3612DBQ6, G18DBALQ4, GP18DAQ4

- Improve work efficiency at the site with the fastest grinding speed and stall-free power in its class because of powerful motor and battery
- 36V MultiVolt batteries are backward compatible with Metabo-HPT 18V slide type cordless tools (4.0Ah runtime in 36V provides 8.0Ah runtime in a 18V tool)

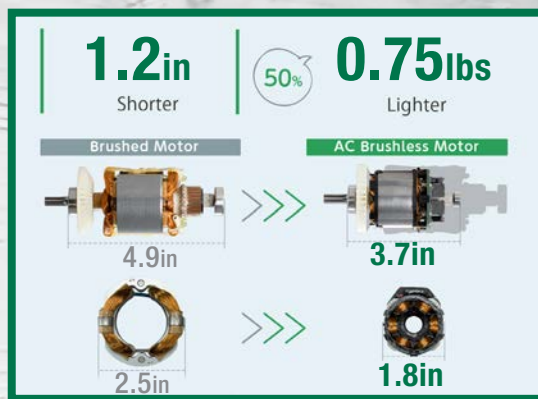

KEY AC BRUSHLESS* BENEFITS

*Apply to models G12BYE, G12VE, G13BYE

- Industry first power tool with AC brushless motor
- Enhanced safety performance with high spec AC brushless motor IC chip: Brake, soft start, 0-voltage restart, anti-kick back, over current protection
- Stable power with AC power supply allows longer extension cords & use of generators
- Built in overload protection against overheating & voltage spikes
- User-controlled motor speed to maximize work efficiency



KEY SPLIT CORE MOTOR BENEFITS

Split Core Motor applied models: G18ST, G23SCY2

- Better heat dissipation and airflow between the divided coils provide better cooling effect and improve durability of the tool
- Increase the maximum power output by weight reduction



G3612DAQ6

Great concrete grinder with variable speed for increased control & fast brake

36V MultiVolt™ Variable Speed Cordless 4-1/2" Slide Switch Grinder (Bare Tool)

36V

MULTI VOLT

SLIDE SWITCH

BRUSHLESS



Replaceable filter screens available
Filter A 371207
Filter B 372108

- MultiVolt: It's Cordless. It's Corded. It's Both!
- Powered by MultiVolt™ 36V battery or AC adapter (ET36A). See page 32 for details
- Slim grip circumference reduces fatigue and improves control, especially during continuous use applications
- **Variable Speed** to match grinder speed to user application
- **Auto-Mode** reduces RPM while idling to preserve battery life and reduce noise level
- Soft-start reduces the load felt by the user at start-up
- Spindle lock and tool-less wheel guard for quick and easy disc changes
- Anti-kickback quickly shuts off power in the event of a bound wheel, extending tool life and protecting the user from potential harm



SLIDE SWITCH

With Lock-On allows for continuous operation

DUST SCREEN

To assist in the prevention of dust entering the tool body and extended tool life

Specifications

| | |
|--------------------|-----------------|
| Volts | 36 |
| Wheel Diameter | 4-1/2" |
| Wheel Capacities | 4", 4-1/2" |
| Switch Type | Slide |
| Variable Speed | 3,000-9,500 RPM |
| Auto Mode | 5,500-9,500 RPM |
| Weight (w/Battery) | 7.1 lbs |

Includes

| | |
|------------------------------|---------|
| 4-1/2" Tool-less Wheel Guard | 337229 |
| 4-1/2" Grinding Wheel | 316821 |
| Blade Wrench | 938332Z |
| Side Handle | 336865 |
| 4mm Hex Bar Wrench | 944458 |
| Carrying Bag | 328849M |

Optional

| | |
|-------------------------------------|------------|
| 36V Li-Ion Slide Battery (BSL36B18) | 372121M |
| 36V Li-Ion Slide Battery (BSL36A18) | 371751M |
| MultiVolt AC Adapter | ET36A |
| MultiVolt Starter Kit | UC18VSL3B1 |



G18DBALQ4

All-rounder for cordless metal grinding and cutting

18V Cordless 4-1/2" Angle Grinder (Bare Tool)



- Compatible with all Metabo HPT 18V & 36V MultiVolt™ batteries
- Auto mode adjusts the speed automatically between high and low speed depending on the load. Auto mode reduces noise and vibration in no-load operation while helping increase battery life
- Dust and water resistant for extended tool life
- Kick back protection to ensure user safety

Specifications

| | |
|----------------|-----------|
| Volts | 18 |
| Wheel Diameter | 4-1/2" |
| Spindle Thread | 5/8" x 11 |
| No-Load Speed | 9,000 RPM |
| Weight | 4.0 lbs |

Includes

| | |
|---------------------------------|---------|
| Abrasive Depressed Center Wheel | |
| Side Handle | 318312 |
| Spanner Wrench | 938332Z |

Optional

| | |
|------------------------|-----------|
| 18V Li-Ion Starter Kit | UC18YSL3S |
|------------------------|-----------|



G3612DBQ6

Non-locking paddle switch with variable speed for increased control & fast brake

36V MultiVolt™ Variable Speed Cordless 4-1/2" Paddle Switch Grinder (Bare Tool)



- MultiVolt: It's Cordless. It's Cored. It's Both!
- Powered by MultiVolt™ 36V battery or AC adapter (ET36A). See page 32 for details
- Slim grip circumference reduces fatigue and improves control, especially during continuous use applications
- **Variable speed** dial to match grinder speed to user application
- **Auto-Mode** reduces RPM while idling to preserve battery life and reduce noise level
- Soft-start reduces the load felt by the user at start-up
- Spindle lock and tool-less wheel guard for quick and easy disc changes
- Anti-Kickback quickly shuts off power in the event of a bound wheel, extending tool life and protecting the user from potential harm



PADDLE SWITCH

Non-Locking and turns off when released for added user safety



DUST SCREEN

To assist in the prevention of dust entering the tool body and extended tool life

Specifications

| | |
|--------------------|----------------------|
| Volts | 36 |
| Wheel Diameter | 4-1/2" |
| Wheel Capacities | 4", 4-1/2" |
| Switch Type | Paddle (Non-Locking) |
| Variable Speed | 3,000-9,500 RPM |
| Auto Mode | 5,500-9,500 RPM |
| Weight (w/Battery) | 7.1 lbs |

Includes

| | |
|------------------------------|---------|
| 4-1/2" Tool-less Wheel Guard | 337229 |
| 4-1/2" Grinding Wheel | 316821 |
| Blade Wrench | 938332Z |
| Side Handle | 336865 |
| 4mm Hex Bar Wrench | 944458 |
| Carrying Bag | 328849M |

Optional

| | |
|-------------------------------------|------------|
| 36V Li-Ion Slide Battery (BSL36B18) | 372121M |
| 36V Li-Ion Slide Battery (BSL36A18) | 371751M |
| MultiVolt AC Adapter | ET36A |
| MultiVolt Starter Kit | UC18YSL3B1 |



G12SR4

Outstanding value & performance - Packaged with a case and grinding wheels

4-1/2" 6.2-Amp Angle Grinder with 5 Abrasive Wheels



727535

- Powerful 6.2 Amp motor for tough grinding applications
- Smaller grip design to reduce fatigue
- High overload durability for increased life and reliability
- Better motor cooling for extended life
- Switch Lock-on for comfortable continuous operation

Specifications

| | |
|----------------|------------|
| Amps | 6.2 |
| Wheel Diameter | 4-1/2" |
| Spindle Thread | 5/8" x 11 |
| No-Load Speed | 10,000 RPM |
| Weight | 4.0 lbs |

Includes

| | |
|--|---------|
| Wheel Guard | 338848 |
| Side Handle | 302142 |
| Abrasive Depressed Center Wheel (5pcs) | 727535 |
| Spanner Wrench | 938332Z |
| Case | 339264 |



G12SQ2

Good all-rounder non-locking grinder

4-1/2" 7.9-Amp Non-Locking Paddle Switch Grinder



- Powerful 7.9 Amp for the toughest grinding jobs
- 10,500 RPM No-Load Speed
- Large non-locking paddle switch for ease of use and improved safety
- Wheel guard can be adjusted to desired angle
- Dual-position handle
- Spindle lock for easy wheel installation and removal
- Only 4.4lbs, lightweight design facilitates maneuverability

Specifications

| | |
|----------------|------------|
| Amps | 7.9 |
| Wheel Diameter | 4-1/2" |
| Spindle Thread | 5/8" x 11 |
| No-Load Speed | 10,500 RPM |
| Weight | 4.4 lbs |

Includes

| | |
|------------------------|---------|
| Side Handle | 318312 |
| Depressed Center Wheel | 316821 |
| Spanner Wrench | 938332Z |



G12SA4

Powerful slide switch grinder with secure & easily adjustable tool-less guard

4-1/2" 10.5 Amp Slide Switch Disc Grinder

SLIDE SWITCH



- 10.5 Amps and 11,500 RPM for substantial power and speed to tackle tough jobs
- Sealed slide switch with lock-on for ease-of-use over extended periods
- Tool-less guard system provides a twist-proof connection and allows the user to adjust the guard position without removal

Specifications

| | |
|----------------|---------------------|
| Amps | 10.5 |
| Wheel Diameter | 4-1/2" |
| Switch Type | Sealed Slide Switch |
| Max Watts Out | 1900 |
| No-Load Speed | 11,500 |
| Spindle Thread | 5/8"-11 UNC |
| Spindle Lock | Yes |
| Tool Weight | 5.3 lbs (2.4 kg) |
| Warranty | 1 Year |

Includes

| | |
|------------------------|---------|
| Spanner Wrench | 938332Z |
| Side Handle | 994322 |
| Depressed Center Wheel | 316821 |



G12SE3

Powerful paddle switch grinder with secure & easily adjustable tool-less guard

4-1/2" 10.5-Amp Paddle Switch Disc Grinder with Lock-On

PADDLE SWITCH



- 10.5 Amps and 11,500 RPM for substantial power and speed to tackle tough jobs
- Lock-on/lock-off paddle switch for safety and ease-of-use
- Tool-less guard system provides a twist-proof connection and allows the user to adjust the guard positions without removal

Specifications

| | |
|----------------|-----------------------|
| Amps | 10.5 |
| Wheel Diameter | 4-1/2" |
| Switch Type | Locking Paddle Switch |
| Max Watts Out | 1900 |
| No-Load Speed | 11,500 |
| Spindle Thread | 5/8"-11 UNC |
| Spindle Lock | Yes |
| Tool Weight | 5.5 lbs (2.5 kg) |
| Warranty | 1 Year |

Includes

| | |
|------------------------|---------|
| Spanner Wrench | 938332Z |
| Side Handle | 994322 |
| Depressed Center Wheel | 316821 |



G12BYEQ

Brushless durability for extreme applications, non-locking switch, & fast-brake for safety

4-1/2" Brushless 12-Amp Disc Grinder with Brake

AC BRUSHLESS

QUICK BRAKING

PADDLE SWITCH



- Powerful 12 Amp Motor to power through the toughest cutting and grinding applications
- 10,000 RPM No-Load Speed
- Large paddle switch with non-locking switch
- AC Brushless Motor ensures highly efficient performance with minimal maintenance and reduced tool weight and size
- Only 4.6 lbs for ease of use and reduced jobsite fatigue
- Fast Brake for added safety

Specifications

| | |
|----------------|------------|
| Amps | 12 |
| Wheel Diameter | 4-1/2" |
| Spindle Thread | 5/8" x 11 |
| No-Load Speed | 10,000 RPM |
| Weight | 4.6 lbs |

Includes

| | |
|--------------------|---------|
| Filter Set | 37613 |
| Side Handle | 318312 |
| Spanner Wrench | 938332Z |
| 4mm Hex Bar Wrench | 944458 |

Optional

| | |
|----------------------------|--------|
| Vibration Absorbing Handle | 336865 |
| Filter Set | 37613 |



G12VE

Brushless and variable speed for concrete finishing and granite fabrication

4-1/2" 12-Amp Variable Speed Angle Grinder

AC BRUSHLESS



- Ultra efficient low-maintenance AC Brushless motor that permits the use of extra-long extension cords with reduced power loss
- Superior performance when using a generator due to an internal inverter circuit that regulates uneven power supply
- Variable speed for ultimate control and precision
- Soft start and kick-back protection for added safety
- Electronic overload protection stops the motor when too much pressure is applied, extending motor and gear life
- Zero Voltage Restart protection prevents restarting if power is disrupted during operation due to power outages or tool overload
- Recommend Uses: Surface finishing, rust and paint removal, light grinding and concrete finishing

Specifications

| | |
|----------------|------------------|
| Amps | 12.0 |
| Wheel Diameter | 4-1/2" |
| Spindle Thread | 5/8" x 11 |
| No-Load Speed | 2,800-10,000 RPM |
| Weight | 4.2 lbs |

Includes

| | |
|---------------------------------------|---------|
| Wheel Guard | 311745 |
| Side Handle | 956633 |
| Spanner Wrench | 938332Z |
| Abrasive Depressed Center Wheel (1pc) | |



G13SC2 G13SC2Q9

Rat-tail grinder for increased control when surface grinding

5" 11-Amp Angle Grinder



G13SC2Q9
Without Lock-On Switch

- Low-profile head permits access in tight areas
- Dust-resistant construction prolongs armature, switch, and bearing life
- Trigger lock-on for comfortable continuous operation (G13SC2 only)

Specifications

| | |
|----------------|------------|
| Amps | 11.0 |
| Wheel Diameter | 5" |
| Spindle Thread | 5/8" x 11 |
| No-Load Speed | 10,000 RPM |
| Weight | 6.2 lbs |

Includes

| | |
|---------------------------------------|--------|
| Wheel Guard | 370411 |
| Side Handle | 318312 |
| Spanner Wrench | 376127 |
| Abrasive Depressed Center Wheel (1pc) | |



G13SE3

Powerful paddle switch grinder with secure & easily adjustable tool-less guard

5" 10.5-Amp Paddle Switch Disc Grinder with Lock-On



- 10.5 Amps and 11,500 RPM for substantial power and speed to tackle tough jobs
- Large paddle switch with non-locking switch
- Tool-less guard system provides a twist-proof connection and allows the user to adjust the guard positions without removal
- Super Fast Brake for added safety

Specifications

| | |
|----------------|-----------------------|
| Amps | 10.5 |
| Wheel Diameter | 5" |
| Switch Type | Locking Paddle Switch |
| Max Watts Out | 1900 |
| No-Load Speed | 11,500 |
| Spindle Thread | 5/8"-11 UNC |
| Spindle Lock | Yes |
| Tool Weight | 5.5 lbs (2.5 kg) |
| Warranty | 1 Year |

Includes

| | |
|------------------------|---------|
| Spanner Wrench | 938332Z |
| Side Handle | 994322 |
| Depressed Center Wheel | 316821 |



G13BYEQ

Advanced Pro Tool: Brushless durability, non-locking switch, & fast brake for safety

5" 12-Amp Angle Grinder with Brake



- Powerful 12 Amp Motor to power through the toughest cutting and grinding applications
- 10,000 RPM No-Load Speed
- Large paddle switch with lock-off feature for enhanced safety
- AC Brushless Motor ensures highly efficient performance with minimal maintenance and reduced tool weight and size
- Only 4.6 lbs for ease of use and reduced jobsite fatigue

Specifications

| | |
|----------------|------------|
| Amps | 12 |
| Wheel Diameter | 5" |
| Spindle Thread | 1/8" x 11 |
| No-Load Speed | 10,000 RPM |
| Weight | 4.6 lbs |

Includes

| | |
|--------------------|---------|
| Filter Set | 37613 |
| Side Handle | 318312 |
| Spanner Wrench | 938332Z |
| 4mm Hex Bar Wrench | 944458 |

Optional

| | |
|----------------------------|--------|
| Vibration Absorbing Handle | 336865 |
| Filter Set | 37613 |



G18ST

Affordable tool with Split Core technology, providing excellent durability & low weight

7" 15-Amp Angle Grinder



- Powerful 15 Amp motor for tough grinding applications
- Lightweight design to reduce fatigue
- High overload durability for increased life and reliability
- Split core motor technology divides the stator coils in half for sufficient cooling efficiency, providing cooler running temperatures, increased motor durability, and decreased tool weight
- Labyrinth design for better dust and debris deterrence
- Soft grip, slip resistant handle

Specifications

| | |
|----------------|-----------|
| Amps | 15.0 |
| Wheel Diameter | 7" |
| Spindle Thread | 5/8" x 11 |
| No-Load Speed | 8,500 RPM |
| Weight | 10.8 lbs |

Includes

| | |
|-------------|--------|
| Wheel Guard | 338291 |
| Side Handle | 318312 |
| Wrench | 376127 |



G23SCY2

Powerful Pro Tool with Split Core benefits and the comfort of vibration reduction

7" or 9" 15-Amp Low Vibration Angle Grinder with UVP

UVP
USER VIBRATION PROTECTION



Includes both
7" & 9" guards

- UVP (User Vibration Protection) technology greatly reduces vibration for comfortable extended use and fewer vibration related injuries
- Split core motor technology divides the stator coils in half for sufficient cooling efficiency, providing cooler running temperatures, increased motor durability, and decreased tool weight
- Low vibration main handle and side handle produce low full-load vibration, resulting in less user fatigue and greater productivity
- Dust protected switches and sealed armatures protect the internal components from harmful dust and debris

Specifications

| | |
|----------------|-----------|
| Amps | 15.0 |
| Wheel Diameter | 7" & 9" |
| Spindle Thread | 5/8" x 11 |
| No-Load Speed | 6,000 RPM |
| Weight | 13.9 lbs |

Includes

| | |
|----------------|--------|
| Wheel Guard 7" | 375000 |
| Wheel Guard 9" | 374999 |
| Side Handle | 322411 |
| Spanner Wrench | 325491 |



GP3V

All-rounder with Variable Speed

1" 6.7-Amp Variable Speed Die Grinder



- Variable speed dial allows the user to adjust the speed for the application
- Small grip perimeter provides comfortable control and easy maneuverability
- Electronic feedback circuitry provides consistent power to maintain RPM under load
- Capable 6.7 Amp motor powers through even the toughest applications

Specifications

| | |
|----------------|------------------|
| Amps | 6.7 |
| Wheel Diameter | 1" |
| Collet | 1/4" |
| No-Load Speed | 7,000-29,000 RPM |
| Weight | 4.0 lbs |

Includes

| | |
|-----------------------|--------|
| Side Handle | 324548 |
| Spanner Wrench (17mm) | 951211 |
| Spanner Wrench (12mm) | 936553 |



GP18DAQ4

COMING SOON

18V Cordless 2" Die Slide Switch Die Grinder (Bare Tool)

18V

QUICK
BRAKING

VARIABLE
SPEED

BRUSHLESS

SLIDE
SWITCH



- Compatible with all Metabo HPT 18V & 36V MultiVolt™ Lithium Ion slide type batteries for fade-free power (batteries & charger sold separately)
- Superior Performance - Grinds like corded
- Safety features included - Overload Protection, Kickback Protection, Soft start, and Quick Brake
- Variable speed dial with Auto mode allows user to easily adjust to speed best suited for application

Specifications

| | |
|------------------|------------------|
| Volts | 18V |
| No-Load Speed | 7,000-29,000 RPM |
| Wheel Diameter | 2" |
| Weight w Battery | 4.0 lbs |

Includes

| | |
|--------|--|
| Wrench | |
|--------|--|

Optional

| | |
|--------------------------|-----------|
| 18V 3.0Ah Li-Ion Battery | 339782M |
| 18V Charger | UC18YKSLM |



GP2S2

1" 4.7-Amp Die Grinder



- Large slide switch for easy one-hand operation
- Compact and lightweight at 14-3/32" in length and 3.7 lbs
- Internal carbon brushes creating a slim, sleek feel for excellent control
- Ideal for finishing dies, press work, die casting and molding, and grinding of machined parts

Specifications

| | |
|----------------|------------|
| Amps | 4.7 |
| Wheel Diameter | 1" |
| Collet | 1/4" |
| No-Load Speed | 29,000 RPM |
| Weight | 3.7 lbs |

Includes

| | |
|--------------|---------|
| Collet Chuck | 932666Z |
| Wrench | 951211 |



CN16SA

Field proven jobsite nibbler with inexpensive replacement cutter heads

16-Gauge Sheet Metal Nibbler



- Small grip circumference for comfort and maximum control
- 3-position indexing die holder for quick and easy direction changes
- Downward punching minimizes chips on the work piece
- One-touch, quick-off slide switch for enhanced safety

Max Cutting Capacities

| | |
|-----------------|----------------|
| Aluminum Plate | 14 Ga. (3/32") |
| Mild Steel | 16 Ga. (1/16") |
| Stainless Steel | 18 Ga. (3/64") |

Specifications

| | |
|---------------|-----------|
| Amps | 3.5 |
| No-Load Speed | 2,300 SPM |
| Cut Speed | 1-5/8" |
| Weight | 3.5 lbs |

Includes

| | |
|------------------|--------|
| Punch | 998030 |
| Die | 998039 |
| 2.5mm Hex Wrench | 990666 |
| 4mm Hex Wrench | 944458 |



CN18DSLQ4

Good performance cordless nibbler with inexpensive replacement cutter heads

18V Cordless Nibbler (Tool Body Only)

18V



- Compatible with all Metabo HPT 18V & 36V MultiVolt™ batteries
- 180 Degree 3 Stop Die Holder allows effortless straight, right and left cutting
- Soft Grip Handle for improved comfort and less fatigue
- On-Tool Battery Indicator to monitor the status of your battery and reduce downtime
- Lock-on Slide Switch for comfortable continuous use

Max Cutting Capacity

| | |
|-----------------|-------|
| Mild Steel | 16 Ga |
| Stainless Steel | 18 Ga |
| Aluminum | 13 Ga |

Specifications

| | |
|-----------------|-----------|
| Volts | 18 |
| No-Load Speed | 2,500 RPM |
| Min. Cut Radius | 1-9/16" |
| Weight | 3.2 lbs |

Includes

| | |
|----------------------|--------|
| 2.5mm Hex Bar Wrench | 990666 |
| 4mm Hex Bar Wrench | 944458 |

Common Parts (Optional)

| | |
|--------------|--------|
| Punch | 998030 |
| Die Assembly | 998039 |

Optional

| | |
|------------------------|-----------|
| 18V Li-Ion Starter Kit | UC18YSL3S |
|------------------------|-----------|



CE18DSLQ4

Fast cutting shear with inexpensive replacement punch & die assembly

18V Cordless Shear (Tool Body Only)

18V



- Compatible with all Metabo HPT 18V & 36V MultiVolt™ batteries
- 5,300 RPM for faster cutting speed
- 8-Cutting Edge Blades x 2 offer the user easy replacement and extended service life
- Protector Plate built into the tool to protect the operator's hand
- Soft Grip Handle for improved comfort and less fatigue
- On-Tool Battery Indicator to monitor the status of your battery and reduce downtime
- Lock-on Slide Switch for comfortable & continuous use

Max Cutting Capacity

| | |
|-----------------|-------|
| Mild Steel | 16 Ga |
| Stainless Steel | 18 Ga |
| Aluminum | 13 Ga |

Specifications

| | |
|-----------------|-----------|
| Volts | 18 |
| No-Load Speed | 5,300 RPM |
| Min. Cut Radius | 1" |
| Weight | 4.9 lbs |

Includes

| | |
|--------------------|--------|
| 3mm Hex Bar Wrench | 943277 |
| Thickness Gauge | 949128 |

Common Parts (Optional)

| | |
|--------------|--------|
| Punch | 998030 |
| Die Assembly | 998039 |

Optional

| | |
|------------------------|-----------|
| 18V Li-Ion Starter Kit | UC18YSL3S |
|------------------------|-----------|



CV18DBLQ5

Industry's first Auto mode to optimize battery life & minimize tool vibrations

18V Cordless Oscillating Multi-Tool (Bare Tool)

18V

BRUSHLESS



- Compatible with all Metabo HPT 18V/36V Lithium-Ion Slide Type Batteries for fade free power (batteries and charger sold separately)
- Features Brushless Motor Technology for more run time, increased power and extended durability with essentially no maintenance
- Standard mode is changeable from vibration frequency 1-5 (6,000-20,000 OPM) by adjusting the variable speed dial as needed
- Auto-mode lowers vibration, reduces noise and increases battery run time
- Soft start for user safety
- Tool-less blade change

Specifications

| | |
|--------------------------|---------------------|
| Volts | 18 |
| No-Load Speed (Std) | 6,000 - 20,000 OPM |
| No-Load Speed (Auto) | 15,000 - 20,000 OPM |
| Oscillating Angle | 3.2° |
| Battery Type | Lithium Ion Slide |
| Weight (without battery) | 2.9 lbs |

Includes

Bi-Metal Plunge Cut Saw Blade

Optional

| | |
|--|----------|
| 18V Li-Ion Slide Battery (BSL1830C) | 339782M |
| 18V Li-Ion Slide Battery (BSL1815X) | 33353M |
| 14.4V-18V Li-Ion Universal Rapid Charger | UC18YSL3 |

GRINDING DUSTLESS ACCESSORIES



Compatible w/ G12SE3, G12SA4,
G12SE3Q9M, G13SE3

377087M

5" Hinged Dust Collection Shroud
*For Dust Control when Grinding Concrete,
Masonry, & Mortar*

- Easily attaches to a vacuum or dust extractor
- Front nose easily swings away for edge work
- Perfect for cleaning, leveling spots, removing epoxies, urethanes, paint, and other coatings
- Use dust extractor with 125+ CFM



Compatible w/ G12SE3, G12SA4,
G12SE3Q9M, G13SE3

377085M

5" Dust Collection Cutting Guard
*For Dust Control when Cutting Concrete,
Masonry & Mortar*

- Easily attached to a vacuum or dust extractor
- Extraction hood with plunge function and optimized flow channel
- Compact construction form table can be removed without tools for more flexibility
- Cutting depth adjustable without tools
- Use dust extractor with 125+ CFM



Compatible w/ G12SE3, G12SA4,
G12SE3Q9M, G13SE3

377086M

5" Dust Collection Cutting Guard w/ Wheels
*For Dust Control when Cutting Concrete,
Masonry & Mortar*

- Easily attached to a vacuum or dust extractor
- Extraction hood with plunge function and optimized flow channel
- Compact construction form table can be removed without tools for more flexibility
- Cutting depth adjustable without tools
- Guide rollers for easy, precise feed
- Use dust extractor with 125+ CFM



G12SE3
4-1/2" 10.5-Amp Disc Grinder w/ Lock On

WHY CHOOSE METABO HPT? CORDLESS MULTIVOLT SYSTEM?



A COMPREHENSIVE TOOL FAMILY THAT IS CONSTANTLY EXPANDING

- 18V Sub-Compact tools are our smallest and lightest series of tool, engineered for dependability on the professional jobsite.
- 18V Standard tools are a go-to for professional jobsites or DIY projects at home.
- 36V tools are our most powerful line of cordless tools, delivering power and speed with the freedom from cords or compressors!

KEY MULTIVOLT BENEFITS



- 36V MultiVolt Tools outperform corded tools delivering extreme performance
- 36V MultiVolt batteries are backward compatible with Metabo-HPT 18V slide type cordless tools (4.0Ah runtime in 36V provides 8.0Ah runtime in a 18V tool)

KEY AC ADAPTER & CHARGER BENEFITS

- Your choice of cordless or corded in one tool! The best of both worlds
- Use MV battery for convenience, portability or safety
- Use the AC adapter to finish the job when battery is depleted
- Use AC adapter when corded power is available to save on battery time
- Built-in inverter provides additional benefit of using extra long extension cords with the adapter
- Fast charger can fully charge a 18V 3.0Ah battery in 23 min. Included LED and sound feedback when fully charged






36V MULTIVOLT™ BATTERIES

| | Voltage | Stock Code | Number | Type | Amp Hours | Weight |
|--|-------------|------------|----------|--------------|---------------|----------|
|  372121M | 36 V / 18 V | 372121M | BSL36B18 | Li-Ion Slide | 4.0Ah / 8.0Ah | 2.3 lbs |
|  371751M | | 371751M | BSL36A18 | Li-Ion Slide | 2.5Ah / 5.0Ah | 1.54 lbs |



All 36V batteries have a charge indicator




18V MULTIVOLT™ BATTERIES

| | Voltage | Stock Code | Number | Type | Amp Hours | Weight |
|--|---------|------------|----------|----------------------|-----------|----------|
|  333353M | 18 V | 333353M | BSL1815X | Li-Ion Slide | 1.5Ah | 1.1 lbs |
|  377797M | 18V | 377797M | BSL1820M | Li-Ion Slide | 2.0Ah | |
|  339782M | 18 V | 339782M | BSL1830C | Compact Li-Ion Slide | 3.0Ah | 0.97 lbs |

AC ADAPTER

| | Voltage | Stock Code | Number | Type | Amp Hours | Weight |
|--|---------|------------|--------|-------------------------|-----------|---------|
|  ET36A | 36 V | ET36A | — | AC/DC Adapter with Cord | — | 5.5 lbs |

CHARGERS

| | Stock Code | Voltage | Time | Type | Battery |
|--|------------|---------------|--------------|--------------|--|
|  UC18YKSL | UC18YKSL | 18 V | 40 - 150 Min | Li-Ion Slide | 333353M / 339782M |
|  UC18YSL3 | UC18YSL3 | 18 V | 15 - 38 Min | Li-Ion Slide | 339782M / 371751M / 372121M |
|  UC18YTSL | UC18YTSL | 14.4V/18V/36V | 30-120 Min | Li-Ion Slide | 371751M / 339782M / 333353M / 372121M (Charges up to 4 batteries) |

UC18YKSL
Basic charger for 18V battery

UC18YSL3
Fast charger for all 36V and 18V batteries, with USB port to charge phone.
LED & sound feedback for full charge

UC18YTSL

STARTER KITS

UC18YSL3B1

36V/18V MultiVolt™ Lithium Ion Slide Battery & Charger Starter Kit

FEATURES

BACKWARDS COMPATIBLE

- Works with MultiVolt™ tools as well as existing Metabo HPT 18V Li-Ion Slide Tools

MULTIPLEX PROTECTION CIRCUIT

- Prevents over-load, over-charge & over-discharge

RAPID CHARGER

- Charges 4.0Ah MultiVolt™ Battery in approximately 52 minutes for less down time

INCLUDES

- 36V/18V MultiVolt battery (4.0Ah/8.0Ah) (372121M)
- Rapid charger (UC18YSL3M)

UC18YSL3S

18V Lithium Ion Slide Battery & Charger Combo Kit

FEATURES

USB PORT

- Charges smartphones and other mobile devices for added convenience

MULTIPLEX PROTECTION CIRCUIT

- Prevents over-load, over-charge & over-discharge

RAPID CHARGER

- Charges 6.0Ah 18V Lithium-Ion Battery in less than 38 minutes

INCLUDES


- (2) 18V MultiVolt batteries (3.0Ah) (339782M)
- Rapid charger (UC18YSL3M)

2-CUTTER SDS+ ROTARY HAMMER DRILL BITS FOR DH26PF, DH28PFY, DH18DBDL

| SKU | DESCRIPTION |
|---------|--|
| 728870M | 5/32" x 4-1/4" x 2" 2 Cutter SDS Plus Drill Bit |
| 725010M | 5/32" x 4" x 6-1/4" 2 Cutter SDS Plus Drill Bit |
| 725008M | 3/16" x 2" x 4-1/4" 2 Cutter SDS Plus Drill Bit |
| 725011M | 3/16" x 4" x 6-1/4" 2 Cutter SDS Plus Drill Bit |
| 725012M | 3/16" x 6" x 8-1/4" 2 Cutter SDS Plus Drill Bit |
| 725013M | 3/16" x 8" x 10" 2 Cutter SDS Plus Drill Bit |
| 725014M | 3/16" x 10" x 12" 2 Cutter SDS Plus Drill Bit |
| 725015M | 3/16" x 12" x 14" 2 Cutter SDS Plus Drill Bit |
| 728871M | 3/16" x 16" x 14" 2 Cutter SDS Plus Drill Bit |
| 725016M | 7/32" x 4" x 6-1/4" 2 Cutter SDS Plus Drill Bit |
| 725017M | 7/32" x 6" x 8-1/4" 2 Cutter SDS Plus Drill Bit |
| 725018M | 7/32" x 9" x 11" 2 Cutter SDS Plus Drill Bit |
| 725019M | 7/32" x 12" x 14" 2 Cutter SDS Plus Drill Bit |
| 725020M | 7/32" x 14" x 16" 2 Cutter SDS Plus Drill Bit |
| 725133M | 1/4" x 2" x 4-1/4" 2 Cutter SDS Plus Bit |
| 725021M | 1/4" x 4" x 6-1/4" 2 Cutter SDS Plus Drill Bit |
| 725022M | 1/4" x 6" x 8-1/4" 2 Cutter SDS Plus Drill Bit |
| 725023M | 1/4" x 9" x 11" 2 Cutter SDS Plus Drill Bit |
| 725024M | 1/4" x 12" x 14" 2 Cutter SDS Plus Drill Bit |
| 725025M | SDS+1/4" x 14" x 16" 2 Cutter SDS Plus Drill Bit |
| 725026M | SDS+1/4" x 18" x 20" 2 Cutter SDS Plus Drill Bit |
| 725027M | 5/16" x 4" x 6-1/4" 2 Cutter SDS Plus Drill Bit |
| 725028M | 5/16" x 10" x 12" 2 Cutter SDS Plus Drill Bit |
| 725029M | 3/8" x 4" x 6-1/4" 2 Cutter SDS Plus Drill Bit |
| 725030M | 3/8" x 6" x 8-1/4" 2 Cutter SDS Plus Drill Bit |
| 725065M | 3/8" x 8" x 10-1/4" 2 Cutter SDS Plus Drill Bit |
| 725031M | 3/8" x 10" x 12-1/4" 2 Cutter SDS Plus Bit |

| SKU | DESCRIPTION |
|---------|---|
| 725032M | 3/8" x 16" x 18" 2 Cutter SDS Plus Drill Bit |
| 725033M | 3/8" x 22" x 24" 2 Cutter SDS Plus Drill Bit |
| 725034M | 7/16" x 4" x 6-1/4" 2 Cutter SDS Plus Drill Bit |
| 725035M | 7/16" x 10x12-1/4" 2 Cutter SDS Plus Drill Bit |
| 728872M | 7/16" x 18x162 Cutter SDS Plus Drill Bit |
| 725036M | 1/2" x 4" x 6-1/4" 2 Cutter SDS Plus Drill Bit |
| 725037M | 1/2" x 8" x 10-1/4" 2 Cutter SDS Plus Drill Bit |
| 725038M | 1/2" x 10" x 12-1/4" 2 Cutter SDS Plus Bit |
| 725039M | 1/2" x 16" x 18" 2 Cutter SDS Plus Drill Bit |
| 725040M | 1/2" x 22" x 24" 2 Cutter SDS Plus Drill Bit |
| 725041M | 9/16" x 4" x 6-1/4" 2 Cutter SDS Plus Drill Bit |
| 725042M | 9/16" x 8" x 10-1/4" 2 Cutter SDS Plus Drill Bit |
| 728873M | 9/16" x 10" x 12-1/4" 2 Cutter SDS Plus Drill Bit |
| 728874M | 9/16" x 18" x 16" 2 Cutter SDS Plus Drill Bit |
| 725200M | 5/8" x 4" x 6-1/4" 2 Cutter SDS Plus Drill Bit |
| 725043M | 5/8" x 6" x 8" 2 Cutter SDS Plus Drill Bit |
| 725044M | 5/8" x 10" x 12" 2 Cutter SDS Plus Drill Bit |
| 725045M | 5/8" x 16" x 18" 2 Cutter SDS Plus Drill Bit |
| 728875M | 5/8" x 24" x 22" 2 Cutter SDS Plus Drill Bit |
| 725046M | 11/16" x 6" x 8" 2 Cutter SDS Plus Drill Bit |
| 725047M | 11/16" x 10" x 12" 2 Cutter SDS Plus Drill Bit |
| 725049M | 3/4" x 6" x 8" 2 Cutter SDS Plus Drill Bit |
| 728876M | 3/4" x 10" x 8" 2 Cutter SDS Plus Drill Bit |
| 725050M | 3/4" x 10" x 12" 2 Cutter SDS Plus Drill Bit |
| 725051M | 3/4" x 16" x 18" 2 Cutter SDS Plus Drill Bit |
| 728877M | 3/4" x 24" x 22" 2 Cutter SDS Plus Drill Bit |
| 728866M | 13/16" x 16" x 18" SDS Plus Bit |
| 728879M | 7/8" x 10" x 8" 2 Cutter SDS Plus Drill Bit |
| 725053M | 7/8" x 10" x 12-1/2" 2 Cutter SDS Plus Drill Bit |
| 725054M | 7/8" x 16" x 18" 2 Cutter SDS Plus Drill Bit |
| 725055M | 1" x 6" x 8" 2 Cutter SDS Plus Drill Bit |
| 725056M | 1" x 8" x 10" 2 Cutter SDS Plus Drill Bit |
| 725057M | 1" x 10" x 12" 2 Cutter SDS Plus Drill Bit |
| 725058M | 1" x 16" x 18" 2 Cutter SDS Plus Drill Bit |
| 725611M | 2 Cutter SDS Plus Drill Bit 5 Piece Set |

SHANKS

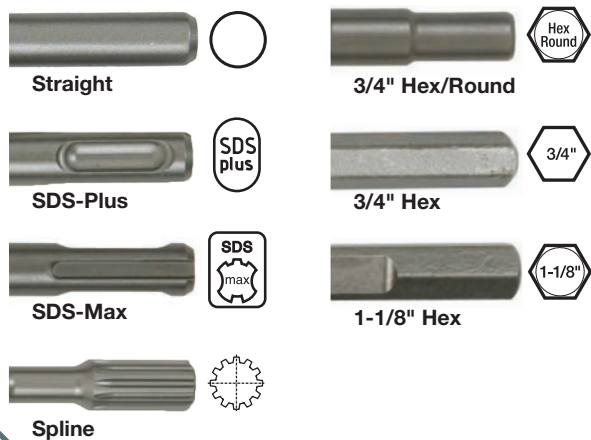

2-CUTTER SDS PLUS DRILL BITS - BULK PACK

| SKU | DESCRIPTION |
|----------|--|
| 725010BM | 5/32" x 4" x 6-1/4" 2 Cutter SDS Plus Drill Bit 25 Piece Bulk Pack |
| 725008BM | 3/16" x 2" x 4-1/4" 2 Cutter SDS Plus Drill Bit 25 Piece Bulk Pack |
| 725011BM | 3/16" x 4" x 6-1/4" 2 Cutter SDS Plus Drill Bit 25 Piece Bulk Pack |
| 725013BM | 3/16" x 10" x 8" 2 Cutter SDS Plus Drill Bit 25 Piece Bulk Pack |
| 725014BM | 3/16" x 10" x 12" 2 Cutter SDS Plus Drill Bit 25 Piece Bulk Pack |
| 725015BM | 3/16" x 12" x 14" 2 Cutter SDS Plus Drill Bit 25 Piece Bulk Pack |
| 728871BM | 3/16" x 14" x 16" 4 Cutter SDS Plus Bit 25 Piece Bulk Pack |
| 725016BM | 7/32" x 4" x 6-1/4" 2 Cutter SDS Plus Drill Bit 25 Piece Bulk Pack |
| 725017BM | 7/32" x 8-1/4" x 6" 2 Cutter SDS Plus Drill Bit 25 Piece Bulk Pack |
| 725018BM | 7/32" x 9" x 11" 2 Cutter SDS Plus Bit 25 Piece Bulk Pack |
| 725020BM | 7/32" x 16" x 14" 2 Cutter SDS Plus Drill Bit 25 Piece Bulk Pack |
| 725133BM | 1/4" x 2" x 4-1/4" 2 Cutter SDS Plus Bit 25 Piece Bulk Pack |
| 725021BM | 1/4" x 4" x 6-1/4" 2 Cutter SDS Plus Drill Bit 25 Piece Bulk Pack |
| 725022BM | 1/4" x 6" x 8-1/4" Bit 25 Piece Bulk Pack |
| 725024BM | 1/4" x 12" x 14" 2 Cutter SDS Plus Drill Bit |
| 725027BM | 5/16" x 4" x 6-1/4" 2 Cutter SDS Plus Drill Bit 25 Piece Bulk Pack |
| 725029BM | 3/8" x 4" x 6-1/4" 2 Cutter SDS Plus Drill Bit 25 Piece Bulk Pack |
| 725030BM | 3/8" x 6" x 8-1/4" x 6" 2 Cutter SDS Plus Drill Bit 25 Piece Bulk Pack |
| 725031BM | 3/8" x 10" x 12-1/4" Bit 25 Piece Bulk Pack |
| 725036BM | 1/2" x 4" x 6-1/4" 2 Cutter SDS Plus Bit 20 Piece Bulk Pack |
| 725038BM | 1/2" x 10" x 12-1/4" 2 Cutter SDS Plus Bit 20 Piece Bulk Pack |
| 725043BM | 5/8" x 8" x 6" 2 Cutter SDS Plus Drill Bit 15 Piece Bulk Pack |

2-CUTTER HEX DRILL BITS & BULK

| SKU | DESCRIPTION |
|------------|---|
| 725681M | 5/32" x 3-1/8" x 6" 2 Cutter SDS Plus Hex Shank Drill Bit |
| 725682M | 5/32" x 4-1/8" x 7" 2 Cutter SDS Plus Hex Shank Drill Bit |
| 725684M | 3/16" x 3-1/8" x 6" 2 Cutter SDS Plus Hex Shank Drill Bit |
| 725685M | 3/16" x 4-1/8" x 7" 2 Cutter SDS Plus Hex Shank Drill Bit |
| 725682B25M | 5/32" x 7" 2 Cutter SDS Plus Hex Shank Drill Bit 25 Piece Bulk Pack |
| 725685B25M | 3/16" x 7" 2 Cutter SDS Plus Hex Shank Drill Bit 25 Piece Bulk Pack |
| 725615M | 2 Cutter SDS Plus Hex Shank 5 Piece Drill Bit Kit |

**4 CUTTER SDS+
DRILL BITS - BULK
PACKS**

| SKU | DESCRIPTION |
|---------|---|
| 728910M | 5/8" x 6" x 8" SDS Plus 4 Cutter Drill Bit |
| 728911M | 5/8" x 8" x 10" SDS Plus 4 Cutter Drill Bit |
| 728912M | 5/8" x 12" x 10" SDS Plus 4 Cutter Drill Bit |
| 728913M | 5/8" x 16" x 18" SDS Plus 4 Cutter Drill Bit |
| 728916M | 11/16" x 10" x 12" SDS Plus 4 Cutter Drill Bit |
| 728917M | 11/16" x 16" x 18" SDS Plus 4 Cutter Drill Bit |
| 728919M | 3/4" x 6" x 8" SDS Plus 4 Cutter Drill Bit |
| 728920M | 3/4" x 6" x 10" SDS Plus 4 Cutter Drill Bit |
| 728921M | 3/4" x 10" x 12" SDS Plus 4 Cutter Drill Bit |
| 728922M | 3/4" x 16" x 18" SDS Plus 4 Cutter Drill Bit |
| 728925M | 27/32" x 8" x 10" SDS Plus 4 Cutter Drill Bit |
| 728928M | 7/8" x 8" x 10" SDS Plus 4 Cutter Drill Bit |
| 728929M | 7/8" x 10" x 12" SDS Plus 4 Cutter Drill Bit |
| 728930M | 7/8" x 16" x 18" SDS Plus 4 Cutter Drill Bit |
| 728933M | 1" x 8" x 10" SDS Plus 4 Cutter Drill Bit |
| 728934M | 1" x 10" x 12" SDS Plus 4 Cutter Drill Bit |
| 728935M | 1" x 16" x 18" SDS Plus 4 Cutter Drill Bit |
| 728937M | 1-7/64" x 16" x 18" SDS Plus 4 Cutter Drill Bit |
| 728939M | 1-1/8" x 8" x 10" SDS Plus 4 Cutter Drill Bit |
| 728940M | 1-1/8" x 16" x 18" SDS Plus 4 Cutter Drill Bit |
| 728942M | 1-3/16" x 8" x 10" SDS Plus 4 Cutter Drill Bit |
| 728943M | 1-3/16" x 16" x 18" SDS Plus 4 Cutter Drill Bit |
| 728945M | 1-1/4" x 16" x 18" SDS Plus 4 Cutter Drill Bit |

**DEMOLITION BITS
& CHISELS
DH40MC, DH40MEY, DH52MEY,
H41MB2, H45MEY, H60MEY**

| SKU | DESCRIPTION |
|---------|---|
| 724963M | 12" Bull Point SDS MAX Demo Bit |
| 724964M | 18" Bull Point SDS MAX Demo Bit |
| 724961M | 1" x 12" Flat Chisel SDS MAX Demo Bit |
| 724962M | 1" x 18" Flat Chisel SDS MAX Demo Bit |
| 724965M | 2" x 12" Flat Chisel SDS MAX Demo Bit |
| 724966M | 3" x 12" Flat Chisel SDS MAX Demo Bit |
| 728820M | 4 1/2" x 15" Asphalt Cutter SDS MAX Demo Bit |
| 724967M | 1 1/8" x 12" Slotting Tool SDS MAX Demo Bit |
| 724958M | 5/8" Ground Rod Driver SDS MAX Demo Bit |
| 728800M | 5" x 5" Tamper Plate 3/4" Hex 21/32" Round Shank Demo Bit |
| 728821M | 12" Taper Plate Shank SDS MAX Demo Bit |
| 724960M | 1 3/4" x 10" Bussing Tool SDS MAX Demo Bit |
| 724969M | 5" x 7" x 16" Clay Spade SDS MAX Demo Bit |
| 728836M | 6" x 25" 2 Piece Floor Scraper SDS MAX Demo Bit |
| 728854M | Floor Scraper Replacement Head for Use With 728815,728836,728842,728822 |
| 728828M | SDSMAX 1-1/8"x12"SEAM TOOL 45D |
| 728829M | 1 1/2" x 12" Flat Chisel SDS MAX Demo Bit |
| 728830M | 2" x 12" Scraping Chisel SDS MAX Shank Demo Bit |

**DEMOLITION BITS
& CHISELS BULK**

| SKU | DESCRIPTION |
|----------|--|
| 724961BM | 1" x 12" Flat Chisel SDS MAX Demo Bit 25 Piece Bulk Pack |
| 724962BM | 1" x 18" Flat Chisel SDS MAX Demo Bit 25 Piece Bulk Pack |
| 724963BM | 12" Bull Point SDS MAX Demo Bit 25 Piece Bulk Pack |
| 724964BM | 18" Bull Point SDS MAX Demo Bit 25 Piece Bulk Pack |



**3-BY-12" SDS MAX
SCALING HAMMER CHISEL
724966M**

**SDS+ DEMOLITION
CHISELS**

| SKU | DESCRIPTION |
|---------|--|
| 725198M | 10" Flat Narrow SDS Plus Chisel |
| 725199M | 3/4" x 10" Flat Narrow SDS Plus Chisel |
| 725202M | 1-1/2" x 10" Flat Wide SDS Plus Chisel |
| 729180M | 10" SDS plus Bull Point Chisel |
| 729183M | 10" SDS Plus Tile Removing Chisel |
| 729185M | 3/4" SDS Plus Stubby Flat Chisel |
| 729186M | SDS Plus Stubby Bull Point Chisel |
| 729187M | SDS Plus 1-1/2 Stubby Flat Chisel |
| 729188M | 3" x 6-1/2" SDS Plus Scraping Chisel |
| 729189M | 10" SDS Plus Viper Flat Chisel |

**SDS MAX SHANK
ROTARY HAMMER
DRILL BITS**

**DH40MC, DH40MEY, DH45MEY,
DH52MEY**

**2-CUTTER
DRILL BITS**

| SKU | DESCRIPTION |
|---------|--|
| 724970M | 1/2" x 7-1/2" x 13" SDS Max 2 Cutter Drill Bit |
| 724971M | 1/2" x 15-1/2" x 21" SDS Max 2 Cutter Drill Bit |
| 728960M | 1/2" x 24" x 29" SDS Max 2 Cutter Drill Bit |
| 728961M | 1/2" x 31" x 36" SDS Max 2 Cutter Drill Bit |
| 724972M | 9/16" x 7-1/2" x 13" SDS Max 2 Cutter Drill Bit |
| 724973M | 9/16" x 15-1/2" x 21" SDS Max 2 Cutter Drill Bit |

4-CUTTER SDS MAX DRILL BITS

| SKU | DESCRIPTION |
|---------|---|
| 724974M | 5/8" x 7 1/2" x 13" SDS Max 4 Cutter Drill Bit |
| 724978M | 3/4" x 8" x 13" SDS Max 4 Cutter Drill Bit |
| 724975M | 5/8" x 15 1/2" x 21" SDS Max 4 Cutter Drill Bit |
| 724976M | 5/8" x 30 1/2" x 36" SDS Max 4 Cutter Drill Bit |
| 724977M | 11/16" x 15.5" x 21" SDS Max 4 Cutter Drill Bit |
| 724978M | 3/4" x 8" x 13" SDS Max 4 Cutter Drill Bit |
| 724979M | 3/4" x 17" x 21" SDS Max 4 Cutter Drill Bit |
| 724980M | 3/4" x 31x 36" SDS Max 4 Cutter Drill Bit |
| 724981M | 13/16" x 17" x 21" SDS Max 4 Cutter Drill Bit |
| 724982M | 27/32" x 17" x 21" SDS Max 4 Cutter Drill Bit |
| 724983M | 7/8" x 8" x 13" SDS Max 4 Cutter Drill Bit |
| 724984M | 7/8" x 17" x 21" SDS Max 4 Cutter Drill Bit |
| 728967M | 7/8" x 36" x 31" SDS Max 4 Cutter Drill Bit |
| 724985M | 1" x 8" x 13" SDS Max 4 Cutter Drill Bit |
| 724986M | 1" x 17" x 21" SDS Max 4 Cutter Drill Bit |
| 724987M | 1" x 31" x 36" SDS Max 4 Cutter Drill Bit |

| SKU | DESCRIPTION |
|---------|--|
| 724989M | 1-1/8" x 12" x 17" SDS Max 4 Cutter Drill Bit |
| 724990M | 1-1/8" x 17" x 21" SDS Max 4 Cutter Drill Bit |
| 728969M | 1-1/8" x 31" x 36" SDS Max 4 Cutter Drill Bit |
| 728970M | 1-3/16" x 18" X 23" SDS Max 4 Cutter Drill Bit |
| 724991M | 1-1/4" x 10" x 15" SDS Max 4 Cutter Drill Bit |
| 724992M | 1-1/4" x 18" x 23" SDS Max 4 Cutter Drill Bit |
| 724993M | 1-1/4" x 31" x 36" SDS Max 4 Cutter Drill Bit |
| 724994M | 1-3/8" x 18" x 23" SDS Max 4 Cutter Drill Bit |
| 728972M | 1-3/8" x 36" X 31" SDS Max 4 Cutter Drill Bit |
| 724995M | 1-7/16" x 18" x23" SDS Max 4 Cutter Drill Bit |
| 728974M | 1-1/2" x 17" x 12" SDS Max 4 Cutter Drill Bit |
| 724996M | 1-1/2" x 18" x 23" SDS Max 4 Cutter Drill Bit |
| 724997M | 1-9/16" x18" x23" SDS Max 4 Cutter Drill Bit |
| 724998M | 1-3/4" x 18" x 23" SDS Max 4 Cutter Drill Bit |
| 724999M | 2" x 18" x 23" SDS Max 4 Cutter Drill Bit |

SPLINE SHANK ROTARY HAMMER

DH38YE2

2 CUTTER DRILL BITS

| SKU | DESCRIPTION |
|---------|---|
| 725059M | 3/8" x 5" x 10" 2 Cutter Spline Shank Drill Bit |
| 729000M | 3/8" x 8" x 13" 2 Cutter Spline Shank Drill Bit |
| 729001M | 3/8" x 11" x 16" 2 Cutter Spline Shank Drill Bit |
| 729003M | 7/16" x 8" x 13" 2 Cutter Spline Shank Drill Bit |
| 725060M | 1/2" x 5" x 10" 2 Cutter Spline Shank Drill Bit |
| 725061M | 1/2" x 8" x 13" 2 Cutter Spline Shank Drill Bit |
| 725062M | 1/2" x 11" x 16" 2 Cutter Spline Shank Drill Bit |
| 725063M | 1/2" x 17" x 22" 2 Cutter Spline Shank Drill Bit |
| 728946M | 1/2" x 24" x 29" 2 Cutter Spline Shank Drill Bit |
| 728947M | 1/2" x 31" x 36" 2 Cutter Spline Shank Drill Bit |
| 725064M | 9/16" x 5" x 10" 2 Cutter Spline Shank Drill Bit |
| 729005M | 9/16" x 8" x 13" 2 Cutter Spline Shank Drill Bit |
| 729006M | 9/16" x 11" x 16" 2 Cutter Spline Shank Drill Bit |
| 729007M | 9/16" x 17" x 22" 2 Cutter Spline Shank Drill Bit |
| 729008M | 9/16" x 24" x 29" 2 Cutter Spline Shank Drill Bit |
| 725066M | 5/8" x 5" x 10" 2 Cutter Spline Shank Drill Bit |
| 729010M | 5/8" x 8" x 13" 2 Cutter Spline Shank Drill Bit |
| 725067M | 5/8" x 11" x 16" 2 Cutter Spline Shank Drill Bit |
| 725068M | 5/8" x 17" x 22" 2 Cutter Spline Shank Drill Bit |
| 728948M | 5/8" x 24" x 29" 2 Cutter Spline Shank bit |
| 728949M | 5/8" x 31" x 36" Bit2 Cutter Spline Shank Drill Bit |
| 729012M | 11/16" x 8" x 13" 2 Cutter Spline Shank Drill Bit |
| 729013M | 11/16" x 11" x 16" 2 Cutter Spline Shank Drill Bit |
| 725069M | 3/4" x 5" x 10" 2 Cutter Spline Shank Drill Bit |
| 729015M | 3/4" x 8" x 13" 2 Cutter Spline Shank Drill Bit |

| SKU | DESCRIPTION |
|---------|--|
| 725070M | 3/4" x 11" x 16" 2 Cutter Spline Shank Drill Bit |
| 725071M | 3/4" x 17" x 22" 2 Cutter Spline Shank Drill Bit |
| 729016M | 3/4" x 24" x 29" 2 Cutter Spline Shank Drill Bit |
| 729017M | 3/4" x 31" x 36" 2 Cutter Spline Shank Drill Bit |
| 729019M | 7/8" x 8" x 13" 2 Cutter Spline Shank Drill Bit |
| 725072M | 7/8" x 11" x 16" 2 Cutter Spline Shank Drill Bit |
| 725073M | 7/8" x 17" x 22" 2 Cutter Spline Shank Drill Bit |
| 729020M | 7/8" x 31" x 36" 2 Cutter Spline Shank Drill Bit |
| 729022M | 1" x 8" x 13" 2 Cutter Spline Shank Drill Bit |
| 725074M | 1" x 11" x 16" 2 Cutter Spline Shank Drill Bit |
| 725075M | 1" x 17" x 22" 2 Cutter Spline Shank Drill Bit |
| 729023M | 1" x 24" x 29" 2 Cutter Spline Shank Drill Bit |
| 729024M | 1" x 31" x 36" 2 Cutter Spline Shank Drill Bit |
| 725076M | 1-1/8" x 11" x 16" 2 Cutter Spline Shank Drill Bit |
| 725077M | 1-1/8" x 17" x 22" 2 Cutter Spline Shank Drill Bit |
| 725078M | 1-1/4" x 11" x 16" 2 Cutter Spline Shank Drill Bit |
| 725079M | 1-1/4" x 17" x 22" 2 Cutter Spline Shank Drill Bit |
| 729026M | 1-1/4" x 24" x 29" 2 Cutter Spline Shank Drill Bit |
| 725080M | 1-3/8" x 11" x 16" 2 Cutter Spline Shank Drill Bit |
| 725081M | 1-3/8" x 17" x 22" 2 Cutter Spline Shank Drill Bit |
| 985376M | 1-1/2" x 11" x 16" 2 Cutter Spline Shank Drill Bit |
| 725082M | 1-1/2" x 17" x 22" 2 Cutter Spline Shank Drill Bit |
| 729028M | 1-3/4" x 17" x 22" 2 Cutter Spline Shank Drill Bit |
| 729029M | 2" x 17" x 22" 2 Cutter Spline Shank Drill Bit |

**DEMOLITION BITS
& CHISELS (SPLINE)**
DH38YE2

| SKU | DESCRIPTION |
|---------|--|
| 985383M | 12" Bull Point 3/4" Hex 21/32" Round Shank Demo Bit |
| 985398M | 18" Bull Point 3/4" Hex 21/32" Round Shank Demo Bit |
| 985381M | 1" x 12" Flat Chisel 3/4" Hex 21/32" Round Shank Demo Bit |
| 985382M | 1" x 18" Flat Chisel 3/4" Hex 21/32" Round Shank Demo Bit |
| 985384M | 1.5" x 12" Flat Chisel 3/4" Hex 21/32" Round Shank Demo Bit |
| 985385M | 2" x 12" Flat Chisel 3/4" Hex 21/32" Round Shank Demo Bit |
| 724890M | 3" x 18" Flat Chisel 3/4" Hex 21/32" Round Shank Demo Bit |
| 728805M | 4.5" x 15" Asphalt Chisel 3/4" Hex 21/32" Round Shank Demo Bit |
| 725132M | 12" Slotting Tool 3/4" Hex 21/32" Round Shank Demo Bit |
| 728802M | 12" Seam Toom 3/4" Hex 21/32" Round Shank Demo Bit |
| 724891M | Ground Rod Driver 3/4" Hex 21/32" Round Shank Demo Bit |
| 728800M | 5" x 5" Tamper Plate 3/4" Hex 21/32" Round Shank Demo Bit |
| 728803M | Tamper Plate Shank 3/4" Hex 21/32" Round Shank Demo Bit |
| 728801M | 10" Bushing Tool 3/4" Hex 21/32" Round Shank Demo Bit |
| 985386M | 5" x &" 16" Clay Spade 3/4" Hex 21/32" Round Shank Demo Bit |
| 728804M | Floor Scraper 3/4" Hex 21/32" Round Shank Demo Bit |
| 728854M | Floor Scraper Replacement Head for Use With 728815,728836,728842,728822 |

**DEMOLITION BITS
& CHISELS - BULK**

| SKU | DESCRIPTION |
|----------|--|
| 985383BM | 12" Bull Point 3/4" Hex 21/32" Round Shank Demo Bit 25 Piece Bulk Pack |
| 985398BM | 18" Bull Point 3/4" Hex 21/32" Round Shank Demo Bit 25 Piece Bulk Pack |
| 985381BM | 1" x 12" Flat Chisel 3/4" Hex 21/32" Round Shank Demo Bit 25 Piece Bulk Pack |
| 985382BM | 1" x 18" Flat Chisel 3/4" Hex 21/32" Round Shank Demo Bit 25 Piece Bulk Pack |
| 724890BM | 3" x 18" Flat Chisel 3/4" Hex 21/32" Round Shank Demo Bit 25 Piece Bulk Pack |



7/8" X 31" X 36"
SDS MAX 4 CUTTER DRILL BIT
728967M



5" X 22" 1 PIECE
SPLINE SHANK CORE BIT
725775M

**1 PIECE SDS MAX
HOLLOW CORE BITS**

| SKU | DESCRIPTION |
|---------|--|
| 724920M | 1-1/2" x 11-3/8" 1 Piece Hollow SDS Max Core Bit |
| 724921M | 1-1/2" x 22" 1 Piece Hollow SDS Max Core Bit |
| 724922M | 1-3/4" x 11-3/8" 1 Piece Hollow SDS Max Core Bit |
| 724923M | 1-3/4" x 22" 1 Piece Hollow SDS Max Core Bit |
| 724924M | 2" x 11-3/8" 1 Piece Hollow SDS Max Core Bit |
| 724925M | 2" x 22" 1 Piece Hollow SDS Max Core Bit |
| 724926M | 2-5/8" x 11-3/8" 1 Piece Hollow SDS Max Core Bit |
| 724927M | 2-5/8" x 22" 1 Piece Hollow SDS Max Core Bit |
| 724928M | 3-1/8" x 11-3/8" 1 Piece Hollow SDS Max Core Bit |
| 724929M | 3-1/8" x 22" 1 Piece Hollow SDS Max Core Bit |
| 724930M | 3-1/2" x 11-3/8" 1 Piece Hollow SDS Max Core Bit |
| 724931M | 3-1/2" x 22" 1 Piece Hollow SDS Max Core Bit |
| 724932M | 4" x 11-3/8" 1 Piece Hollow SDS Max Core Bit |
| 724933M | 4" x 22" 1 Piece Hollow SDS Max Core Bit |
| 724934M | 5" x 11-3/8" 1 Piece Hollow SDS Max Core Bit |
| 724937M | 6" x 22" 1 Piece Hollow SDS Max Core Bit |

1 PIECE HOLLOW SPLINE SHANK CORE BITS

| SKU | DESCRIPTION |
|---------|---|
| 725760M | 1-1/2" x 12" 1 Piece Hollow Spline Shank Core Bit |
| 725761M | 1-1/2" x 22" 1 Piece Hollow Spline Shank Core Bit |
| 725762M | 1-3/4" x 11-3/8" 1 Piece Hollow Spline Shank Core Bit |
| 725763M | 1-3/4" x 22" 1 Piece Hollow Spline Shank Core Bit |
| 725765M | 2" x 22" 1 Piece Hollow Spline Shank Core Bit |
| 725766M | 2-5/8" x 11-3/8" 1 Piece Hollow Spline Shank Core Bit |
| 725767M | 2-5/8" x 22" 1 Piece Hollow Spline Shank Core Bit |
| 725768M | 3-1/8" x 11-3/8" 1 Piece Hollow Spline Shank Core Bit |
| 725769M | 3-1/8" x 22" 1 Piece Hollow Spline Shank Core Bit |
| 725770M | 3-1/2" x 11-3/8" 1 Piece Hollow Spline Shank Core Bit |
| 725771M | 3-1/2" x 22" 1 Piece Hollow Spline Shank Core Bit |
| 725772M | 4" x 11-3/8" 1 Piece Hollow Spline Shank Core Bit |
| 725773M | 4" x 22" 1 Piece Hollow Spline Shank Core Bit |
| 725774M | 5" x 11-3/8" 1 Piece Hollow Spline Shank Core Bit |
| 725775M | 5" x 22" 1 Piece Hollow Spline Shank Core Bit |
| 725777M | 6" x 22" 1 Piece Hollow Spline Shank Core Bit |



20" BULL POINT 1-1/8" HEX SHANK DEMO BIT
985230BM

1-1/8" HEX SHANK DEMOLITION BITS H65SD3, H90SG

| SKU | DESCRIPTION |
|---------|--|
| 985230M | 20" Bull Point 1 1/8" Hex Shank Demo Bit |
| 985231M | 1 3/8" x 20" Cold Chisel 1 1/8" Hex Shank Demo Bit |
| 985232M | 3" x 20" Scaling Chisel 1 1/8" Hex Shank Demo Bit |
| 725130M | 5" x 17" Asphalt Cutter 1 1/8" Hex Shank Demo Bit |
| 725131M | 1" Ground Rod Driver 1 1/8" Hex Shank Demo Bit |
| 985233M | 5 1/2" x 20" Clay Spade 1 1/8" Hex Shank Demo Bit |
| 728860M | 8" x 8" Square Tamper Plate 1 1/8" Hex Shank Demo Bit |
| 944966M | 1-1/8HEXRND TAMPER PLATE SHANK |
| 207001M | 6" x 6" Square Tamper Plate 1 1/8" Hex Shank Demo Bit |
| 207002M | 15" Tamper Plate Shank Adapter 1 1/8" Hex Shank Demo Bit |
| 957154M | 1-1/8HEXRND 3"x16" CLAY SPADE |
| 728815M | 2 Piece Floor Scraper 3/4" Hex 21/32" Round Shank Demo Bit |

DEMOLITIONS BULK PACK

| SKU | DESCRIPTION |
|----------|--|
| 985230BM | 20" Bull Point 1 1/8" Hex Shank Demo Bit 8 Piece Bulk Pack |
| 985231BM | 1 3/8" x 20" Cold Chisel 1 1/8" Hex Shank Demo Bit 8 Piece Bulk Pack |

METABO HPT FACTORY SERVICE REPAIRS



Sending your tool for repair has never been so easy! Select your tool and process your order online, use the supplied shipping label to expedite your tool to us. We will take care of the rest! Your tool will be sent back to you in no time. In addition to fixing the reported problem, we will proceed to a full repair and maintenance of your tool.

SELECT TERMS & CONDITIONS APPLY

THIS SERVICE OFFERS YOU THE FOLLOWING BENEFITS:

- Repairs will be completed in 5 days or less (Upon Receipt)
- Free FedEx labels to and from service center for warranty repairs on select models
- Package your tool and drop off at any FedEx shipping locations nationwide
- Repairs will be made by factory trained technicians with genuine Metabo HPT parts
- Metabo HPT will ship your repair back to the address you have provided

WWW.METABOHPTFACTORYSERVICE.COM

30-DAY SATISFACTION GUARANTEE

All Metabo HPT Power tools (hereinafter referred to as the "Product/s") are inspected before they leave the factories to ensure the highest quality for customers. If you are not satisfied with any Metabo HPT power tool within 30 days of purchase, please return the Product, complete with retail packaging and components, with receipt to the original place of purchase for a refund or replacement. See "Limited Warranty" below for accessories & parts and further warranty information. This guarantee excludes all Outdoor Power Equipment, including 2-cycle & 4-cycle gas powered equipment and battery- and electric-powered Outdoor Power Equipment.

PROFESSIONAL 5-YEAR LIMITED WARRANTY

Products are warranted to the original purchaser to be free from defect in materials and workmanship for a period of five (5) years from the original purchase date. Some Products are excepted from this policy and have different limited warranty terms; see Exceptions below.

EXCEPTIONS INCLUDE:

LIFETIME LITHIUM ION TOOL WARRANTY

The Product categories listed below are warranted to the original purchaser to be free from defect in materials and workmanship for a Lifetime from the original purchase date in non-industrial use; wear and tear is not covered. Lifetime is defined as the serviceable life of the Product. "Serviceable life of the Product" is defined as the period during which the supply of all components is available.

Band Saws • Circular Saws • Driver Drills • Hammer Drills • Impact Drivers • Impact Wrenches • Jig Saws • Nailers • Nibblers • Oscillating Tools • Planers • Reciprocating Saws • Right Angle Drills • Rotary Cut-Out Tools • Routers • Screwdrivers • Shears • Staplers • Workshop Blower

TWO YEAR WARRANTY

The product categories listed below are warranted to the original purchaser to be free from defect in materials and workmanship for a period of two (2) years from the original purchase date.

• Lithium Ion Batteries • Table Saws

ONE YEAR WARRANTY

The product categories listed below are warranted to the original purchaser to be free from defect in materials and workmanship for a period of one (1) year from the original purchase date.

• Air Compressors • Battery Chargers • Chop Saws • Collated Screw Fastening Systems • Corded Hammer Drills • Demolition Hammers • Grinders • Heat Guns • Masonry Cutters • Portable Cut-Off Saws • Radios • Reserve Air Tanks • Rotary Hammers • Vacuums

90-DAY WARRANTY

The product categories listed below are warranted to the original purchaser to be free from defect in materials and workmanship for a period of ninety (90) days from the original purchase date.

• Blade Flanges • Bumpers • Carbon Brushes • Cords • Drive Belts • Driver Blades • Gaskets • O-Rings • Pistons • Pulleys • Seals • Tool Free Handles

30-DAY WARRANTY

The product category listed below is warranted to the original purchaser to be free from defect in materials and workmanship for a period of thirty (30) days from the original purchase date.

• Accessory Products (Excludes Fasteners)

Warranty coverage is conditioned upon the purchaser furnishing Metabo HPT or its Authorized Service Center with adequate written proof of the original purchase date.

OWNER'S REGISTRATION CARD

The return of the Owner's Registration Card (whether by mail or online) by the original purchaser within (10) days after the original purchase date is not a condition precedent to coverage under this warranty.

WARRANTY COVERAGE

This Product is warranted by Koki Holdings America Ltd. against defective materials or workmanship. This warranty gives you specific legal rights, and you may also have other rights which vary from State to State.

This warranty is void if: the defects in materials or workmanship or damages result from repairs or alterations which have been made or attempted by others or the unauthorized use of nonconforming parts; the damage is due to normal wear and tear, the damage is due to abuse (including but not limited to overloading of the Product beyond capacity), failure to operate the unit in the manner specified by the owner's manual, improper or lack of maintenance, improper set up or altered Products, neglect, accidents, acts of nature, improper adjustments, or if the damage is due to use of the Product after partial failure or use with improper accessories.

Except as noted above, this warranty does not cover repair or replacement of wear and tear or maintenance items, including but not limited to: brushes, piston drivers, bumpers, and springs. Regular maintenance, adjustments to the alignment, and wear items are not the responsibility of Koki Holdings America and are not covered under this warranty.

WARRANTY PERFORMANCE

DURING THE ABOVE WARRANTY PERIOD, SHOULD YOUR METABO HPT PRODUCT EXHIBIT A DEFECT IN MATERIALS OR WORKMANSHIP, SUCH DEFECT WILL BE REPAIRED WHEN THE COMPLETE METABO HPT PRODUCT AND PROOF OF PURCHASE IS RETURNED, POSTAGE PREPAID AND INSURED, TO A METABO HPT AUTHORIZED SERVICE CENTER. OTHER THAN THE POSTAGE AND INSURANCE REQUIREMENT, NO CHARGE WILL BE MADE FOR REPAIRS COVERED BY THIS WARRANTY.

ONLINE PURCHASES

In the interest of maintaining the quality of Products sold we sell, and to protect consumers from counterfeit, improperly modified, or illegally acquired Products, this warranty will be void if the Product was purchased online and was not purchased from an "Authorized Online Retailer".

Warranty coverage for online purchases is conditioned upon the original purchaser furnishing Koki Holdings America or our Authorized Service Center with adequate written proof of the original purchase date as well as the entity or service that the Product was purchased from. Should the purchaser be unable to provide adequate proof of purchase date and/or source of purchase, fulfillment of warranty coverage will be left to our sole discretion. Please consult the Metabo HPT website for a full list of Authorized Online Retailers:

USA: www.metabo-hpt.com, 1-800-829-4752

CANADA: www.metabo-hpt.com/ca, 1-800-970-2299

WARRANTY DISCLAIMERS

THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESS WARRANTIES, WRITTEN OR ORAL. TO THE EXTENT PERMITTED BY LAW, KOKI HOLDINGS AMERICA DISCLAIMS ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR USE OR PURPOSE; TO THE EXTENT SUCH DISCLAIMER IS NOT PERMITTED BY LAW, SUCH IMPLIED WARRANTIES ARE LIMITED TO THE DURATION OF THE APPLICABLE EXPRESS WARRANTY AS DESCRIBED ABOVE. IN NO EVENT SHALL KOKI HOLDINGS AMERICA BE LIABLE FOR ANY INCIDENTAL, SPECIAL, CONSEQUENTIAL OR PUNITIVE DAMAGES, OR FOR ANY COSTS, ATTORNEY FEES, EXPENSES, LOSSES OR DELAYS ALLEGED TO BE AS A CONSEQUENCE OF ANY DAMAGE TO, FAILURE OF, OR DEFECT IN ANY PRODUCT INCLUDING, BUT NOT LIMITED TO, ANY CLAIMS FOR LOSS OF PROFITS.

LIMITATIONS ON WARRANTY DISCLAIMERS

Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Please consult Metabo HPT's website for USA: www.metabo-hpt.com 1-800-829-4752 and for CANADA: www.metabo-hpt.ca 1-800-970-2299 to locate your nearest service facility for warranty and non-warranty service on a Metabo HPT Product.

metabo **HPT**

**Follow. Tweet. Subscribe.
Review. Watch.**

Connect with Metabo HPT



@metabohpt



@MetaboHPT



@metabohptusa



@MetaboHPT



@metabo-hpt



Read + Write Tool Reviews
www.metabo-hpt.com

Date of Publication © Nov. 2022

Please visit our website at
www.metabo-hpt.com

For the dealer nearest you, call
1-800-546-1666

For more information, call or email
1-800-706-7337
reachcustomerservice@metabo-hpt.com

For technical service, call
1-866-775-9429

Koki Holdings America Ltd.
1111 Broadway Avenue
Braselton, GA, 30517, USA

Koki Holdings Co., Ltd.
Shinagawa Intercity Tower A, 20th Floor
15-1, Konan 2-chome
Minato-ku, Tokyo 108-6020, Japan



7 54005 09017 6

EP9017